
XRAY TUNING PARTS - ASSEMBLY DETAILS


(NOT INCLUDED)

OPTION #320905-C
XB2 5G GEAR BOX CONVERSION SET

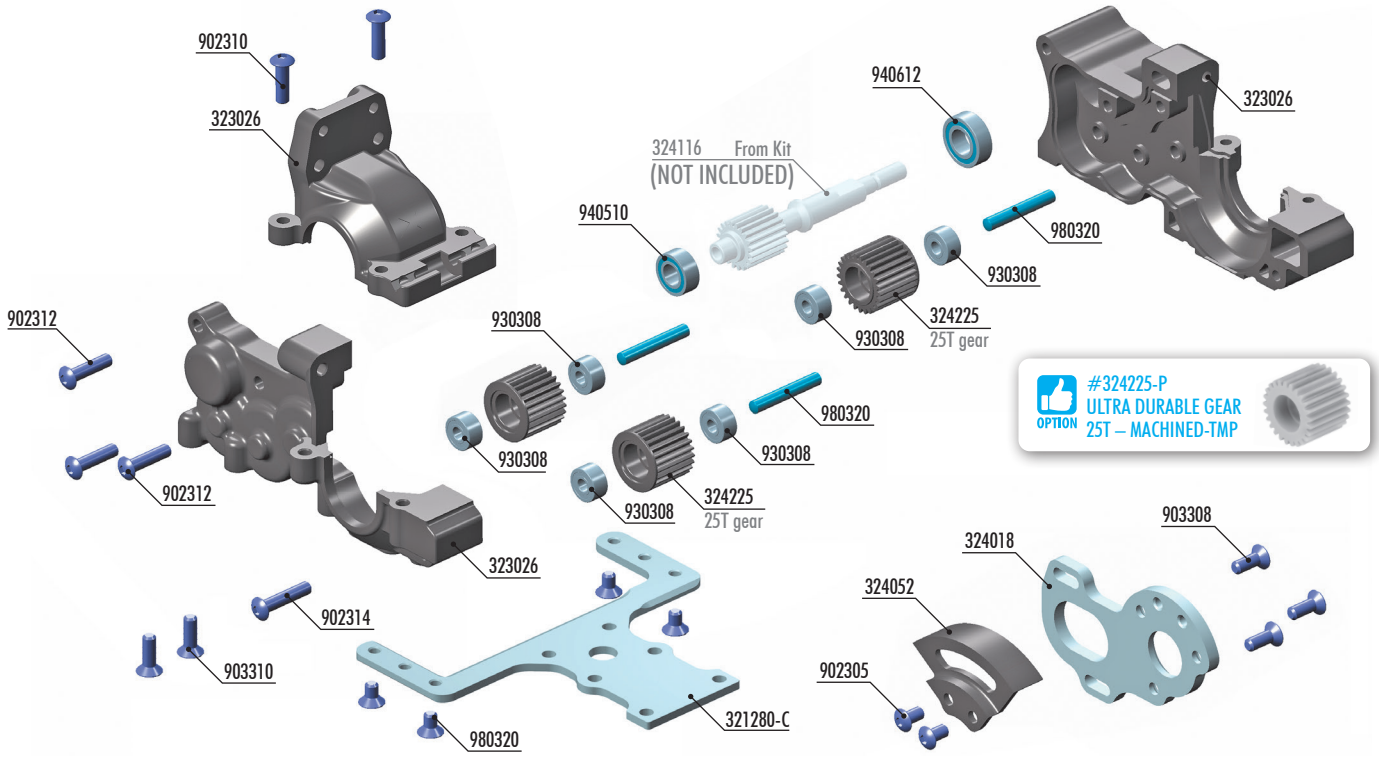


6x 930308
BB 3x8x4


3x

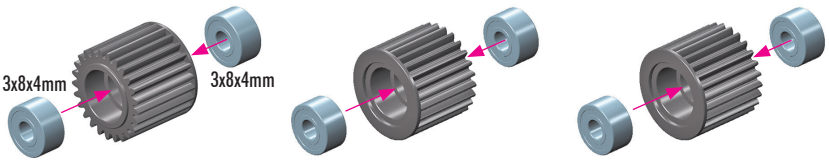


1x 940612
BB 6x12x4

1x 980320
P 3x20

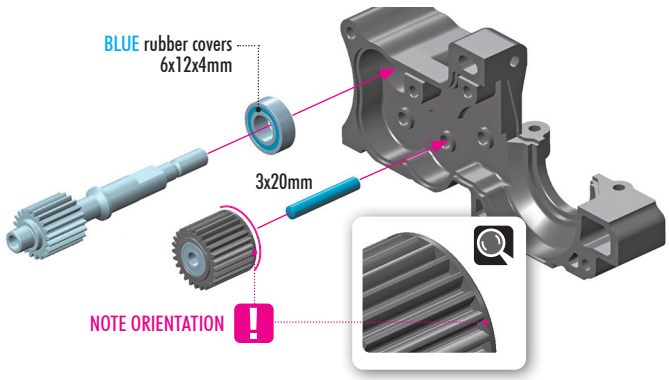

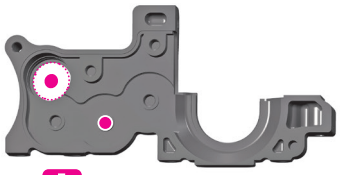


OPTION #323026-G
COMPOSITE 5G GEAR BOX - GRAPHITE - SET

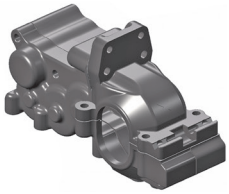

1x 940510
BB 5x10x4

2x 980320
P 3x20

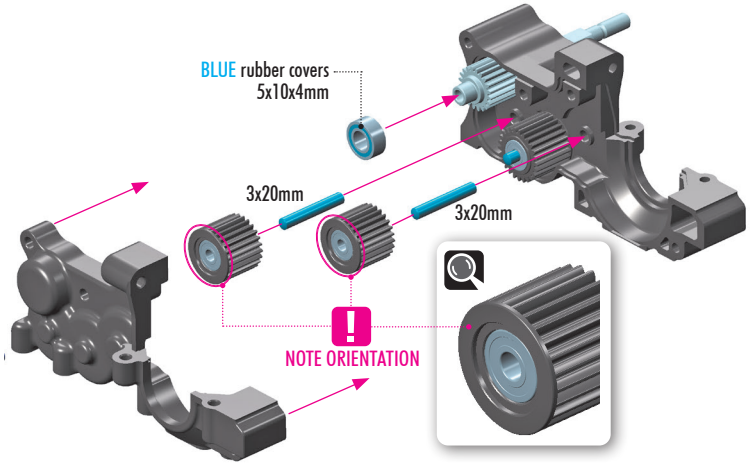




XRAY TUNING PARTS - ASSEMBLY DETAILS

(NOT INCLUDED)

3x 902312 SH M3x12

1x 902314 SH M3x14

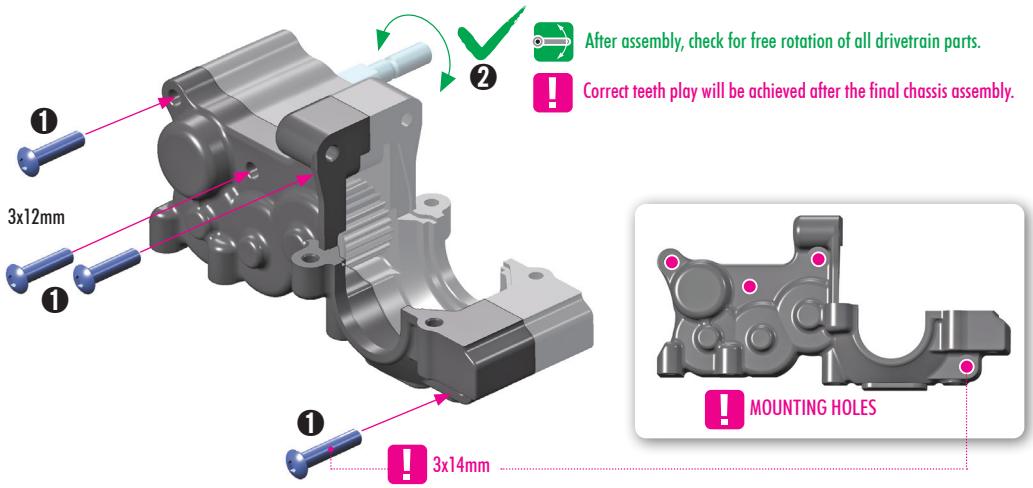

Next follow the 5G Gear Box assembly instructions following these pages and steps:

Page 21 / step 1 | Page 22 / step 1 + step 2 + step 3 | Page 24 / step 1 | Page 25 / step 1 + step 2

Some of the screws must be used from the kit.

4x 902310 SH M3x10

4x 903308 SFH M3x8

4x 903310 SFH M3x10

