


Notes.
This Conversion cannot be used with an undertray.
The Bodyshell will require a new mounting hole to be drilled.
Neatly remove the shaded area's as shown.


Schumacher racing-cars.com

U3898 Cougar Dirt Spec Chassis Conversion

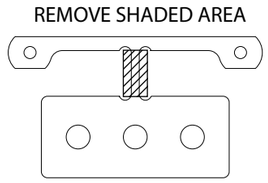


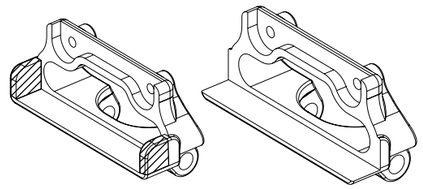


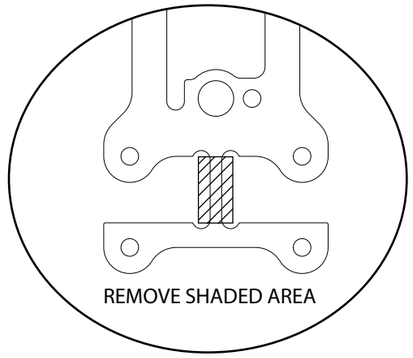

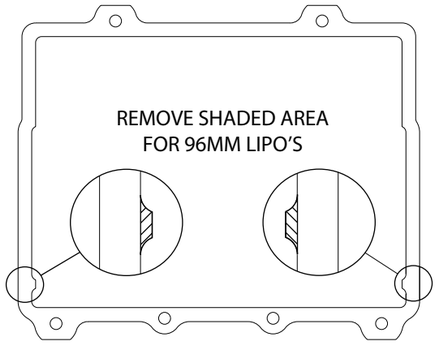


Saddle Pack lipo's & 96mm lipo's

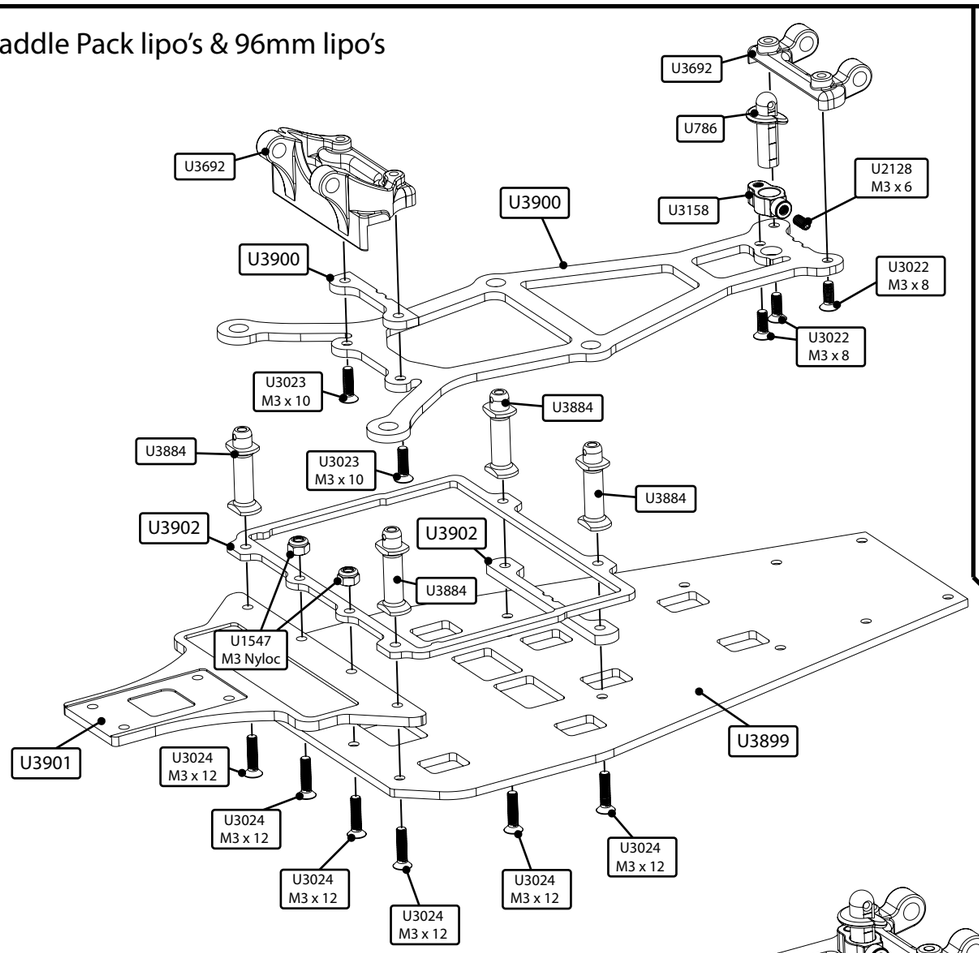

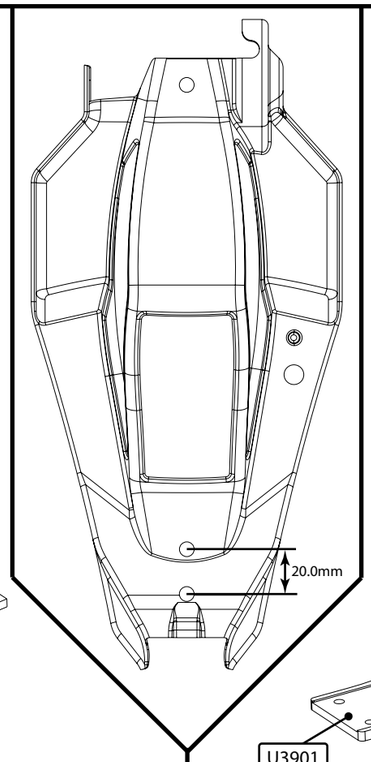

Stick Pack Lipo's

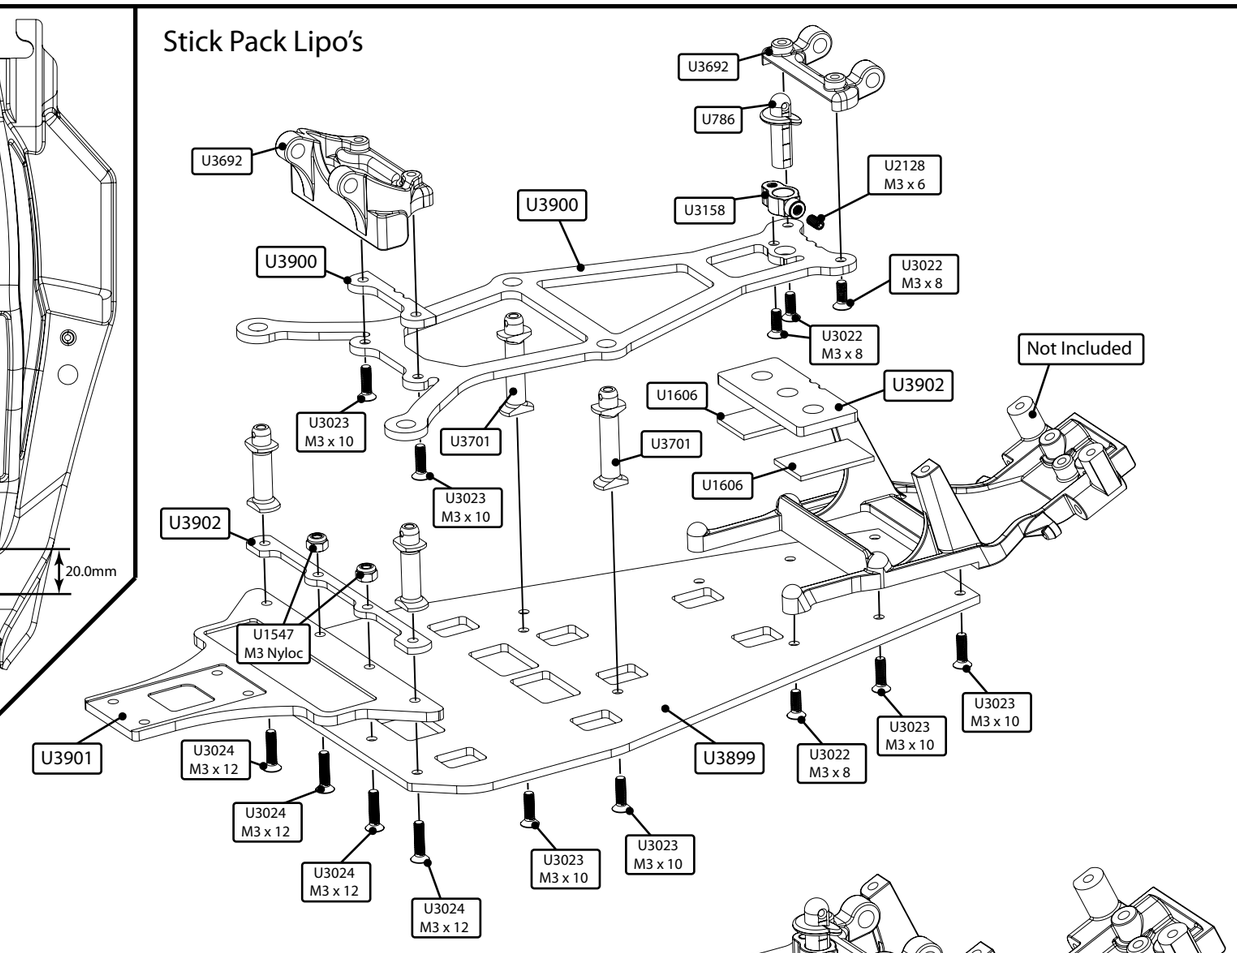

S1240