
Schumacher


VISCODRIVE CAT 2000 INSTALLATION KIT

REFER TO SEPERATE INSTRUCTION SHEET FOR VISCODRIVE ASSEMBLY


1

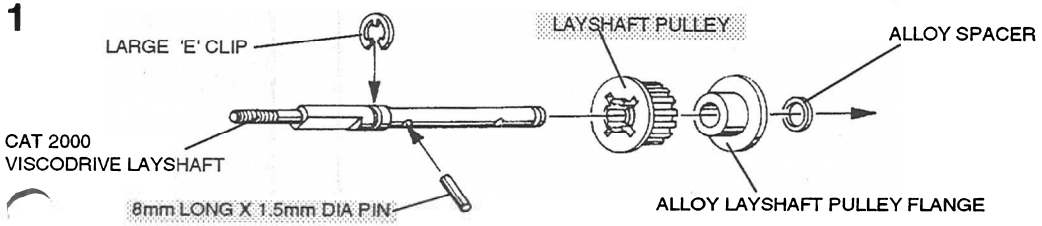


2

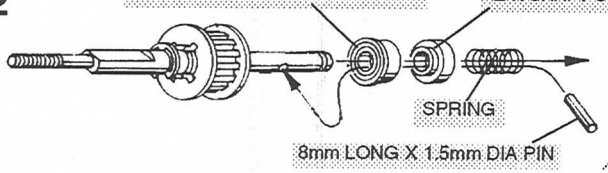

3

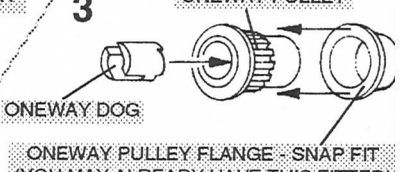

4

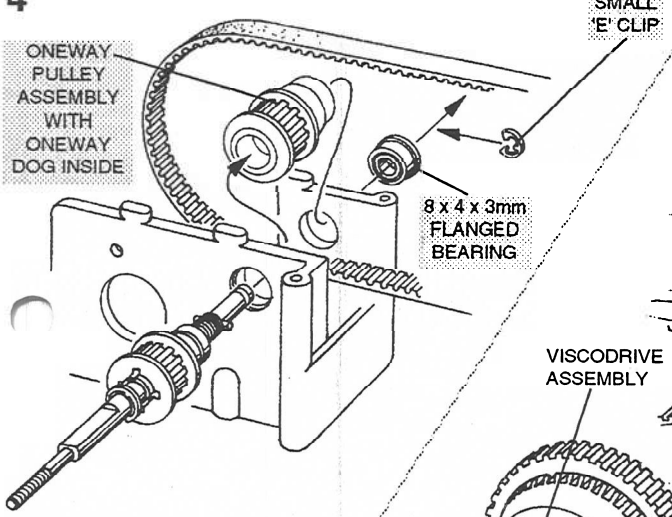


SHADED PARTS ARE FROM YOUR ORIGINAL CAT 2000 KIT

5

YOUR VISCODRIVE IS SET AT TOOTH SETTING = 10.
IT NEEDS TO BE READJUSTED TO TOOTH SETTING = 7

THIS IS A GOOD INITIAL STARTING POINT FOR A 4WD CAR

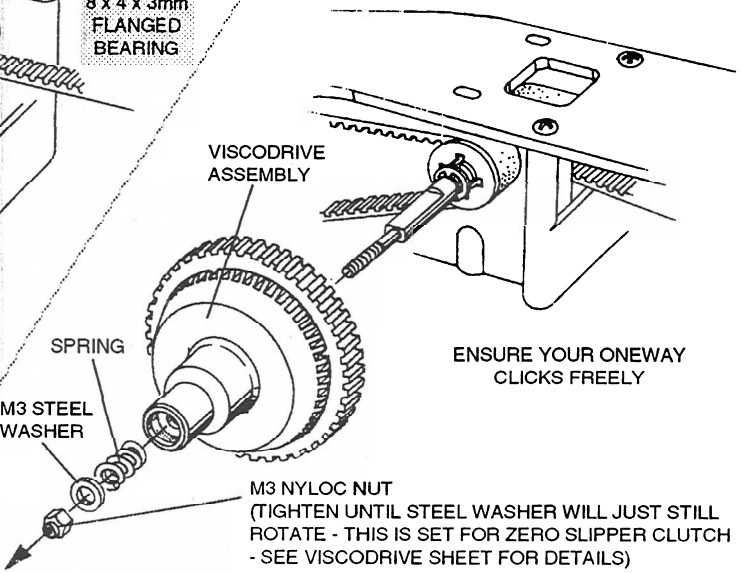

ENSURE YOUR ONEWAY CLICKS FREELY

S781