Schumacher

BUMP STEER KIT

CAT 2000 THE NEXT GENERATION

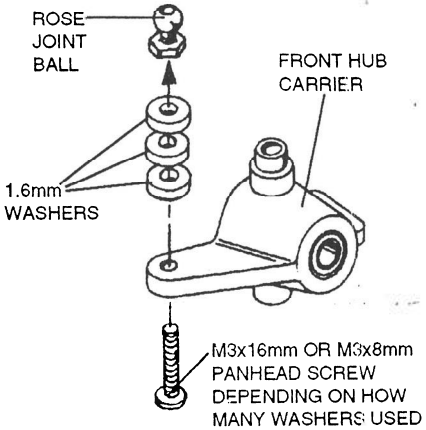


TABLE IS BASED ON FRONT RAKE ANGLE OF 15° (STANDARD KIT SETTING).
WHEN DIFFERENT FRONT CASTOR INSERTS ARE USED WITH DIFFERENT RAKE ANGLES THE NUMBER OF WASHERS NEEDED MAY ALTER. USE THE TABLE AS A STARTING POINT.

HOLE ON SHOCK BRACKET	BUMP STEER WASHERS
A	0
B	0
C	0
D	3
E	3

