
NOTICE

TH =Apply Thread Lock Adhesive
=使用螺絲防鬆膠

CA =Apply CA Glue
=使用瞬間接著劑


GE =Apply Grease
=使用潤滑油

BAG 01

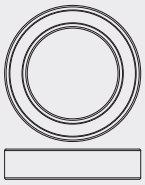


R806020
12x18x4mm Ball Bearing (4)

1:1 Scale

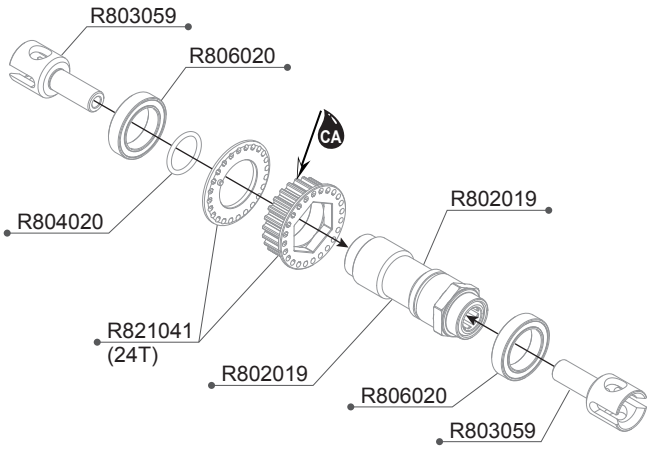

Finished View / 完成圖

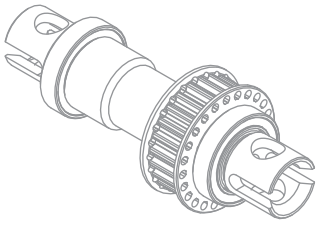

R802019	Front One Way	R806020	12x18x4 Ball Bearing (4)
R803059	Front One Way Cup (2)	R821041	R8.3 Front Pulley Set
R804020	O'Ring 10x1.5 (6)		

BAG 01




R105203
3x6mm Flat Screw (10)




R805052
4x8mm Set Screw (10)

1:1 Scale

Right Side Bulkhead
（右邊側板）

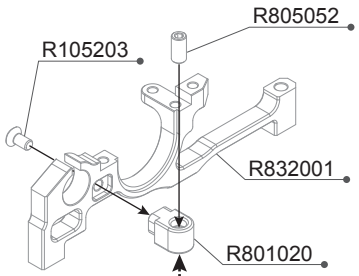

Left Side Bulkhead
（左邊側板）

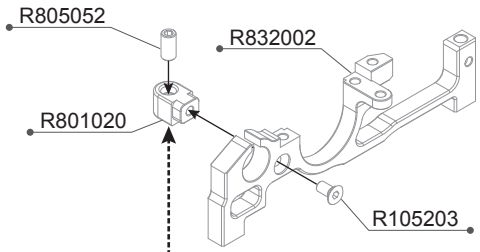

Option Parts (Not Included) / 改裝品(未附於套件內)

R813005 Downstop Adjust Screw (4)



R105203	3x6mm Flat Screw (10)	R832001	R8.3 Front Low Bulkhead-R
R801020	Downstop Nut Holder (2)	R832002	R8.3 Front Low Bulkhead-L
R805052	4x8mm Set Screw (10)		




R105104
3x6 Round Screw (10)




R805201
4x8mm Flat Screw (10)

1:1 Scale

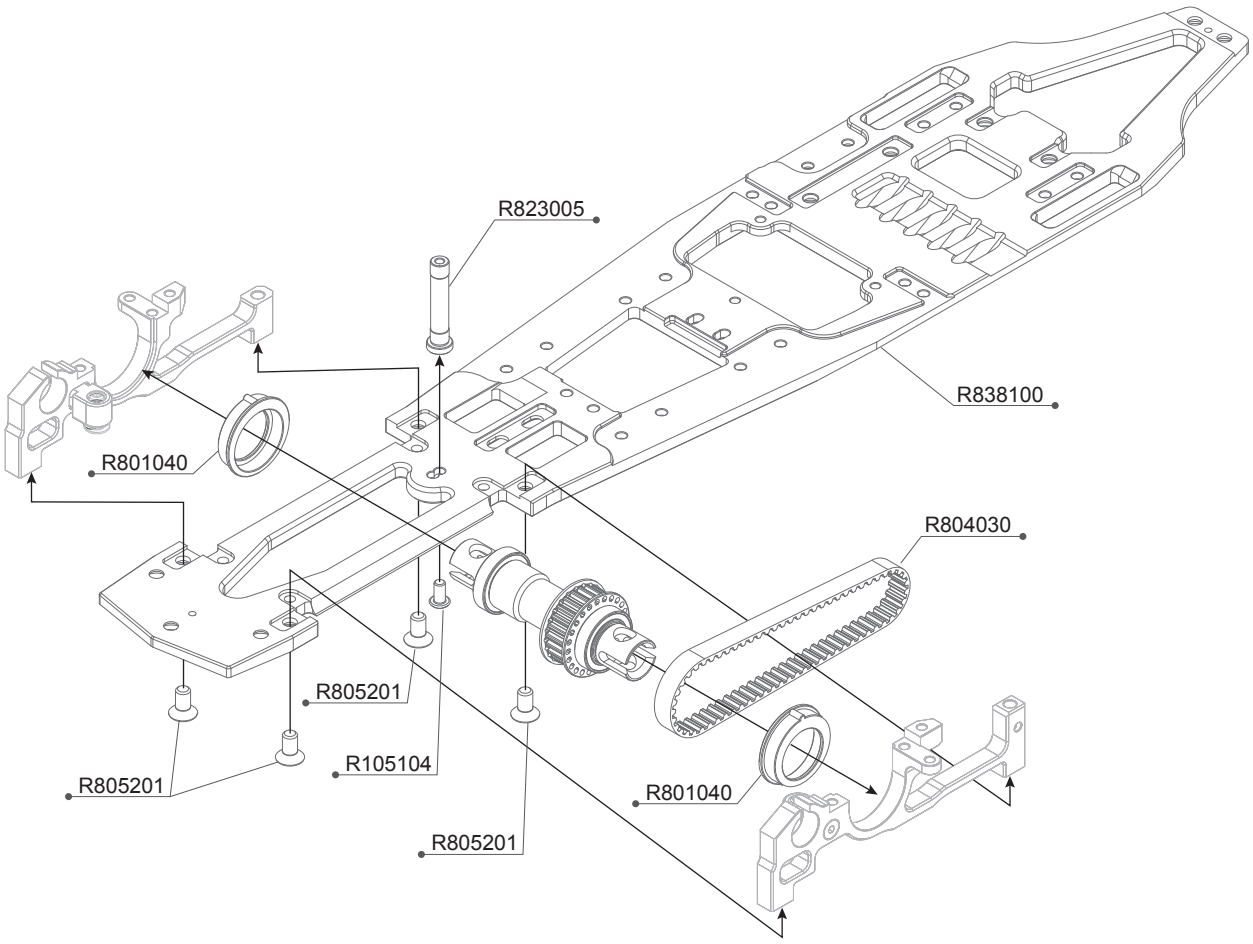

R105104	3x6 Round Screw (10)	R805201	4x8mm Flat Screw (10)
R801040	Bearing Bushing -Solid Axle (2)	R823005	R8.2 LCG Sever Saver Post
R804030	Front Belt 201	R838100	R8.3E Carbon Chassis


BAG 01

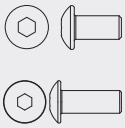

R105104
3x6 Round Screw (10)

R105105
3x8 Round Screw (10)

1:1 Scale

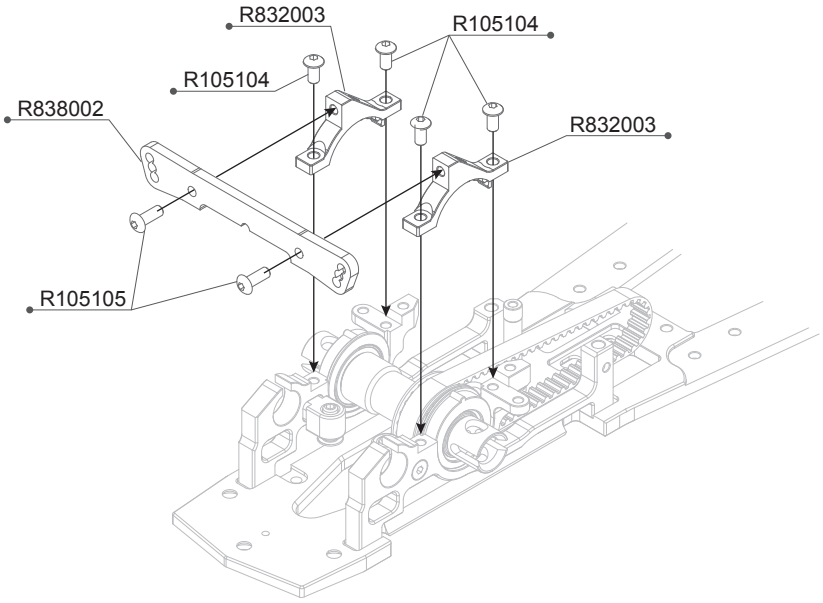


R105104	3x6 Round Screw (10)	R832003	R8.3 Front Upper Bulkhead
R105105	3x8 Round Screw (10)	R838002	R8.3 Front Shock Tower

BAG 01

NOTICE

Please set the front belt tension as below in the beginning, to loosen the belt please turn left, to tighten the belt please turn right.
前皮帶的張力請依下方圖示設定於起始的位置，如需將皮帶張力調鬆時請依圖示向左調整，如需調緊時請向右調整。

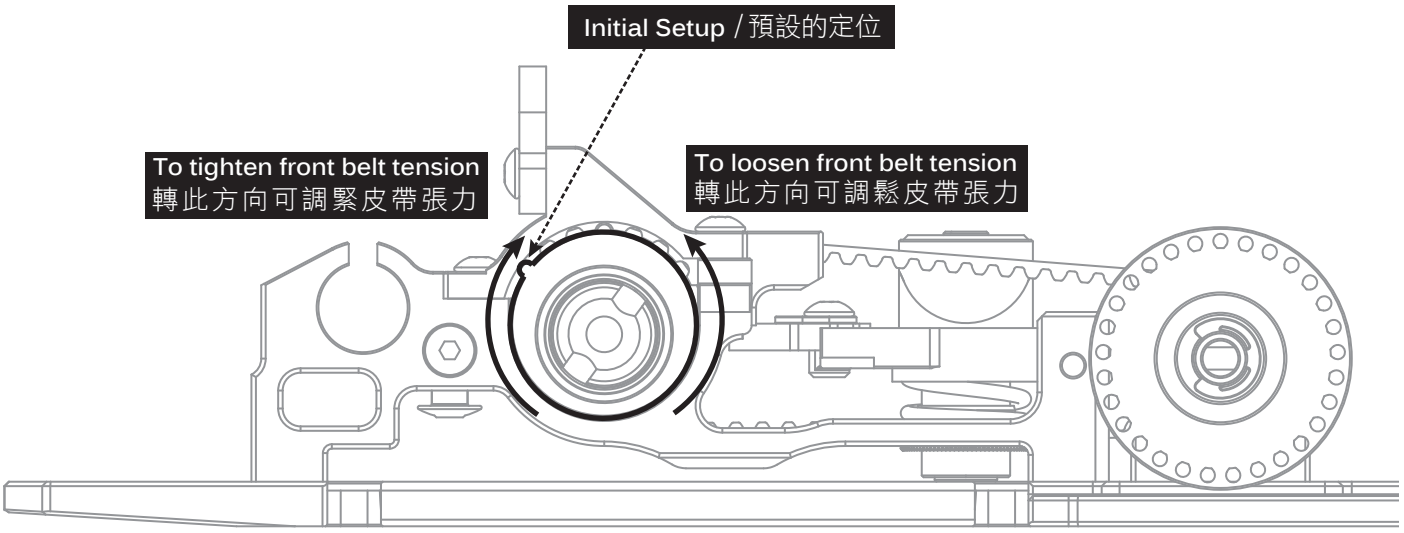



R105104 3x6 Round Screw (10)

R105106 3x10 Round Screw (10)

R106010 5x8x2.5mm Ball Bearing (4)

1:1 Scale

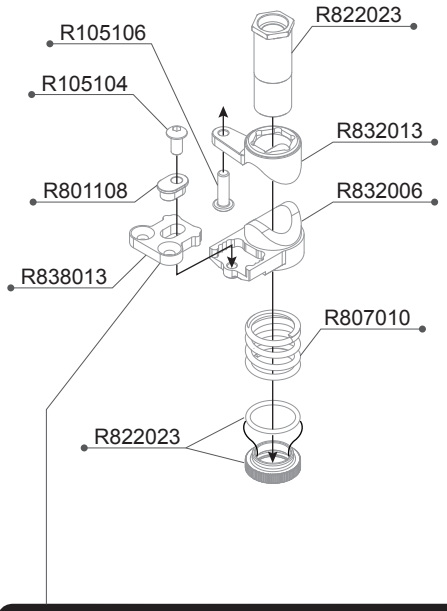

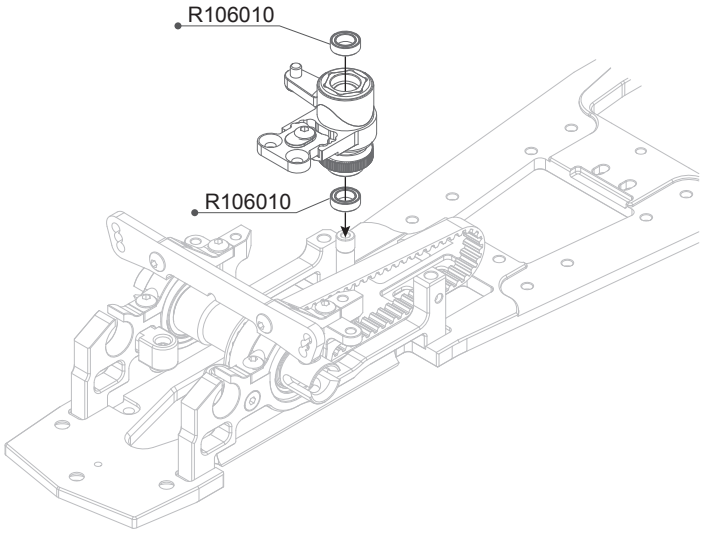

Option Parts (Not Included) / 改裝品(未附於套件內)

R838012 R8.3 Ackerman Plate 9mm

The distance of ball head is 9mm, It will give more overall steering then 10mm ackerman plate.


兩個球頭間的距離為9mm，相較於10mm的轉向阿克曼板可以提供更多的轉向能力。

R838011 R8.3 Ackerman Plate 8.5mm

The distance of ball head is 8.5mm, It will give more overall steering then 9mm ackerman plate.

兩個球頭間的距離為8.5mm，相較於9mm的轉向阿克曼板可以提供更多的轉向能力。

NOTICE

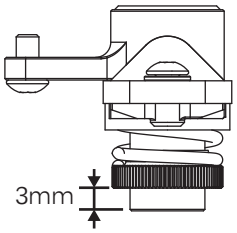


DEFAULT DISTANCE
預設的位置


NOTICE



When track has "High Traction" or want to reduce steering.
此設定建議使用在高抓地力的跑道或是需要降低車輛轉向的反應時。

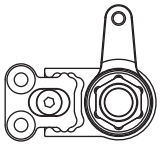


DEFAULT SETUP
預設的中性設定

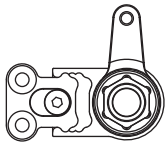

When track has "Low Traction" or want to increase steering
此設定建議使用在低抓地力的跑道或是需要增加車輛初期的轉向反應時。

R105104	3x6 Round Screw (10)
R105106	3x10 Round Screw (10)
R106010	5x8x2.5mm Ball Bearing (4pcs)
R801108	Ackerman Adjustment Shims 0/+1.5
R807010	Servo Saver Spring
R822023	R8.2 LCG Sever Saver Tower
R832006	R8.3 Servo Saver Lower
R832013	R8.3 Servo Saver Upper
R838013	R8.3 Ackerman Plate 10mm


R8.3E BAG 01 PARTS EXPLORE VIEW

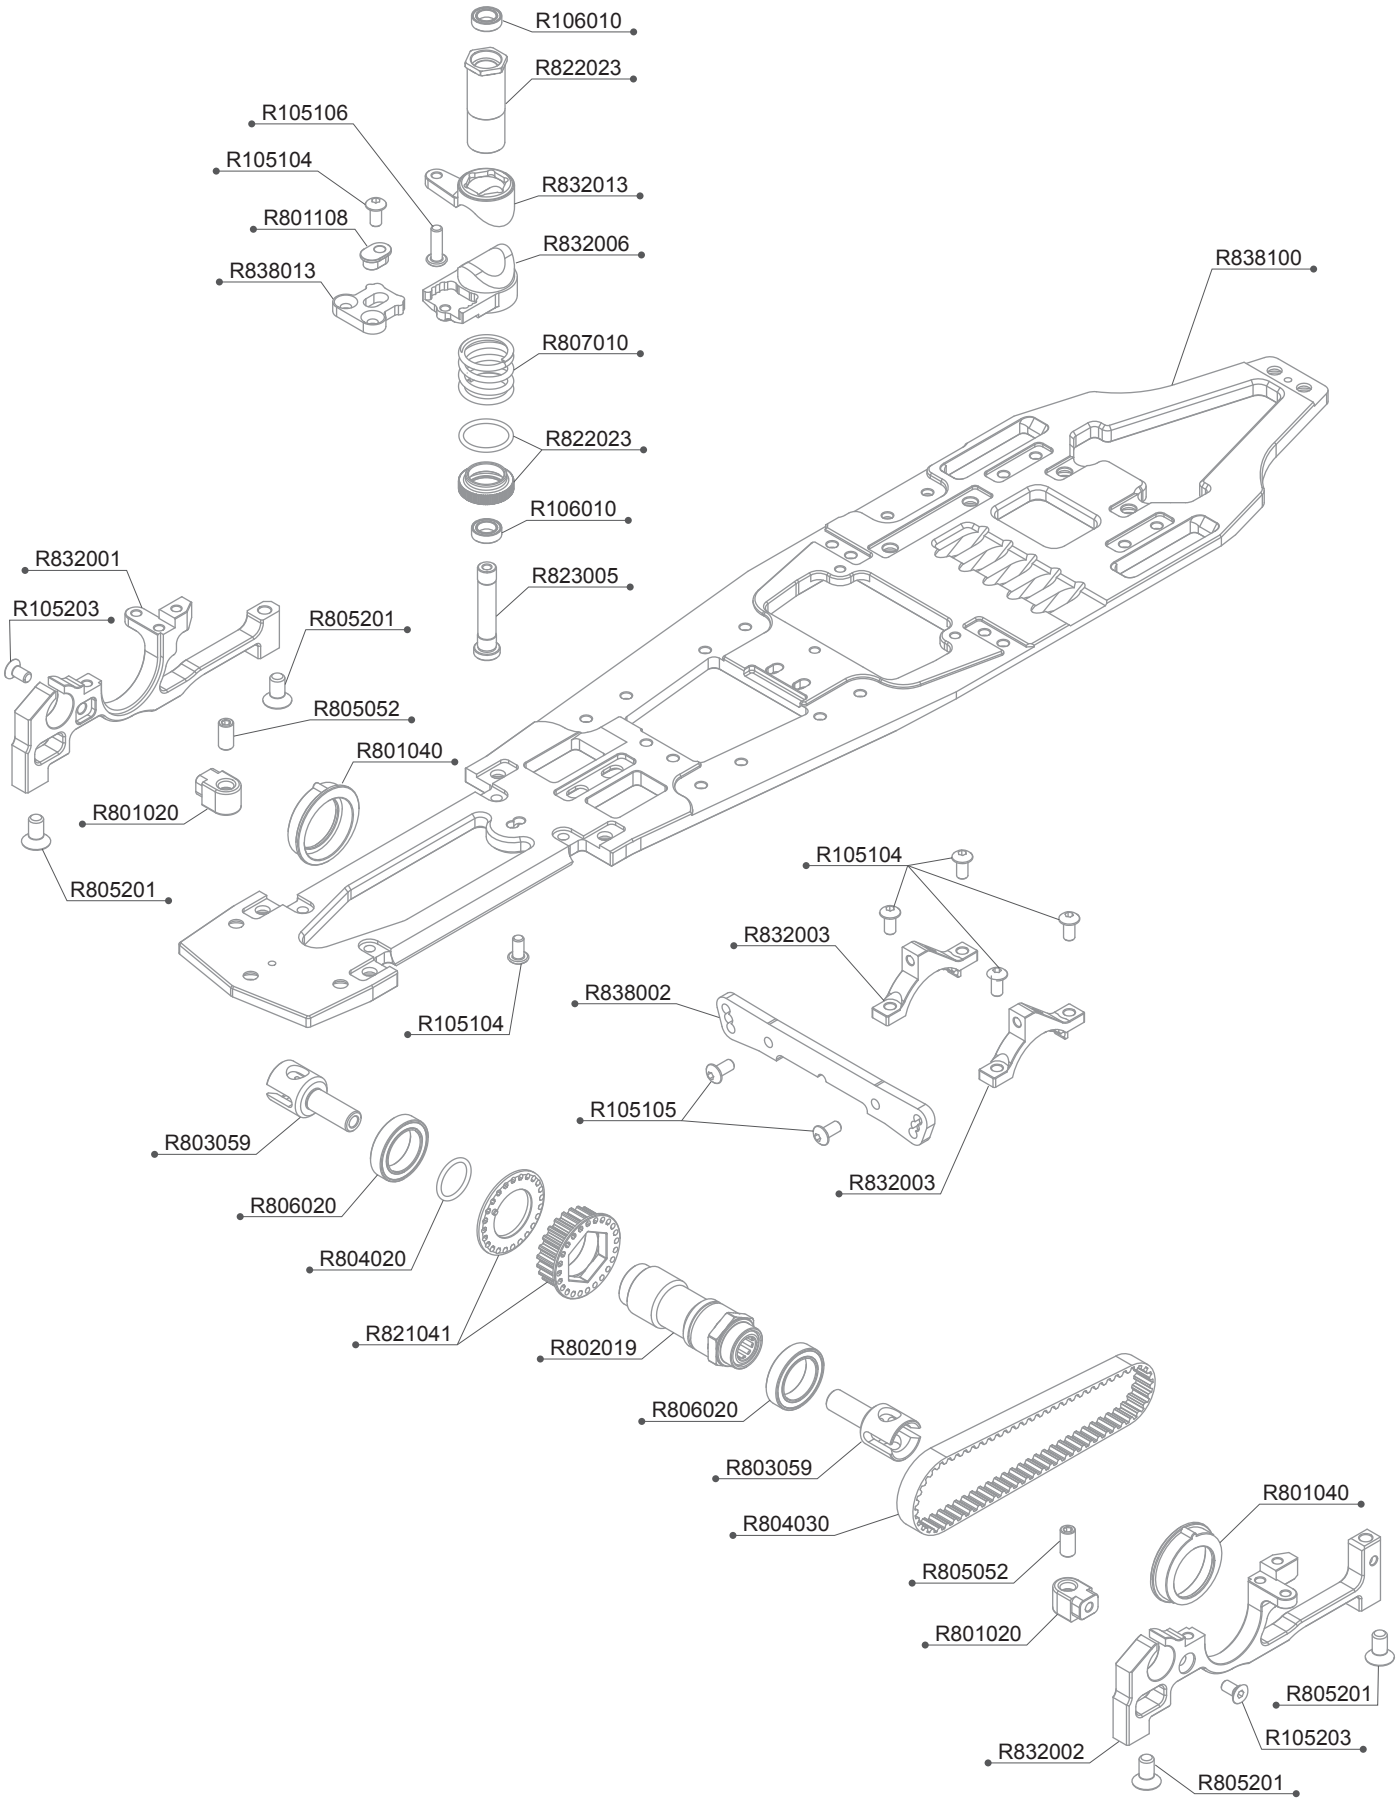


R8.3E BAG 01 PARTS LIST

R105104	3x6 Round Screw (10)
R105105	3x8 Round Screw (10)
R105106	3x10 Round Screw (10)
R105203	3x6mm Flat Screw (10)
R106010	5x8x2.5mm Ball Bearing (4pcs)
R801020	Downstop Nut Holder (2)
R801040	Bearing Bushing -Solid Axle (2)
R801108	Ackerman Adjustment Shims 0/+1.5
R802019	Front One Way
R803059	Front One Way Cup (2)
R804020	O'Ring 10x1.5 (6)
R804030	Front Belt 201
R805052	4x8mm Set Screw (10)
R805201	4x8mm Flat Screw (10)
R806020	12x18x4 Ball Bearing (4)
R807010	Servo Saver Spring
R821041	R8.3 Front Pulley Set
R822023	R8.2 LCG Sever Saver Tower
R823005	R8.2 LCG Sever Saver Post
R832001	R8.3 Front Low Bulkhead-R
R832002	R8.3 Front Low Bulkhead-L
R832003	R8.3 Front Upper Bulkhead
R832006	R8.3 Servo Saver Lower
R832013	R8.3 Servo Saver Upper
R838002	R8.3 Front Shock Tower
R838013	R8.3 Ackerman Plate 10mm
R838100	R8.3E Carbon Chassis


1:1 SCALE



R105104
3x6 Round Screw (10)



R105105
3x8 Round Screw (10)



R105106
3x10 Round Screw (10)



R105203
3x6mm Flat Screw (10)




R805201
4x8mm Flat Screw (10)



R805052
4x8mm Set Screw (10)



R106010
5x8x2.5mm
Ball Bearing (4)

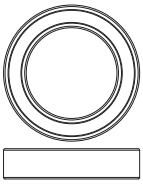

R806020
12x18x4mm
Ball Bearing (4)



R102014
3x5.5x1mm Alu Shims (8)



R102017
3x5.5x3mm Alu Shims (4)



R103050
3x5x0.3mm Shims (10)



R105101
2x5mm Cap Screw (10)



R105204
3x8mm Flat Screw (10)




R105104
3x6 Round Screw (10)



R105105
3x8 Round Screw (10)

1:1 Scale

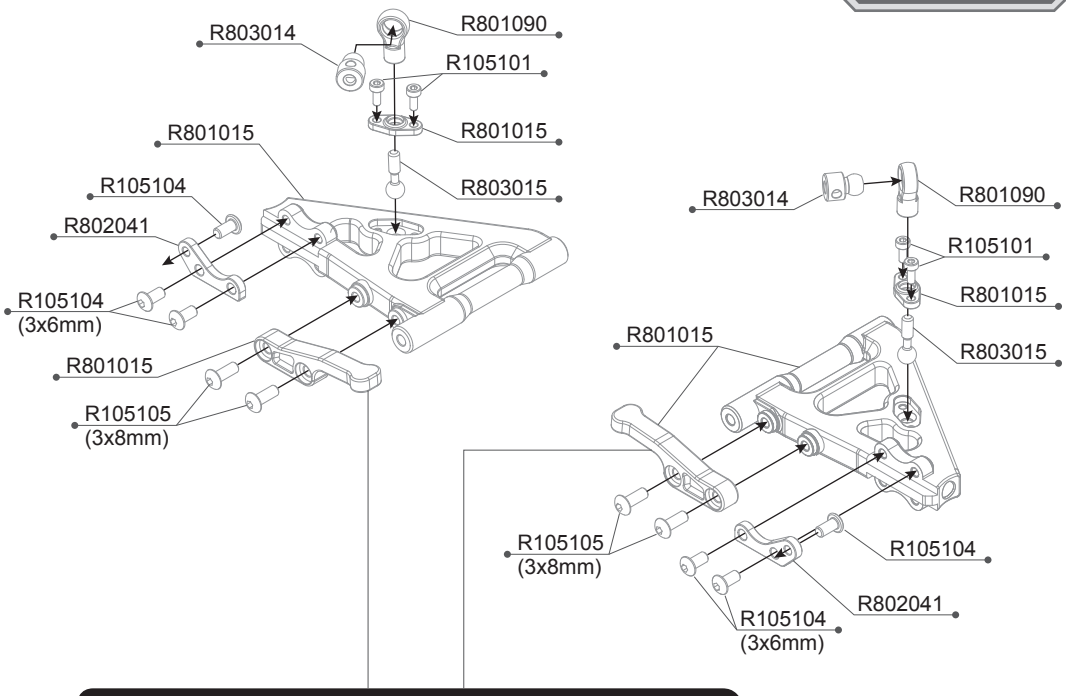


Option Parts (Not Included) / 改裝品(未附於套件內)

R802087
Front Down Stop Arm-Alu (2)




The option aluminum arm helps to make droop setup more precise.
鋁合金製作的下抬行程控制臂可以更精確的去控制與設定下抬量的行程。

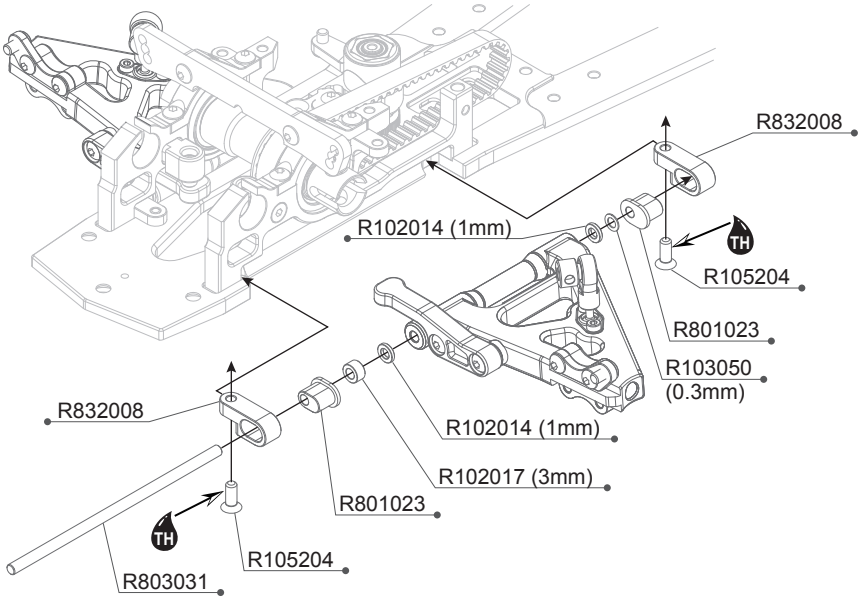

R102014	3x5.5x1mm Alu Shims(8pcs)
R102017	3X5.5X3mm Alu Shims(4pcs)
R103050	3x5x0.3mm Shims (10)
R105101	2x5mm Cap Screw (10)
R105104	3x6 Round Screw (10)
R105105	3x8 Round Screw (10)
R105204	3x8mm Flat Screw (10)
R801015	Front Low Arm Set
R801023	Suspension Bracket Insert-Open (8)
R801090	Ball End 5.8mm Short (4)
R802041	Front Shock Mount S (2)
R803014	Anti Roll Bar Ball Head (2)
R803015	Anti Roll Bar Ball Screw (2)
R803031	Front Low Arm Pin 3x77.8
R832008	R8.3 Front Low Arm Holder (2)

R8.3 FRONT LOW ARM SETUP / R8.3前下擺臂設定表

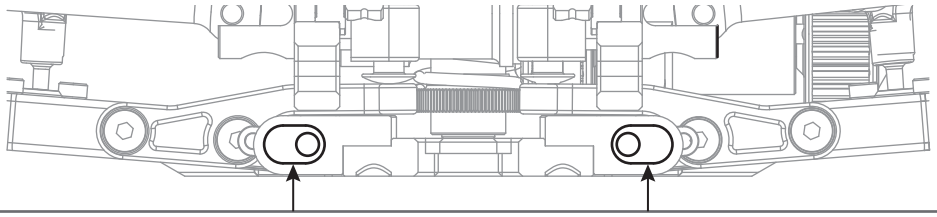

Move the insert hole to outside and front low arm will become shortest, shorter front low arm will helps to increase initial steering response and avoid over steering, recommend using in very short and tight corner with medium traction. 孔位朝外時前下擺臂長度變成最短，較短的前下擺臂可以有效的增加轉向的初期反應，並防減少車輛轉向過度，建議使用在較小與多彎的跑道上。	
Move the insert hole to center and the low arm length extend 1.5mm compare with shortest arm, it will helps to reduce the steering response and increase exit corner steering, recommend using in the medium size track and corner. 將孔位放置於中間時前下擺臂的長度相較於最短的設定增加1.5mm，此設定可減少車輛轉向的初期反應，並增加出彎時的轉向能力，適合在中型跑道。	
Default setup is move the insert hole to inside and make low arm become longest, the longest arm will reduce the initial steering response and make car more easy to drive also increase the exit corner and on-power steering. 預設的位置是將孔位放置在最內的位置，此時前下擺臂的長度是最長的，較長的前下擺臂可以減少轉向初期的反應使車輛比較容易駕駛並有效的增加出彎與加油門時車輛的轉向能力。	





R105401
3x3mm Set Screw (10)



R806005
5x10x4mm
Flange Ball Bearing (2)

1:1 Scale

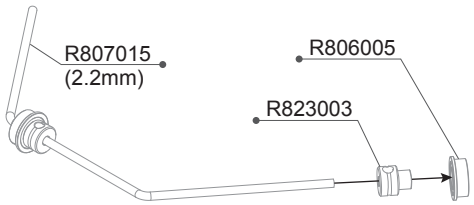


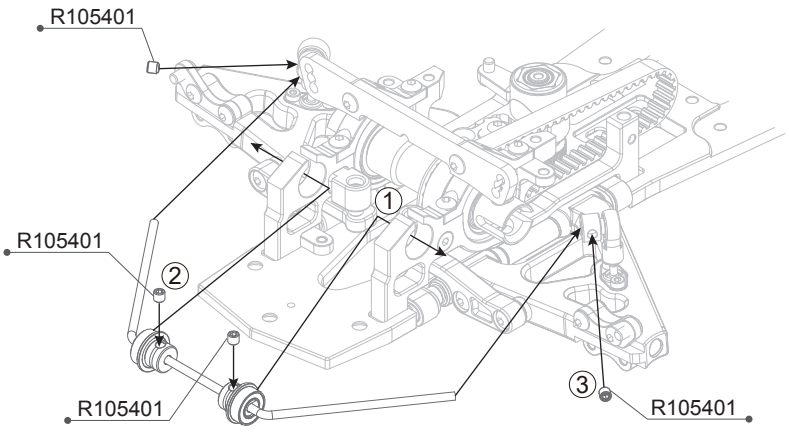

Option Parts (Not Included) / 改裝品(未附於套件內)

R807014	Front Anti-Roll Bar 2.0mm	**R807017**	Front Anti-Roll Bar 2.6mm
R807016	Front Anti-Roll Bar 2.4mm	**R807018**	Front Anti-Roll Bar 2.8mm


R105401	3x3mm Set Screw (10)	R807015	Front Anti-Roll Bar 2.2mm
R806005	5x10x4 Flange Ball Bearing (2)	R823003	Anti-Roll Bar Stopper 2.0-2.4 (2)




RR805307
3x6mm Set Screw (10)

R105104
3x6 Round Screw (10)


1:1 Scale

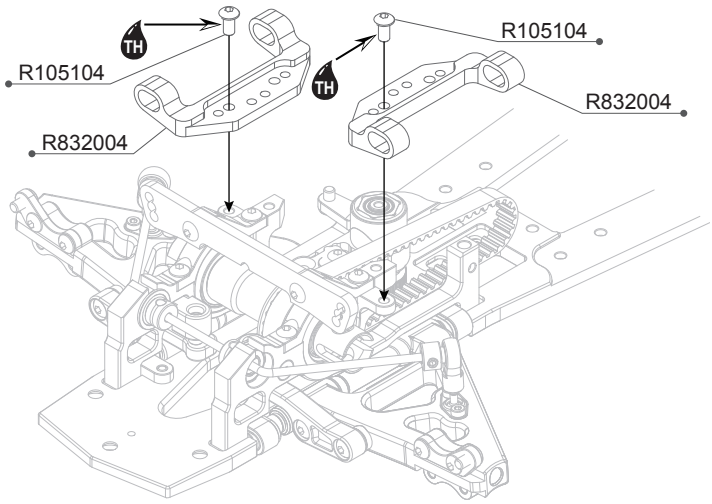

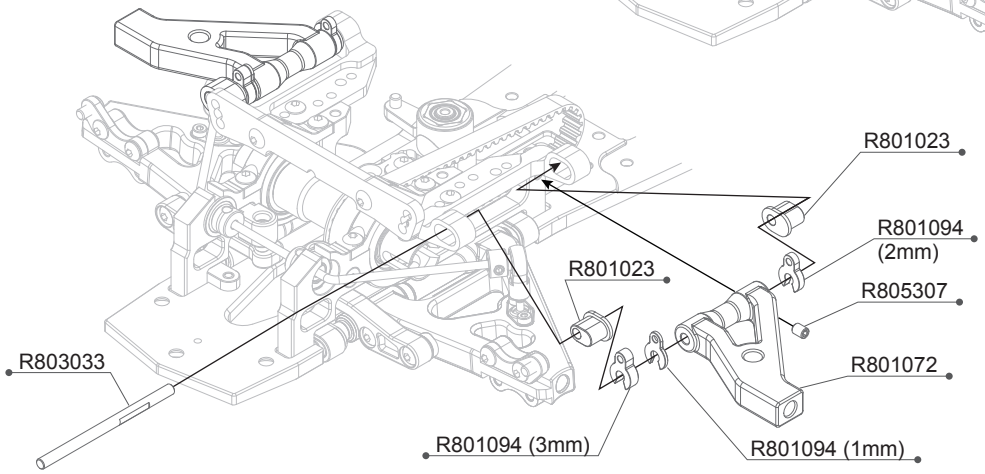


R8.3 FRONT UPPER ARM SETUP/ R8.3前上擺臂設定表

	Move the insert hole to outside and front upper arm will become shortest, it will increase initial steering response and reduce exit and on-power steering. 將孔位朝向外，前上擺臂的長度會變成是最短的設定，此設定可以增加轉向的初期反應，但會減少車輛出彎與加油門時的轉向總量。	
	Default setup is put the hole in middle and the car will become natural steering. 預設的位置孔位放置於中間，此設定會使車輛的整體的轉向比較中性。	
	Move the insert hole to inside and front upper arm will become longest, it will reduce the initial steering response and increase exit and on-power steering. 將孔位朝向內，前上擺臂的長度會變成是最長的設定，此設定可以減少轉向的初期反應，但會增加車輛出彎與加油門時的轉向能力。	

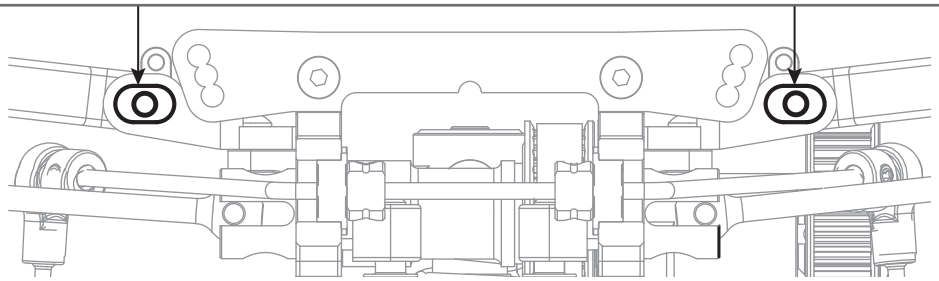

R105104	3x6 Round Screw (10)	R803033	Front Upper Arm Pin 3x49
R801023	Suspension Bracket Insert-Open (8)	R805307	3x6mm Set Screw (10)
R801072	Front Upper Arm (2)	R832004	R8.3 Front Upper Arm Base
R801094	C Spacer Set 1mm/2mm/3mm		

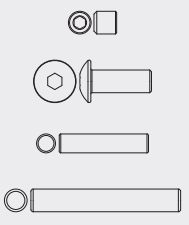


R105401
3x3mm Set Screw (10)


R105105
3x8 Round Screw (10)

R806100
Ø2.5x11.8 Pin (6)

R806101
Ø3x19.8 Pin (6)

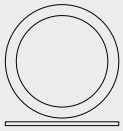


R803051
12.1x15x0.5mm
Shims (10)

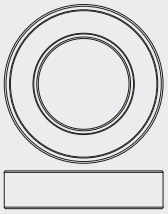


R806021
12x21x5mm
Ball Bearing (2)


1:1 Scale

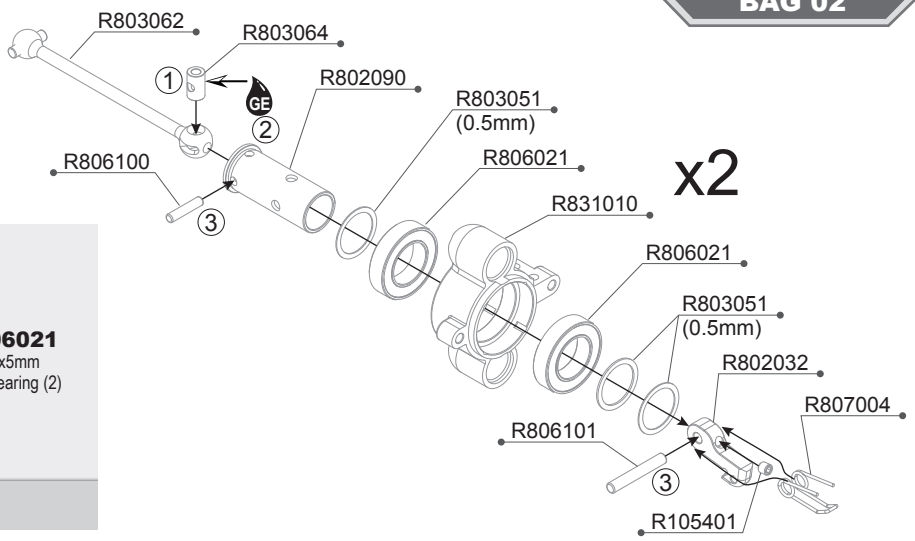


R8.3 STEERING BLOCK SETUP INSTRUCTION /前轉向座設定說明

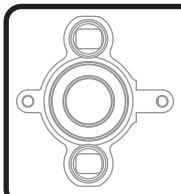


The default setup with 12mm X 21mm ball bearing and the wheel axle in the center, for most track condition.
預設的設定，使用12mm X 21mm的培林, 輪軸的位置位於中間，適合大部份的場地。

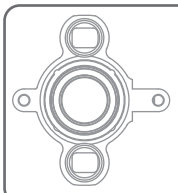


Using 12X18 ball bearing and wheel axle in center, the small bearing will reduce the weight.
使用12mmX18mm的培林，輪軸位於中間，可以減輕重量。

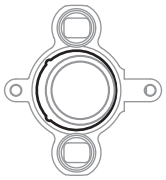


The wheel axle backward 1mm, it will create more on-power steering.
輪軸的位置向後1mm，可以加強出彎時加速的轉向能力。

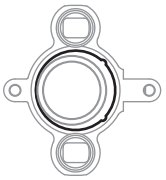


The wheel axle forward 1mm, it will create more off-power steering.
輪軸的位置向前1mm，可以加強入彎未加速時的轉向能力。

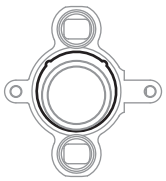


The wheel axle 1mm lower, it will create more steering especially in the apex of corner, useful setup at low grip track or under steering.
輪軸的位置向下1mm，可增加於彎道頂點的轉向能力，適合使用在低抓地力或是轉向不足時。

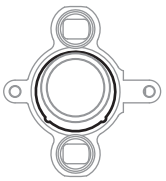


The wheel axle 1mm higher, it will reduce the steering especially in the apex of corner, useful setup when car is over steering.
輪軸的位置向上1mm，會減少前輪於彎道頂點的轉向能力，適合使用在車輛轉向過度時。

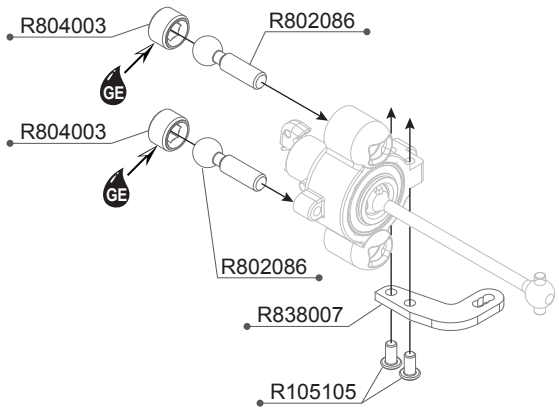

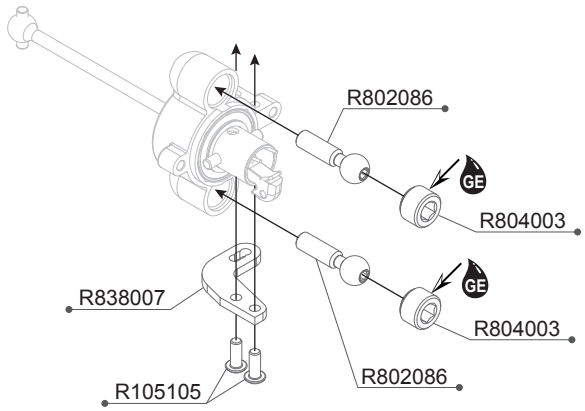


R105401	3x3mm Set Screw (10)
R105105	3x8 Round Screw (10)
R802032	Front Tire Hook (2)
R802086	7.9mm Ball End Long-Alu (4)
R802090	Front Wheel Axle - Alu (2)
R803051	12.1x15x0.5mm Shims (10)
R803062	Front CVD Shaft (2)
R803064	CVD Insert (2)
R804003	7.9mm Ball End Nut (4)
R806021	12x21x5mm Ball Bearing (2)
R806100	Pin 2.5x11.8 (6)
R806101	Pin 3x19.8 (6)
R807004	Tire Hook Spring (4)
R831010	R8.3 Steering Block-V2
R838007	R8.3 Steering Plate (2)

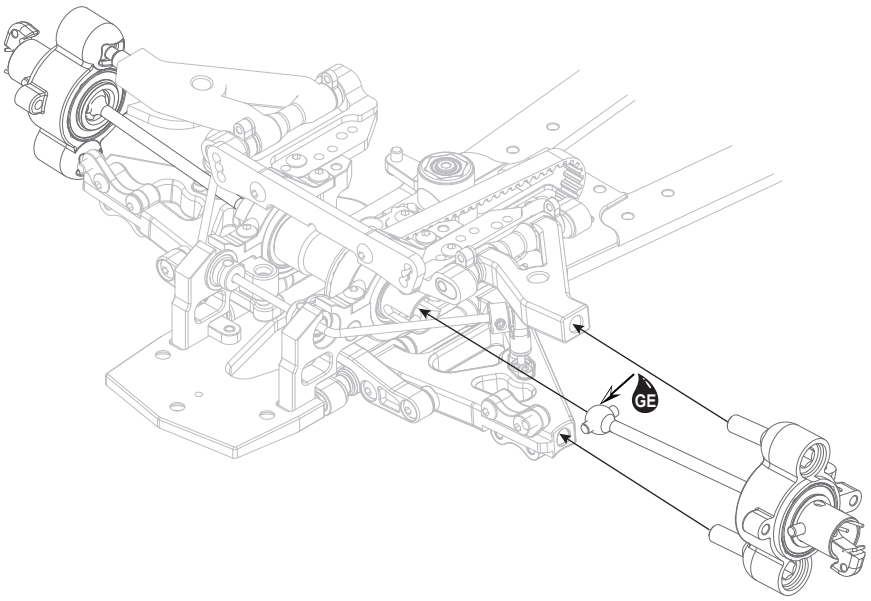


NOTICE
Front upper arm width setup (UP View)
前上擺臂寬度的設定（上視圖）


Front track width 252mm / 預設前車寬252mm

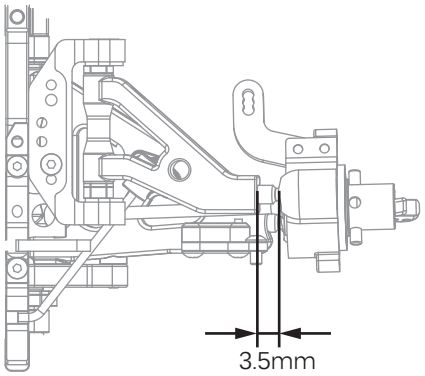

NOTICE
Front low arm width setup (Down View)
前下擺臂寬度的設定（下視圖）


Front track width 252mm / 預設前車寬252mm

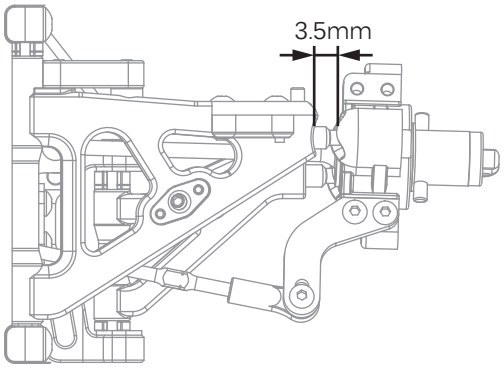

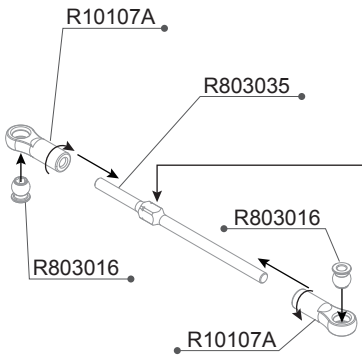



Recommend Tool / 建議使用工具

TiTAN #15006
Turnbuckle Tool 3mm/4mm

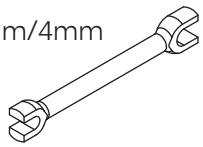

NOTICE



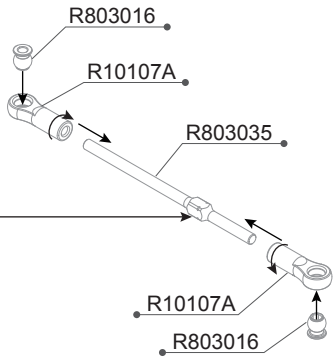

R10107A Ball Joint 4.9mm Open (6pcs)
R803016 Ball Head 4.9mm (4)
R803035 3mm X 62mm Rod (2)




R105104
3x6 Round Screw (10)



R805010
3x5mm Flat Screw (10)


1:1 Scale

NOTICE

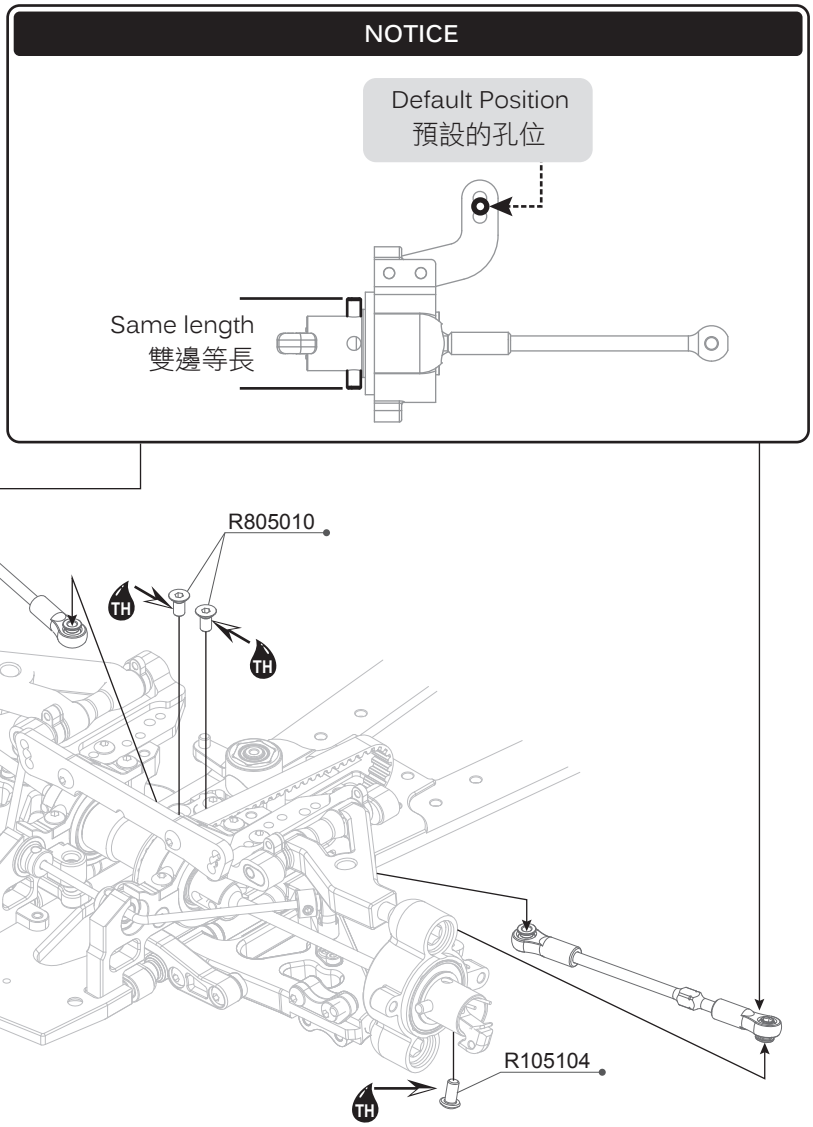

NOTICE

Initial front droop setup / 前下擺臂寬度的設定

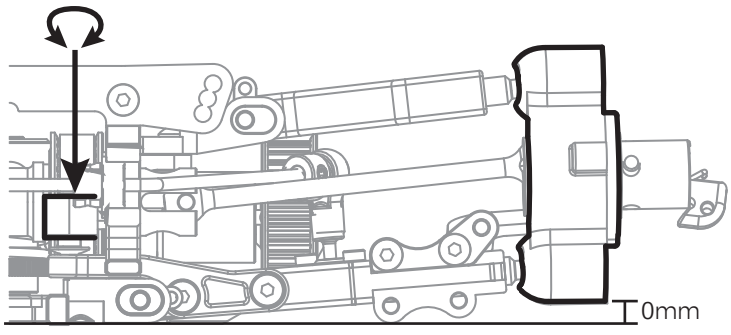


Please setup the front droop as above instruction.
請依圖示設定前下抬量的位置。

R105104 3x6 Round Screw (10)

R805010 3x5mm Flat Screw (10)

R8.3E BAG 02 PARTS EXPLORE VIEW

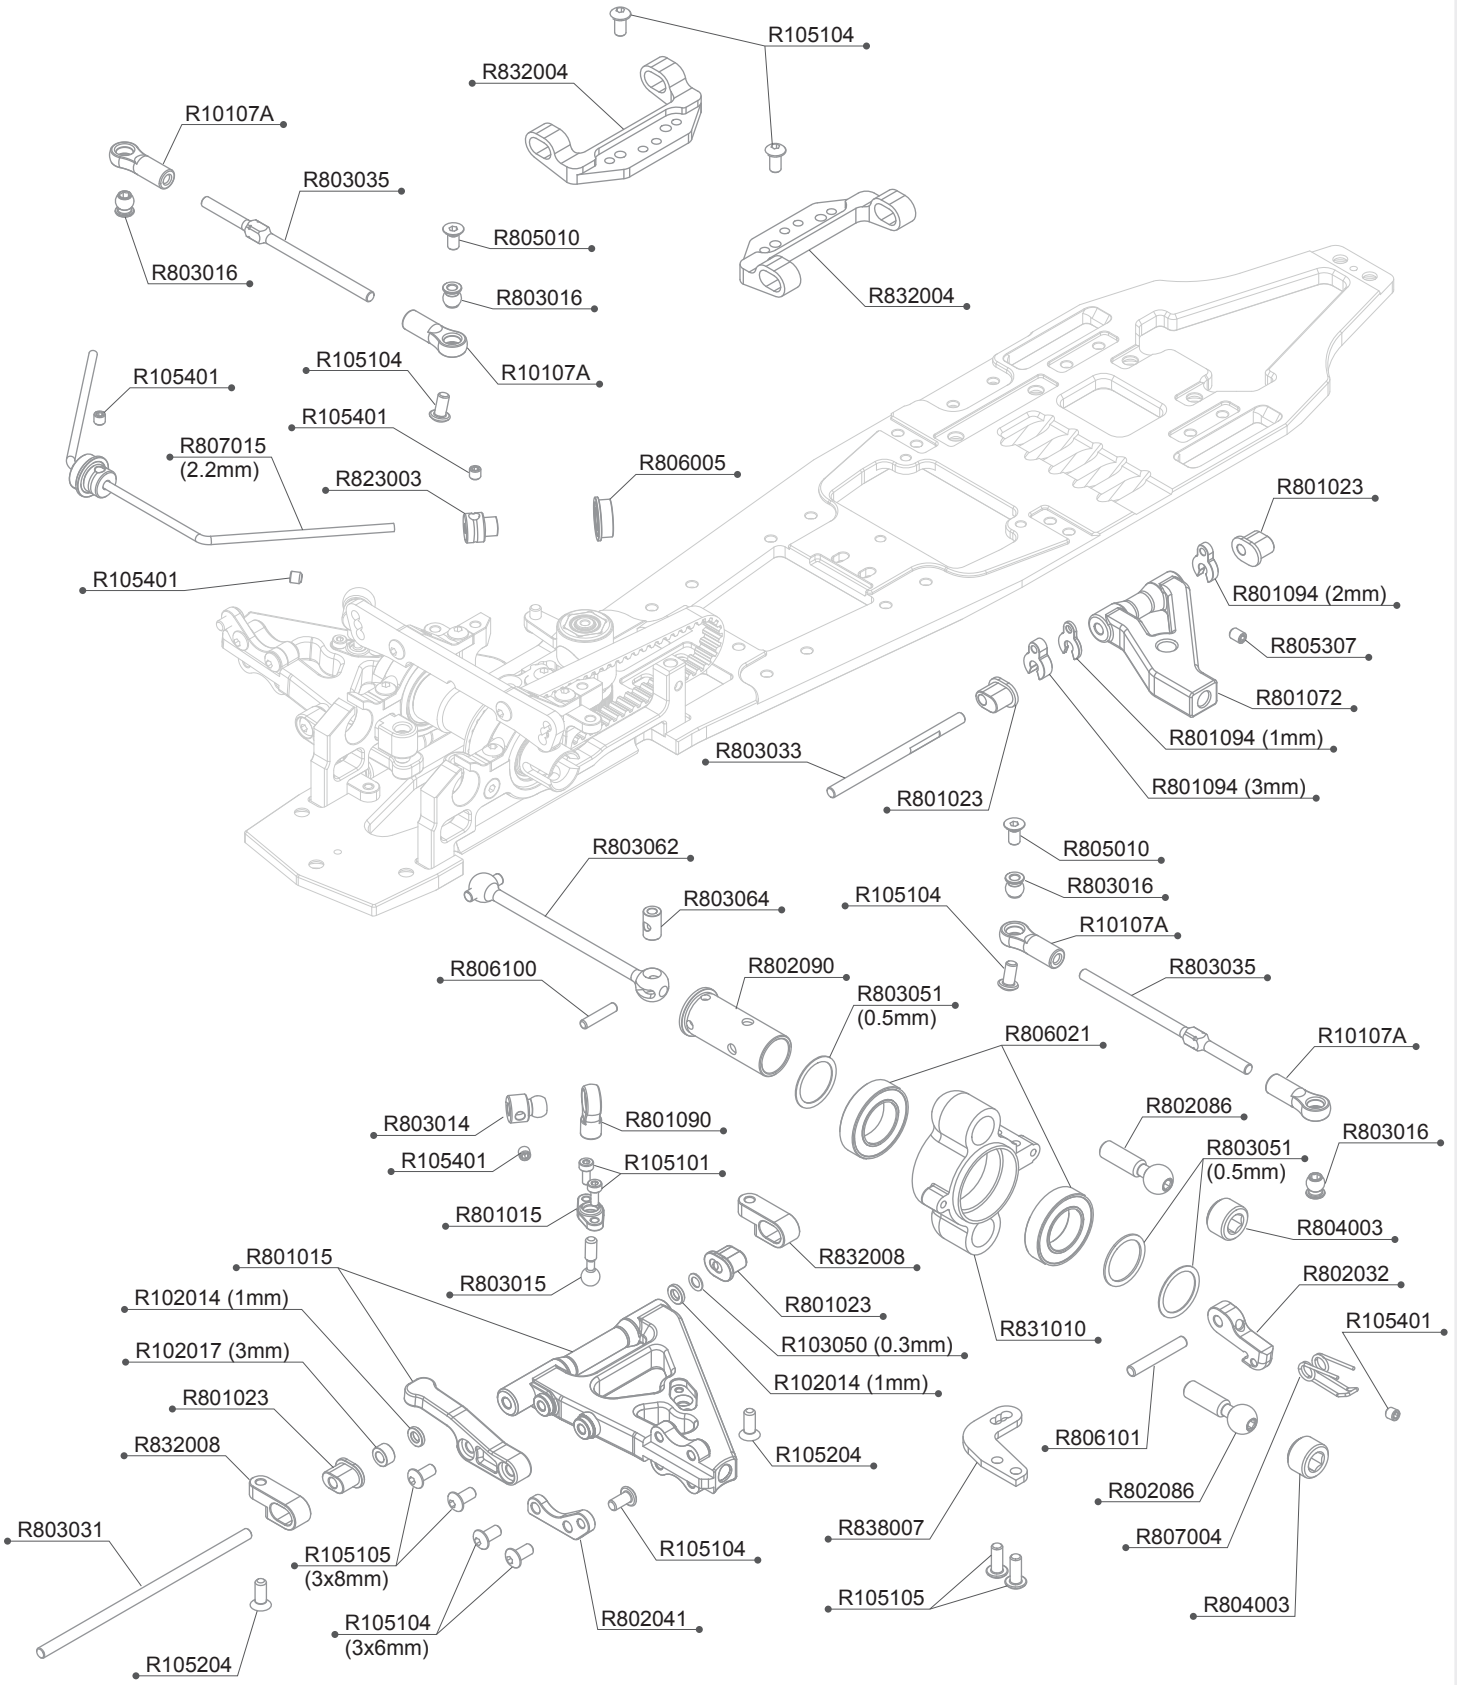

R8.3E BAG 02 PARTS LIST

R10107A	Ball Joint 4.9mm Open (6pcs)
R102014	3x5.5x1mm Alu Shims(8pcs)
R102017	3X5.5X3mm Alu Shims(4pcs)
R103050	3x5x0.3mm Shims (10)
R105101	2x5mm Cap Screw (10)
R105104	3x6 Round Screw (10)
R105105	3x8 Round Screw (10)
R105204	3x8mm Flat Screw (10)
R105401	3x3mm Set Screw (10)
R801015	Front Low Arm Set
R801023	Suspension Bracket Insert-Open (8)
R801072	Front Upper Arm (2)
R801090	Ball End 5.8mm Short (4)
R801094	C Spacer Set 1mm/2mm/3mm
R802032	Front Tire Hook (2)
R802041	Front Shock Mount S (2)
R802086	7.9mm Ball End Long-Alu (4)
R802090	Front Wheel Axle - Alu (2)
R803014	Anti Roll Bar Ball Head (2)
R803015	Anti Roll Bar Ball Screw (2)
R803016	Ball Head 4.9mm (4)
R803031	Front Low Arm Pin 3x77.8
R803033	Front Upper Arm Pin 3x49
R803035	3mm X 62mm Rod (2)
R803051	12.1x15x0.5mm Shims (10)
R803062	Front CVD Shaft (2)
R803064	CVD Insert (2)
R804003	7.9mm Ball End Nut (4)
R805010	3x5mm Flat Screw (10)
R805307	3x6mm Set Screw (10)
R806005	5x10x4 Flange Ball Bearing (2)
R806021	12x21x5mm Ball Bearing (2)
R806100	Pin 2.5x11.8 (6)
R806101	Pin 3x19.8 (6)
R807004	Tire Hook Spring (4)
R807015	Front Anti-Roll Bar 2.2mm
R823003	Anti-Roll Bar Stopper 2.0-2.4 (2)
R831010	R8.3 Steering Block-V2
R832004	R8.3 Front Upper Arm Base
R832008	R8.3 Front Low Arm Holder (2)
R838007	R8.3 Steering Plate (2)

1:1 SCALE




R102014
3x5.5x1mm Alu Shims (8)




R102017
3x5.5x3mm Alu Shims (4)



R103050
3x5x0.3mm Shims (10)



R105104
3x6 Round Screw (10)



R105105
3x8 Round Screw (10)



R105204
3x8mm Flat Screw (10)




R805010
3x5mm Flat Screw (10)




R105401
3x3mm Set Screw (10)



RR805307
3x6mm Set Screw (10)



R105101
2x5mm Cap Screw (10)




R806100
Ø2.5x11.8 Pin (6)




R806101
Ø3x19.8 Pin (6)



R806005
5x10x4mm
Flange Ball Bearing (2)

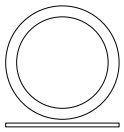

R803051
12.1x15x0.5mm Shims (10)

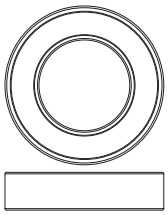

R806021
12x21x5mm Ball Bearing (2)




R105204
3x8mm Flat Screw (10)



R805201
4x8mm Flat Screw (10)





R805040
12mm C Clip (6)



R806101
Ø3x19.8 Pin (6)

1:1 Scale

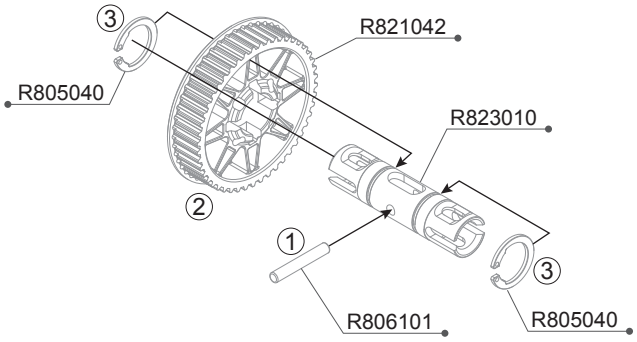

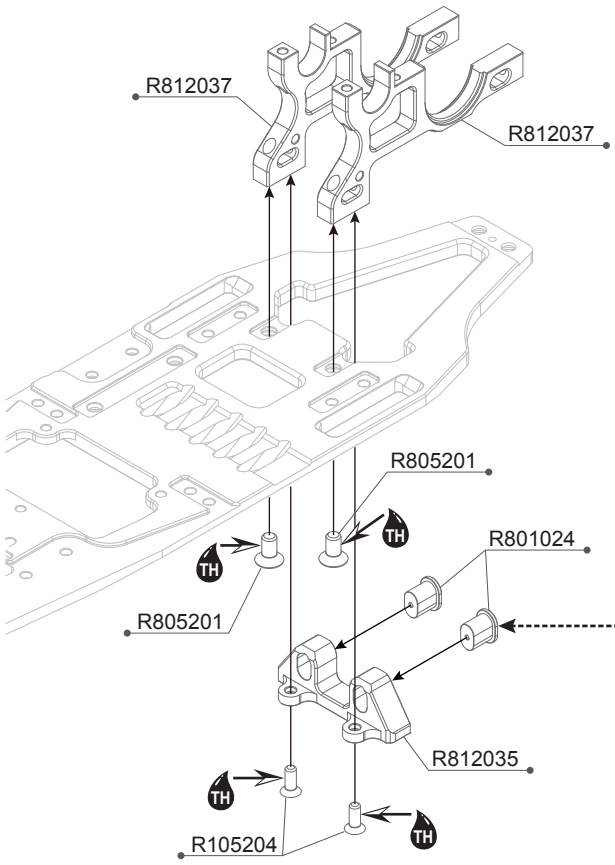

NOTICE



LOW ROLL CENTER / 低的後滾動中心

More initial steering and rear end rolling, and more corner apex traction.
較快的轉向反應與更多的車尾轉動，於彎道頂點時有較多的抓地力。




HIGH ROLL CENTER (DEFAULT SETUP)
高的後滾動中心(預設位置)

Less initial steering and rear end rolling, and less corner apex traction.
較慢的轉向反應與較少的車尾轉動，於彎道頂點時有較少的抓地力。


R105204	3x8mm Flat Screw (10)
R801024	Suspension Bracket Insert-Closed (8)
R805040	12mm C Clip (6)
R805201	4x8mm Flat Screw (10)
R806101	Pin 3x19.8 (6)
R812035	R8.2 Rear Low Arm Bracket RF
R812037	R8.2 Rear Low Arm Bulkhead
R823010	R8.2 Rear Solid Axle-Light
R821042	R8.3 Rear Pulley Set

BAG 03

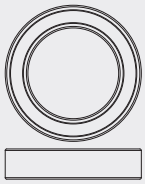


R806020
12x18x4mm Ball Bearing (4)

1:1 Scale

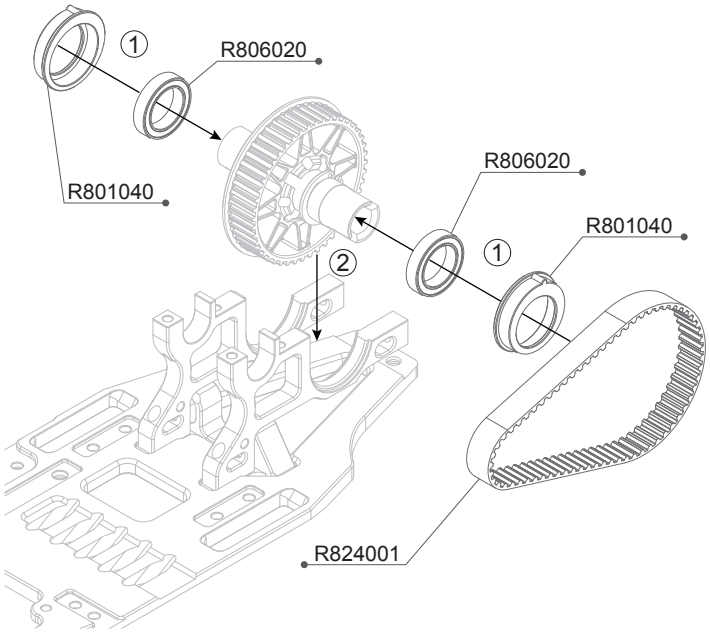


NOTICE

The rear pulley direction as below
後皮帶齒方向如下方圖示

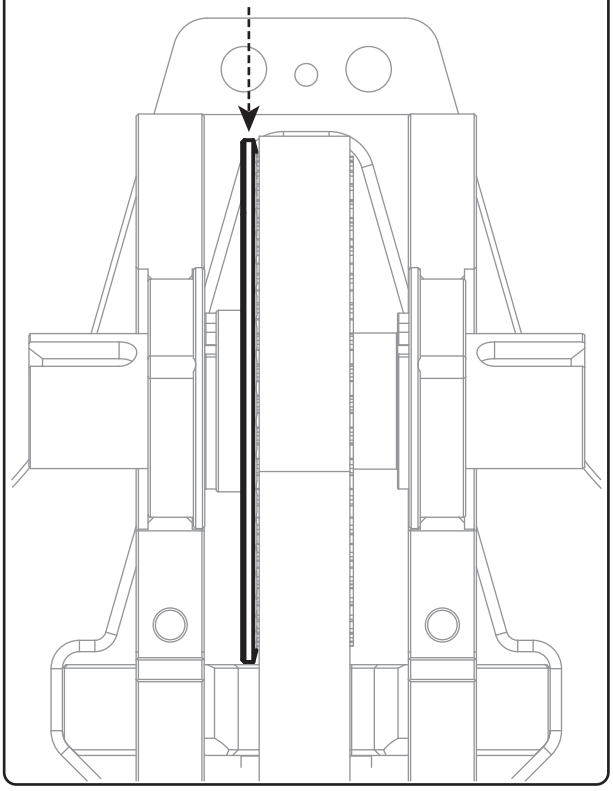


R801040 Bearing Bushing -Solid Axle (2)
R806020 12x18x4 Ball Bearing (4)
R824001 204-8mm Rubber Belt


BAG 03



R105104
3x6 Round Screw (10)




R105105
3x8 Round Screw (10)



R805053
4x10mm Set Screw (10)

1:1 Scale

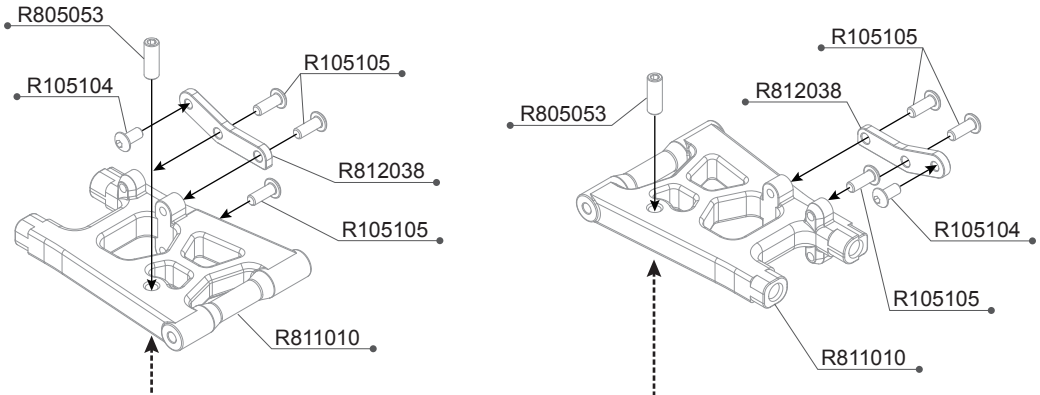


Option Parts (Not Included) / 改裝品(未附於套件內)

R813005 Downstop Adjust Screw (4)



R105104 3x6 Round Screw (10)
R105105 3x8 Round Screw (10)
R805053 4x10mm Set Screw (10)
R811010 R8.2 Rear Low Arm-Long
R812038 R8.2 Rear Low Shock Mount (2)




R105105
3x8 Round Screw (10)




R805201
4x8mm Flat Screw (10)

1:1 Scale

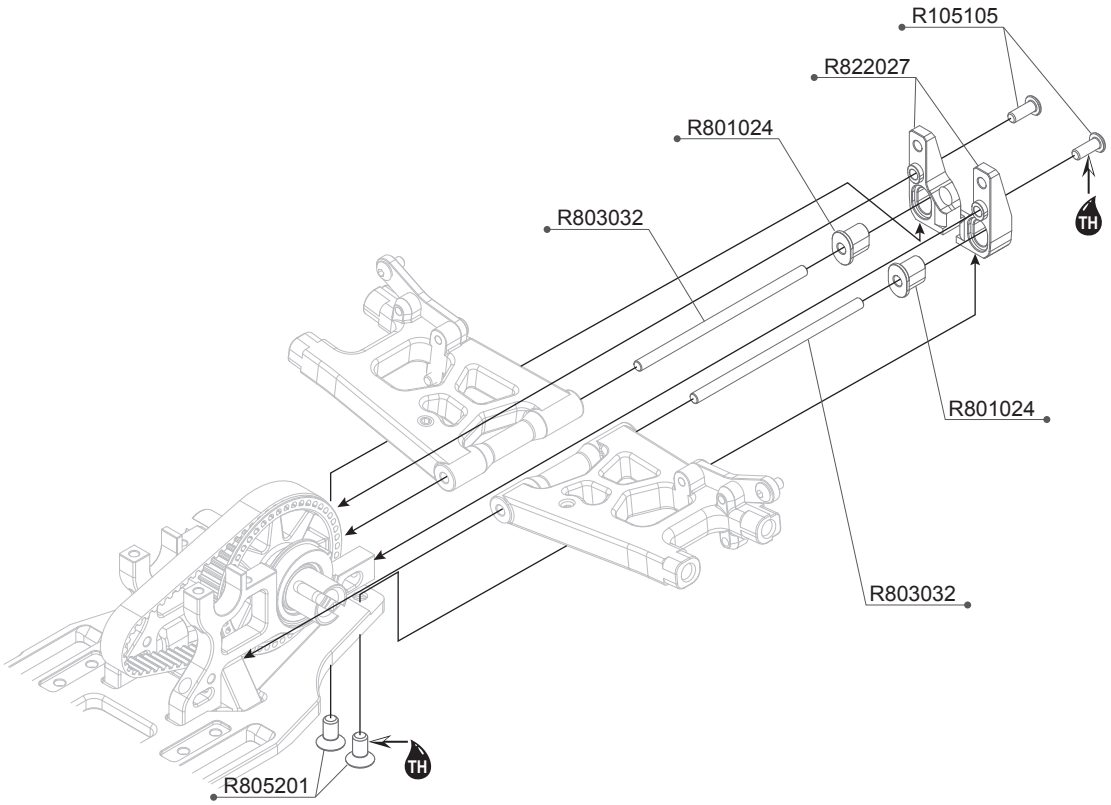


NOTICE

LOW ROLL CENTER / 低的後滾動中心

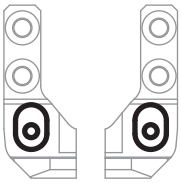

More initial steering and rear end rolling, and more corner apex traction.
較快的初期轉向反應與更多的車尾轉動，於彎道頂點時有較多的抓地力。


HIGH ROLL CENTER (DEFAULT SETUP) / 高的後滾動中心(預設位置)

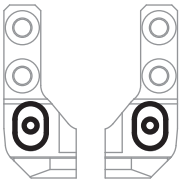



Less initial steering and rear end rolling, and less corner apex traction.
較慢的初期轉向反應與較少的車尾轉動，於彎道頂點時有較少的抓地力。

R105105	3x8 Round Screw (10)	R805201	4x8mm Flat Screw (10)
R801024	Suspension Bracket Insert-Closed (8)	R822027	R8.2 LCG Rear Low Arm Bracket-RR Separated
R803032	Rear Low Arm Pin		

NOTICE

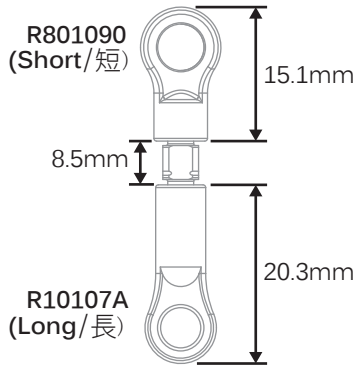

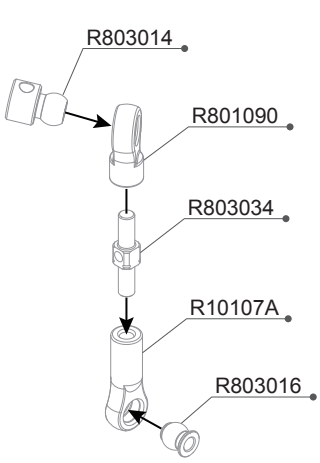

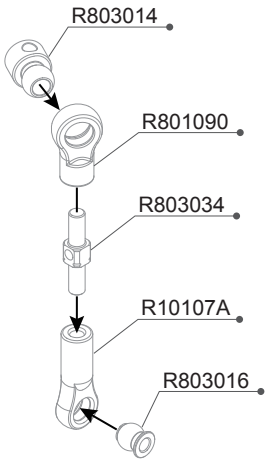

R10107A	Ball Joint 4.9mm Open (6pcs)	R803016	Ball Head 4.9mm (4)
R801090	Ball End 5.8mm (4)	R803034	3mm X 15mm Turnbuckle
R803014	Anti Roll Bar Ball Head (2)		

BAG 03



R106010
5x8x2.5mm Ball Bearing (4)

1:1 Scale



Option Parts (Not Included) / 改裝品(未附於套件內)


R817020 R8.1 Rear Anti-Roll Bar 3.0mm
R817024 R8.1 Rear Anti-Roll Bar 2.6mm
R817026 R8.1 Rear Anti-Roll Bar 2.4mm

R106010	5x8x2.5mm Ball Bearing (4pcs)	R803013	Anti Roll Bar Stopper (2)
R801046	Anti-Roll Bar Bushing -Front (2)	R817022	R8.1 Rear Anti-Roll Bar 2.8mm




R105401
3x3mm Set Screw (10)

1:1 Scale

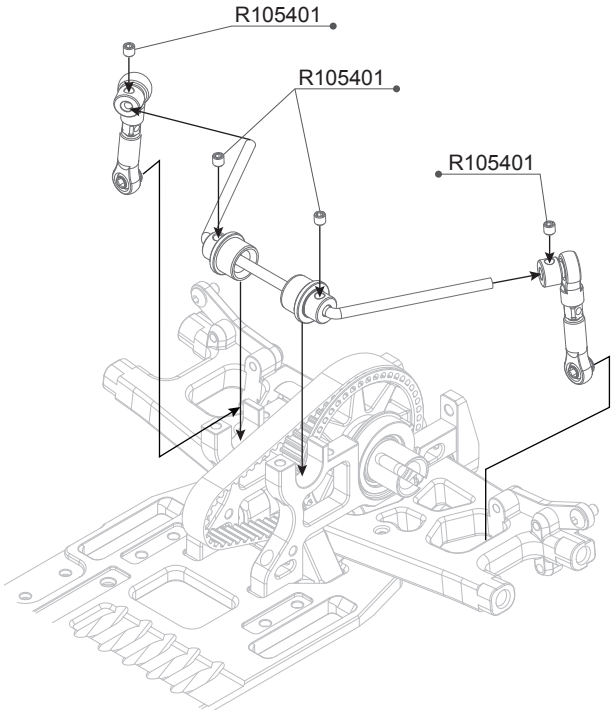

NOTICE

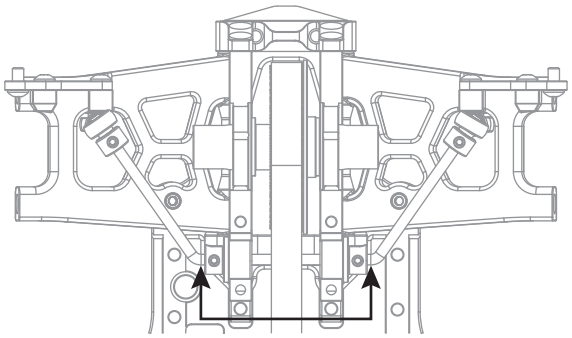

Center the anti roll bar so that the spacing is equal on both sides.

請將後防桿兩邊的間距設定為等寬。


R105401 3x3mm Set Screw (10)

BAG 03



R105204
3x8mm Flat Screw (10)

1:1 Scale

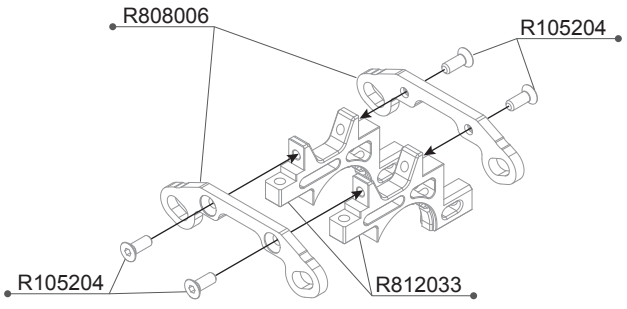


R105204 3x8mm Flat Screw (10)
R808006 Rear Upper Link Plate
R812033 R8.1 Rear Bulkhead Upper

Option Parts (Not Included) / 改裝品(未附於套件內)

R809020 R8.0 Rear I-Type Upper Arm Set


The I-type arm is useful to fine-tune the car. It gives more options to choose different link angles and makes the rear end respond quicker.

一字型的改裝後上擺臂可提供更多不同位置來做變化，並能使車輛的後輪的反應更加靈活。

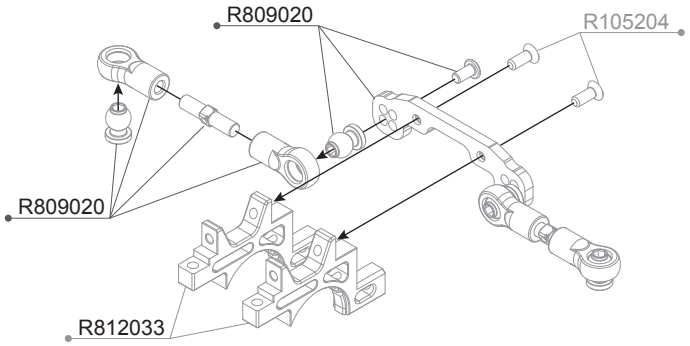


BAG 03


Step 1

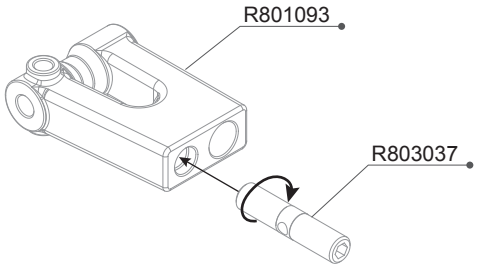




Step 2

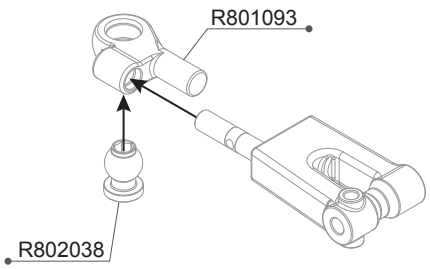

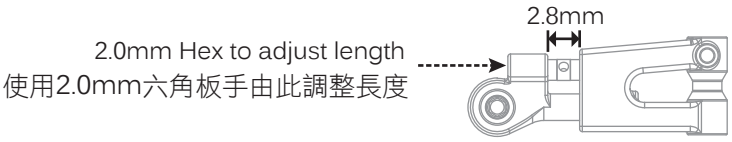

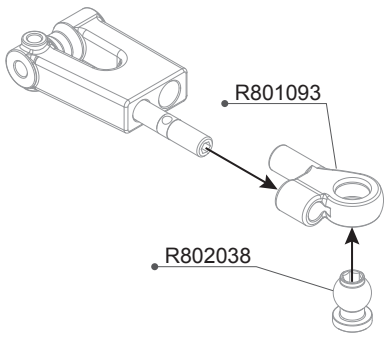





R801093 Rear Upper Arm Set
R802038 Alu Ball Head 6.8mm (2)
R803037 4mm X 17mm Turnbuckle (2)

R105402 3x4mm Set Screw (10)

R105204 3x8mm Flat Screw (10)

1:1 Scale

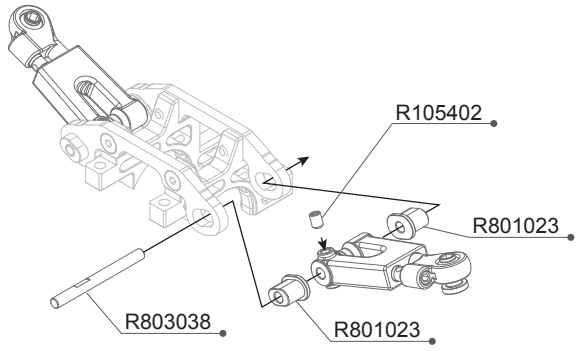

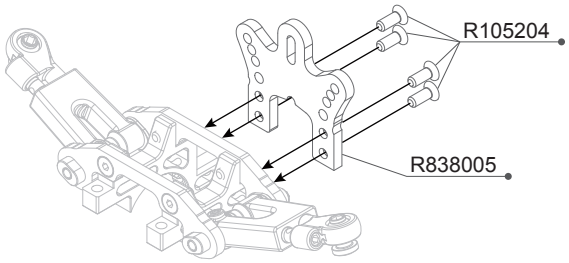

R8.3 REAR UPPER ARM SETUP / R8.3後上擺臂設定表

Shortest rear upper arm / 最短的後上擺臂



Rear end have more response in steering and less traction into corner but more traction in apex and exit corner, Using when under-steering into the corner.

車尾在進彎時有較快的反應與較少的抓地力，但是在彎道頂點與出彎時有較多抓地力，適合使用於進彎轉向不足時。

Medium rear upper arm / 中間長度的後上擺臂



The rear end response and steering are in balance, for most track.

車尾的反應與抓地力在最平衡的狀態，適合大部份的跑道。

Longest rear upper arm / 最長的後上擺臂



Rear end have less response and more traction into corner but less traction in apex and exit corner, Using when over-steering into the corner.

車尾在進彎時有較慢的反應與較多的抓地力，但是在彎道頂點與出彎時有較少抓地力，適合使用在車輛進彎轉向過度時。

R105204	3x8mm Flat Screw (10)	R803038	Rear Upper Arm Pin 3x32.5 (2)
R105402	3x4mm Set Screw (10)	R838005	R8.3 Rear Shock Tower
R801023	Suspension Bracket Insert-Open (8)		

R105105
3x8 Round Screw (10)

R105206
3x12mm Flat Screw (10)


1:1 Scale


Option Parts (Not Included) / 改裝品(未附於套件內)

R828015 R8.2 Rear Anti-Roll Bar Cover-Flex (2)


The separated cover allowed more chassis flex in the rear side and make more smooth response.

分離式的上蓋可以使車身後方的扭動較多，使整體反應比較柔順。



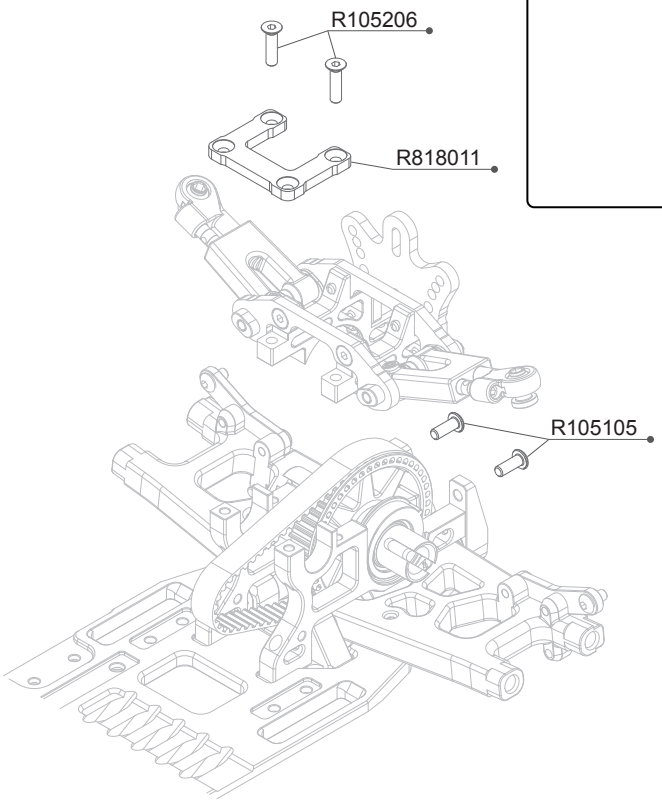


NOTICE

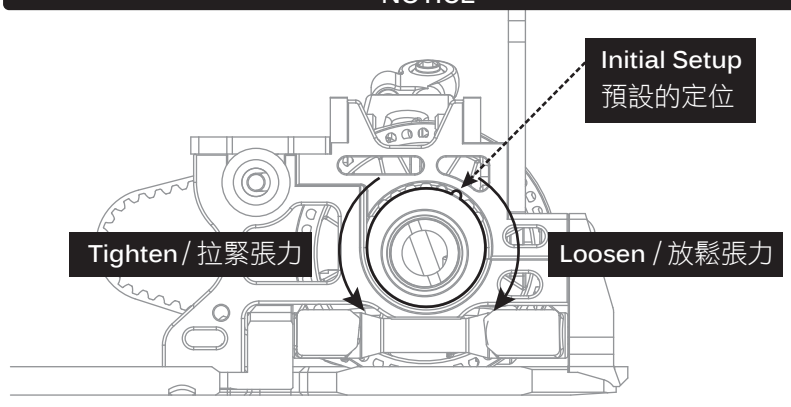

TO ADJUST BELT TENSION / 請依圖示調整皮帶張力

R105105 3x8 Round Screw (10)
R105206 3x12mm Flat Screw (10)
R818011 R8.1 Rear Anit-Roll Bar Cover


R8.3E BAG 03 PARTS EXPLORE VIEW

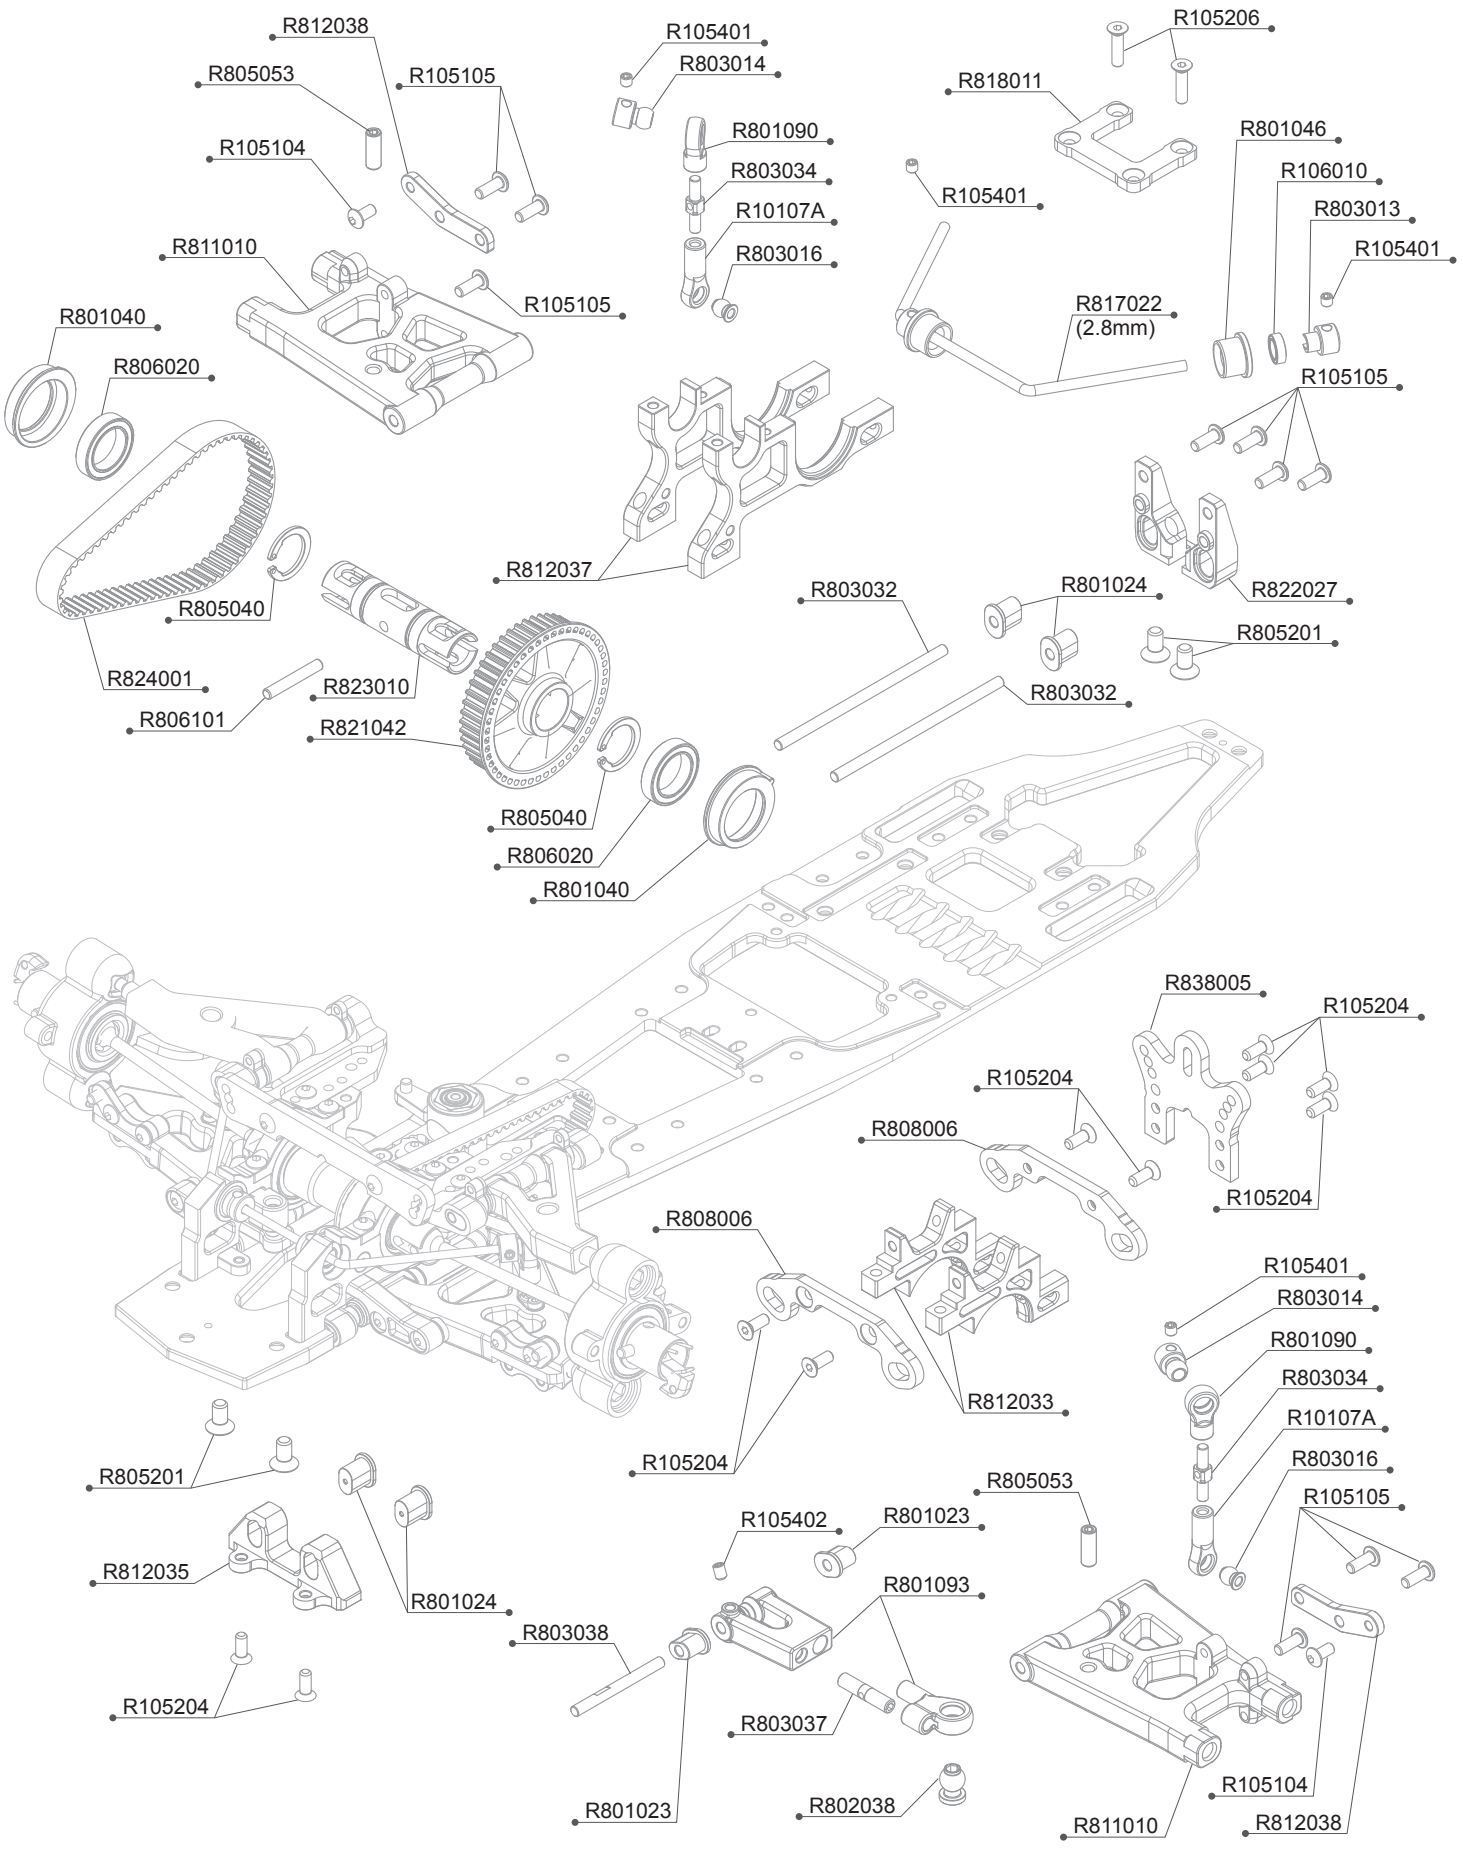


R8.3E BAG 03 PARTS LIST

R10107A	Ball Joint 4.9mm Open (6pcs)
R105104	3x6 Round Screw (10)
R105105	3x8 Round Screw (10)
R105204	3x8mm Flat Screw (10)
R105206	3x12mm Flat Screw (10)
R105401	3x3mm Set Screw (10)
R105402	3x4mm Set Screw (10)
R106010	5x8x2.5mm Ball Bearing (4pcs)
R801023	Suspension Bracket Insert-Open (8)
R801024	Suspension Bracket Insert-Closed (8)
R801040	Bearing Bushing -Solid Axle (2)
R801046	Anti-Roll Bar Bushing -Front (2)
R801090	Ball End 5.8mm (4)
R801093	Rear Upper Arm Set
R802038	Alu Ball Head 6.8mm (2)
R803013	Anti Roll Bar Stopper (2)
R803014	Anti Roll Bar Ball Head (2)
R803016	Ball Head 4.9mm (4)
R803032	Rear Low Arm Pin
R803034	3mm X 15mm Turnbuckle
R803037	4mm X 17mm Turnbuckle (2)
R803038	Rear Upper Arm Pin 3x32.5 (2)
R805040	12mm C Clip (6)
R805053	4x10mm Set Screw (10)
R805201	4x8mm Flat Screw (10)
R806020	12x18x4 Ball Bearing (4)
R806101	Pin 3x19.8 (6)
R808006	Rear Upper Link Plate
R811010	R8.2 Rear Low Arm-Long
R812033	R8.1 Rear Bulkhead Upper
R812035	R8.2 Rear Low Arm Bracket RF
R812037	R8.2 Rear Low Arm Bulkhead
R812038	R8.2 Rear Low Shock Mount (2)
R817022	R8.1 Rear Anti-Roll Bar 2.8mm
R818011	R8.1 Rear Anit-Roll Bar Cover
R821042	R8.3 Rear Pulley Set
R822027	R8.2 LCG Rear Low Arm Bracket-RR Separated
R823010	R8.2 Rear Solid Axle-Light
R824001	204-8mm Rubber Belt
R838005	R8.3 Rear Shock Tower

1:1 SCALE




R105104
3x6 Round Screw (10)



R105105
3x8 Round Screw (10)



R105204
3x8mm Flat Screw (10)



R105206
3x12mm Flat Screw (10)




R805201
4x8mm Flat Screw (10)




R105401
3x3mm Set Screw (10)



R105402
3x4mm Set Screw (10)



R805053
4x10mm Set Screw (10)




R806101
Ø3x19.8 Pin (6)



R106010
5x8x2.5mm Ball Bearing (4)




R805040
12mm C Clip (6)

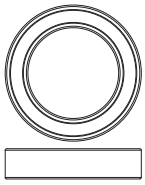


R806020
12x18x4mm Ball Bearing (4)



1:1 Scale

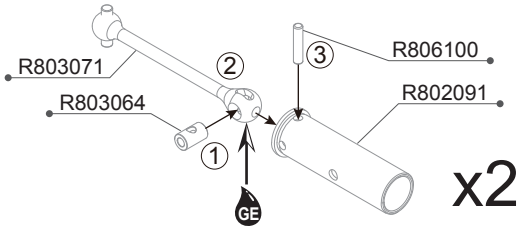


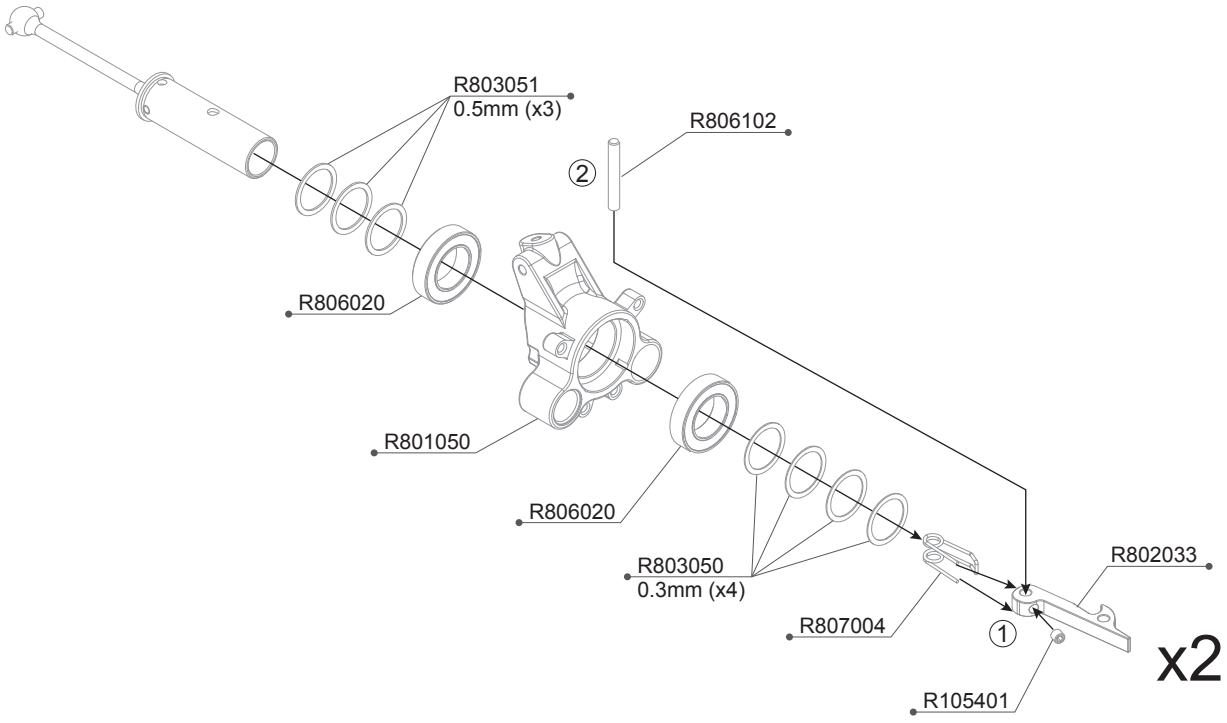


R105401	3x3mm Set Screw (10)
R801050	Rear Upright
R802033	Rear Tire Hook (2)
R802091	Rear Wheel Axle - Alu (2)
R803050	12.1x15x0.3mm Shims (10)
R803051	12.1x15x0.5mm Shims (10)
R803064	CVD Insert (2)
R803071	Rear CVD Shaft (2)
R806020	12x18x4 Ball Bearing (4)
R806100	Pin 2.5x11.8 (6)
R806102	Pin 3x20.8 (6)
R807004	Tire Hook Spring (4)

NOTICE

#R801043 ECCENTRIC HUB INSTRUCTION / 偏心輪座説明

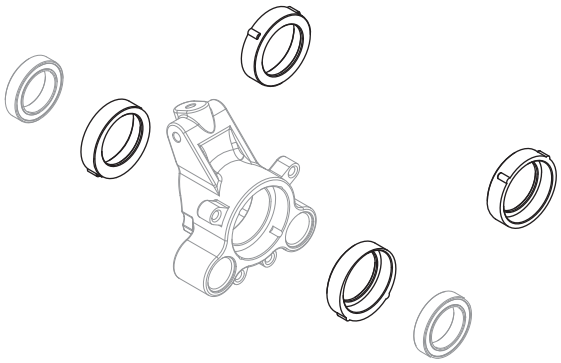


Wheel axle rise 1mm(Default Setup) / 輪軸昇高1㎜(預設的位置)

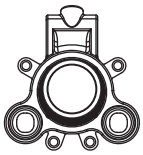

Default setup, it give best overall stability.

預設的位置，車輛整體的穩定性最佳。

Wheel axle in center / 輪軸置中

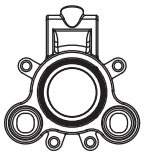

Rear ride height will increase 1mm, and it increase overall steering .


後方車高會昇高1mm，會增加車輛整體的反應與轉向性。

BAG 04




R805049
3x16mm Set Screw (10)

1:1 Scale

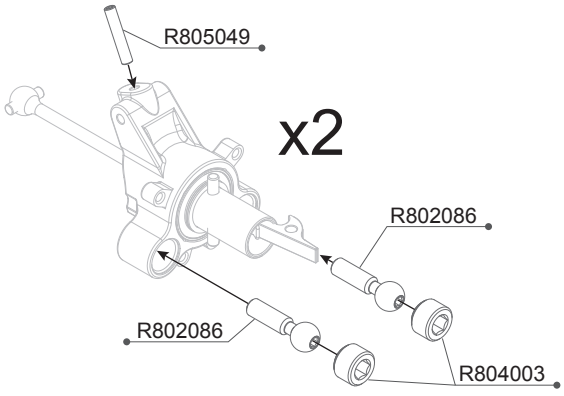

NOTICE

Reserved 6mm / 預留6mm

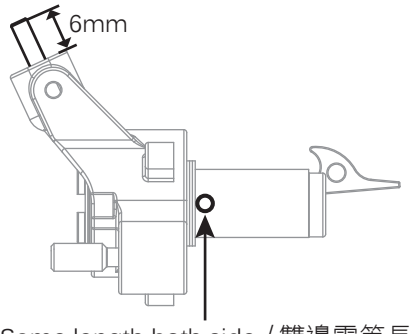

Same length both side / 雙邊需等長

R802086 7.9mm Ball End Long-Alu (4)
R804003 7.9mm Ball End Nut (4)

R805049 3x16mm Set Screw (10)


R801082
3x7x1mm Shims (2)


R801082
3x7x2mm Shims (2)

1:1 Scale

NOTICE
Rear low arm width setup
後下擺臂寬度的設定

Rear track width 262mm /預設後車寬262mm

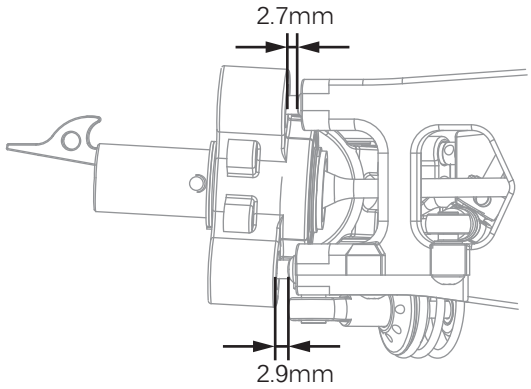

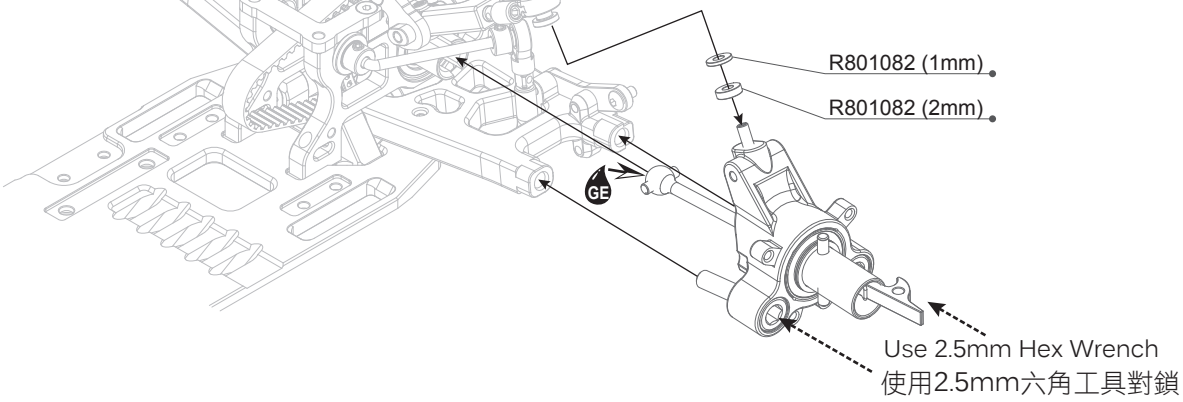


R801082 3x7x1mm & 2mm Shims (2)

BAG 04

R105106
3x10 Round Screw (10)


1:1 Scale

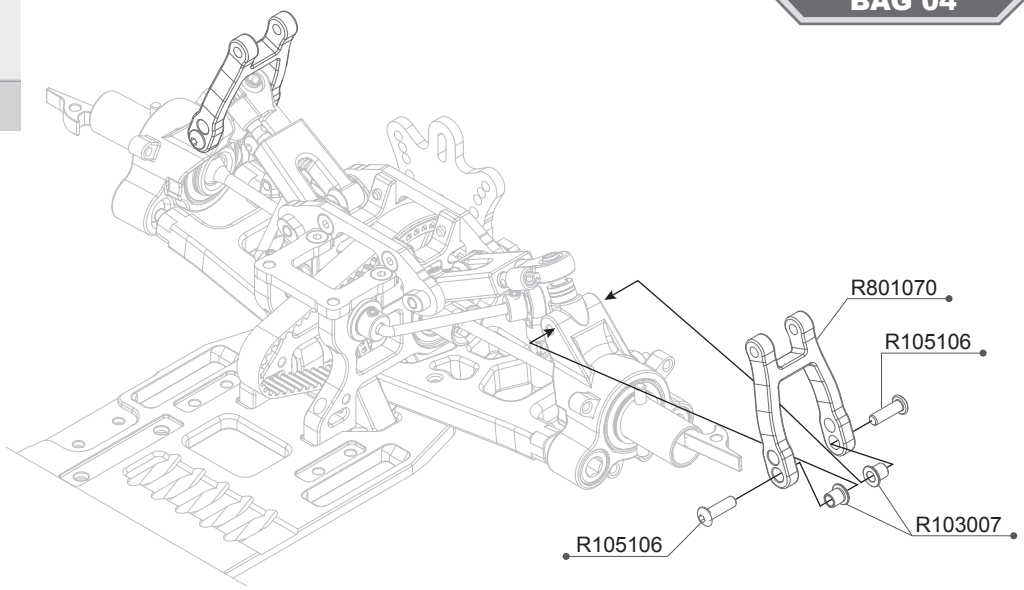

R103007 Steering Block Bushing(4pcs)
R105106 3x10 Round Screw (10)
R801070 Rear Body Mount Arm (2)



R105105
3x8 Round Screw (10)



R105109
3x16 Round Screw (10)




R102015
3x5.5x2mm Alu Shims (8)

R105402
3x4mm Set Screw (10)



R105150
3mm Nylon Nut (10)


1:1 Scale

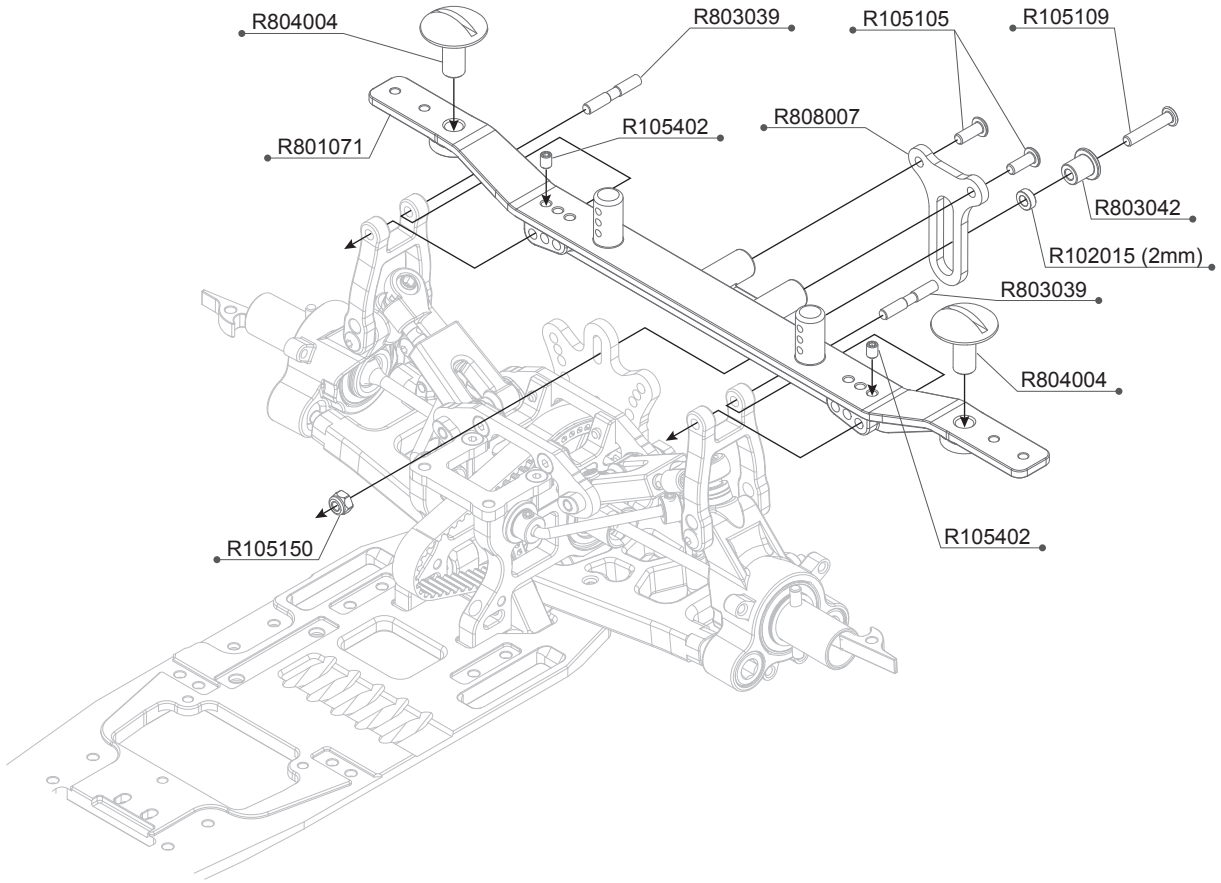

Option Parts (Not Included) / 改裝品(未附於套件內)


R819001 R8.1 Rear Body Mount Ball Bearing Tower Set

Function:Less friction for rear body tower
可減少後車殼固定架的磨擦使活動更順暢

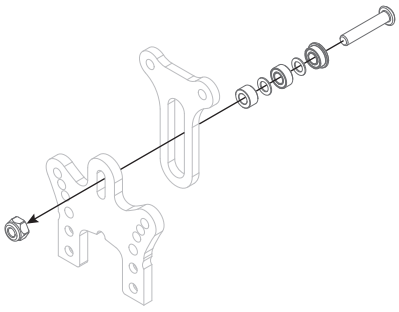

R102015	3x5.5x2mm Alu Shims(8pcs)
R105105	3x8 Round Screw (10)
R105109	3x16 Round Screw (10)
R105150	3mm Nylon Nut (10)
R105402	3x4mm Set Screw (10)
R801071	Rear Body Mount
R803039	Rear Body Mount Pin 3x19.5 (2)
R803042	Rear Body Mount Nut
R804004	Body Mount Screw(4)
R808007	Rear Body Mount Plate

R8.3E BAG 04 PARTS EXPLORE VIEW

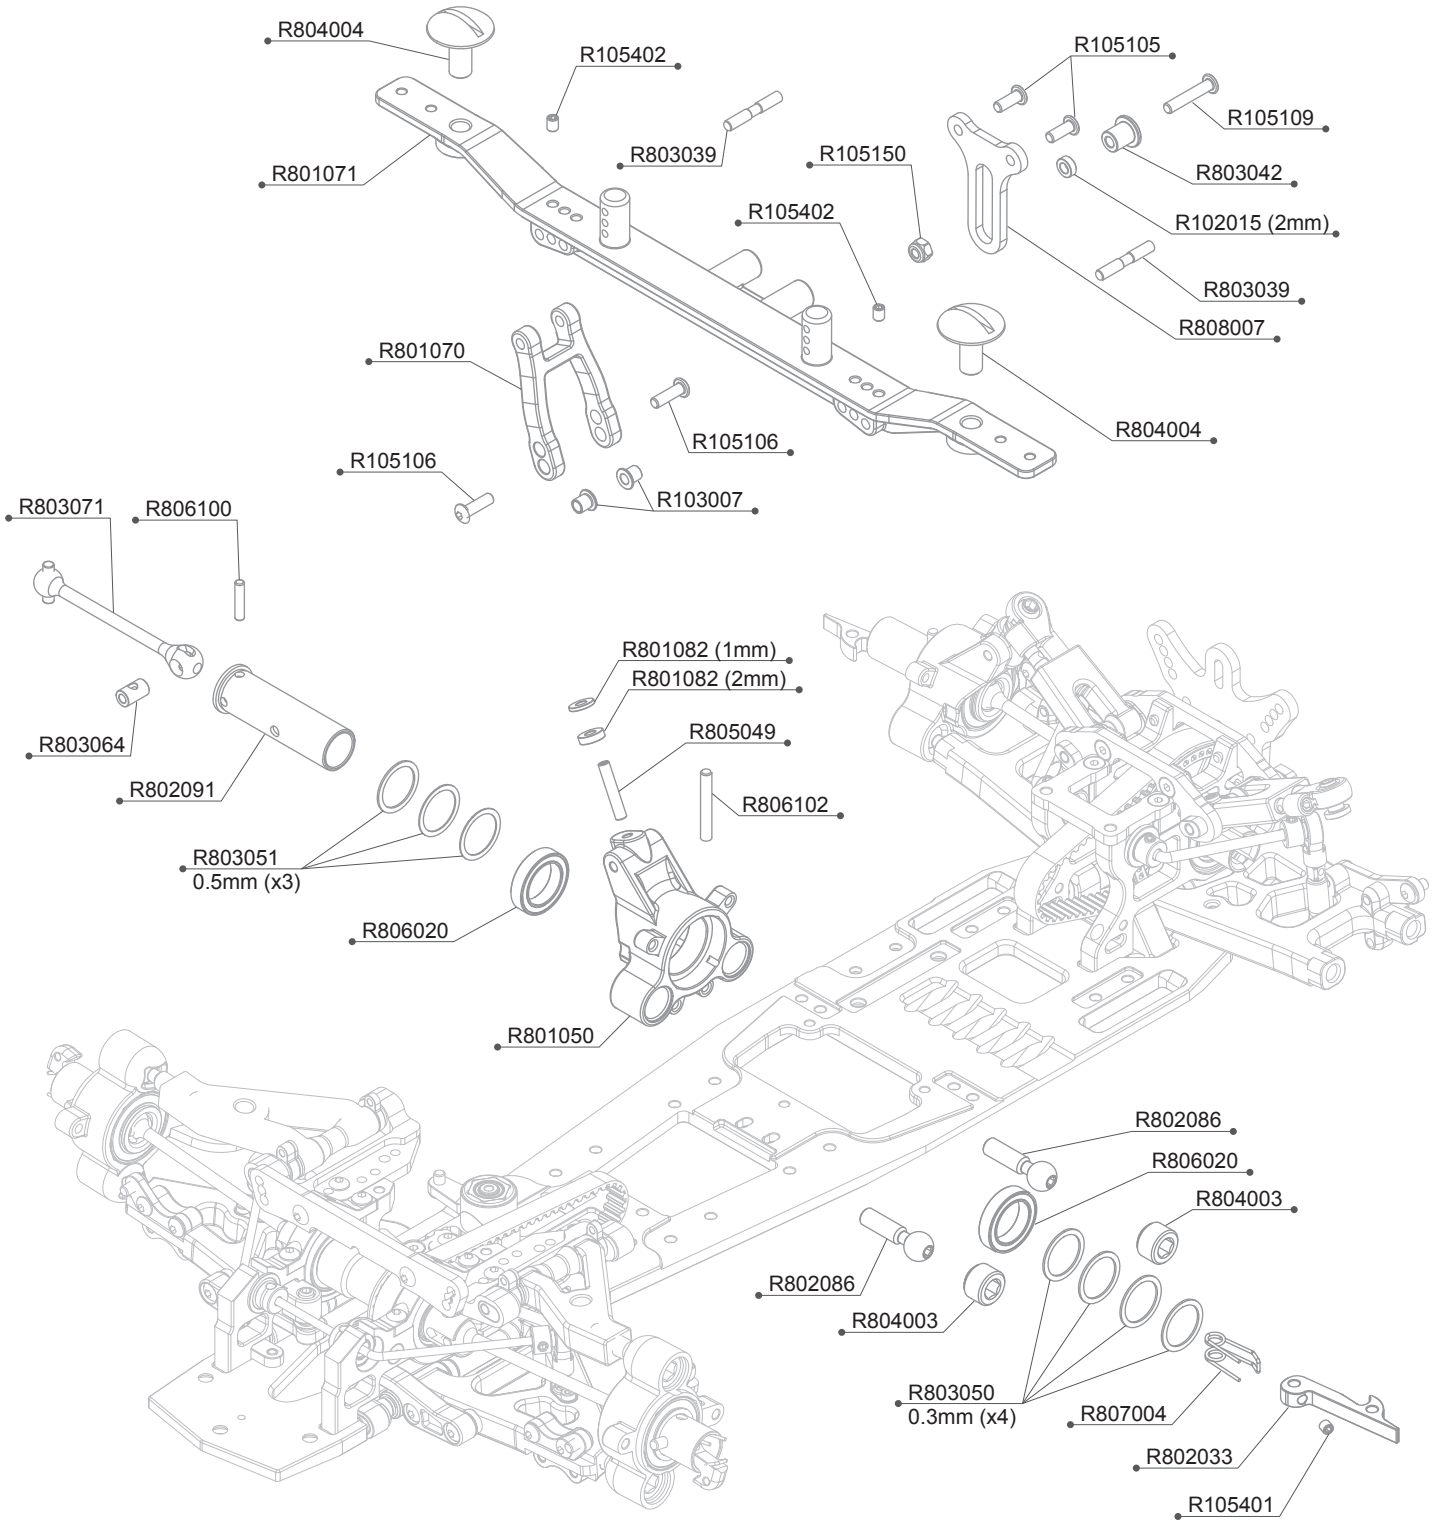

R8.3E BAG 04 PARTS LIST

R102015	3x5.5x2mm Alu Shims(8pcs)
R103007	Steering Block Bushing(4pcs)
R105105	3x8 Round Screw (10)
R105106	3x10 Round Screw (10)
R105109	3x16 Round Screw (10)
R105150	3mm Nylon Nut (10)
R105401	3x3mm Set Screw (10)
R105402	3x4mm Set Screw (10)
R801050	Rear Upright
R801070	Rear Body Mount Arm (2)
R801071	Rear Body Mount
R801082	3x7x1mm & 2mm Shims (2)
R802033	Rear Tire Hook (2)
R802086	7.9mm Ball End Long-Alu (4)
R802091	Rear Wheel Axle - Alu (2)
R803039	Rear Body Mount Pin 3x19.5 (2)
R803042	Rear Body Mount Nut
R803050	12.1x15x0.3mm Shims (10)
R803051	12.1x15x0.5mm Shims (10)
R803064	CVD Insert (2)
R803071	Rear CVD Shaft (2)
R804003	7.9mm Ball End Nut (4)
R804004	Body Mount Screw(4)
R805049	3x16mm Set Screw (10)
R806020	12x18x4 Ball Bearing (4)
R806100	Pin 2.5x11.8 (6)
R806102	Pin 3x20.8 (6)
R807004	Tire Hook Spring (4)
R808007	Rear Body Mount Plate

1:1 SCALE



R102015
3x5.5x2mm Alu Shims (8)



R801082
3x7x1mm & 2mm Shims (2)




R801082
3x7x1mm & 2mm Shims (2)


R105401
3x3mm Set Screw (10)




R105402
3x4mm Set Screw (10)




R105105
3x8 Round Screw (10)




R105106
3x10 Round Screw (10)




R105109
3x16 Round Screw (10)



R805049
3x16mm Set Screw (10)




R806100
Ø2.5x11.8 Pin (6)




R806102
Ø3x20.8 Pin (6)




R105150
3mm Nylon Nut (10)

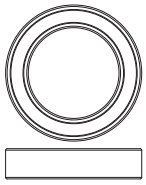

R806020
12x18x4mm Ball Bearing (4)

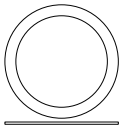

R803050
12.1x15x0.3mm Shims (10)

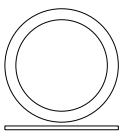

R803051
12.1x15x0.5mm Shims (10)



R105203
3x6mm Flat Screw (10)



R805050
4x4mm Set Screw (10)




R806111
Ø3x11.8 Pin (6)




R805046
E-Clip 7mm (6)

1:1 Scale

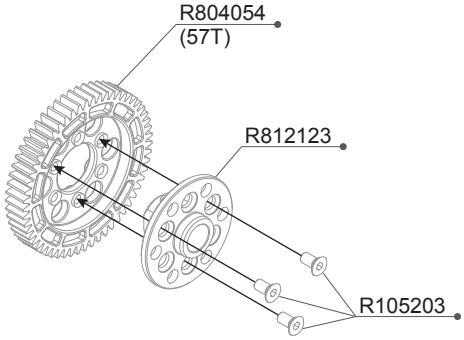


Option Parts (Not Included)
/ 改裝品(未附於套件內)

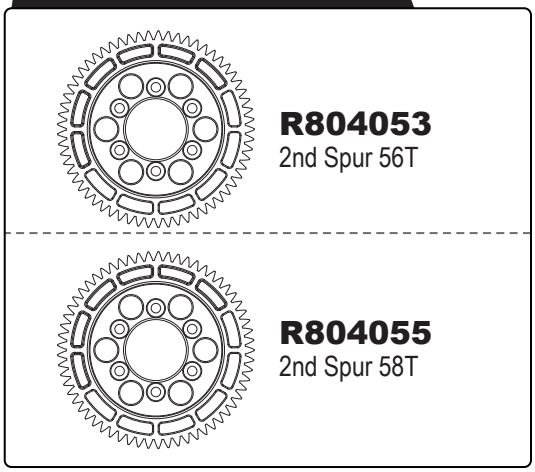


R804053
2nd Spur 56T


R804055
2nd Spur 58T

Option Parts (Not Included)
/ 改裝品(未附於套件內)

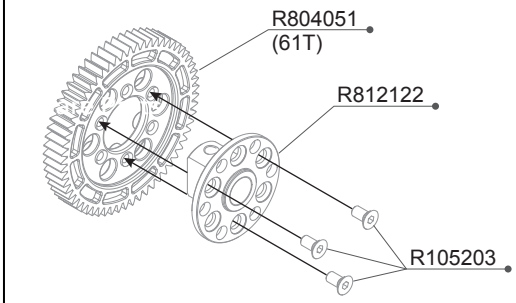


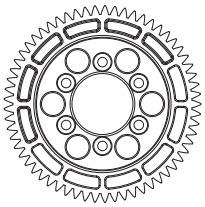


R804050
1st Spur 60T

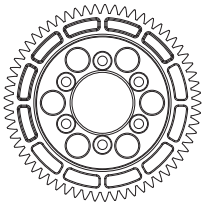


R804051
1st Spur 61T

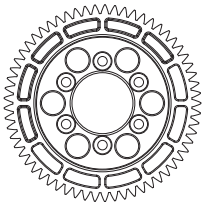

R804052
1st Spur 62T

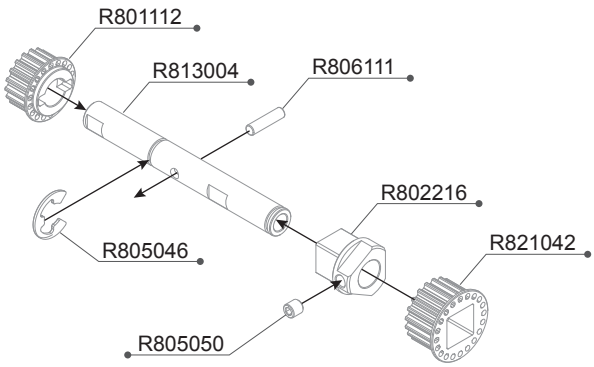

R105203 3x6mm Flat Screw (10)
R801112 Pulley Set -Middle
R802216 Pulley Adaptor
R804054 2nd Spur 57T
R805046 E-Clip 7mm (6)
R805050 4x4mm Set Screw (10)
R806111 Pin 3x11.8 (6)
R812123 Spur Adaptor 2nd Speed
R813004 R8.1E Main Shaft
R821042 R8.3 Rear Pulley Set



R806011
8x14x4 Ball Bearing (2)



R805046
E-Clip 7mm (6)





R805050
4x4mm Set Screw (10)




R105204
3x8mm Flat Screw (10)

1:1 Scale

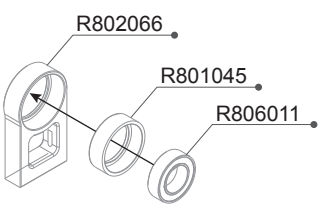

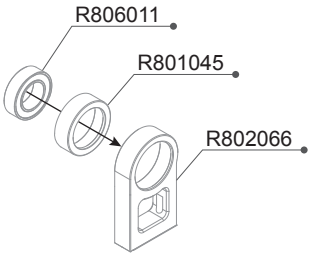

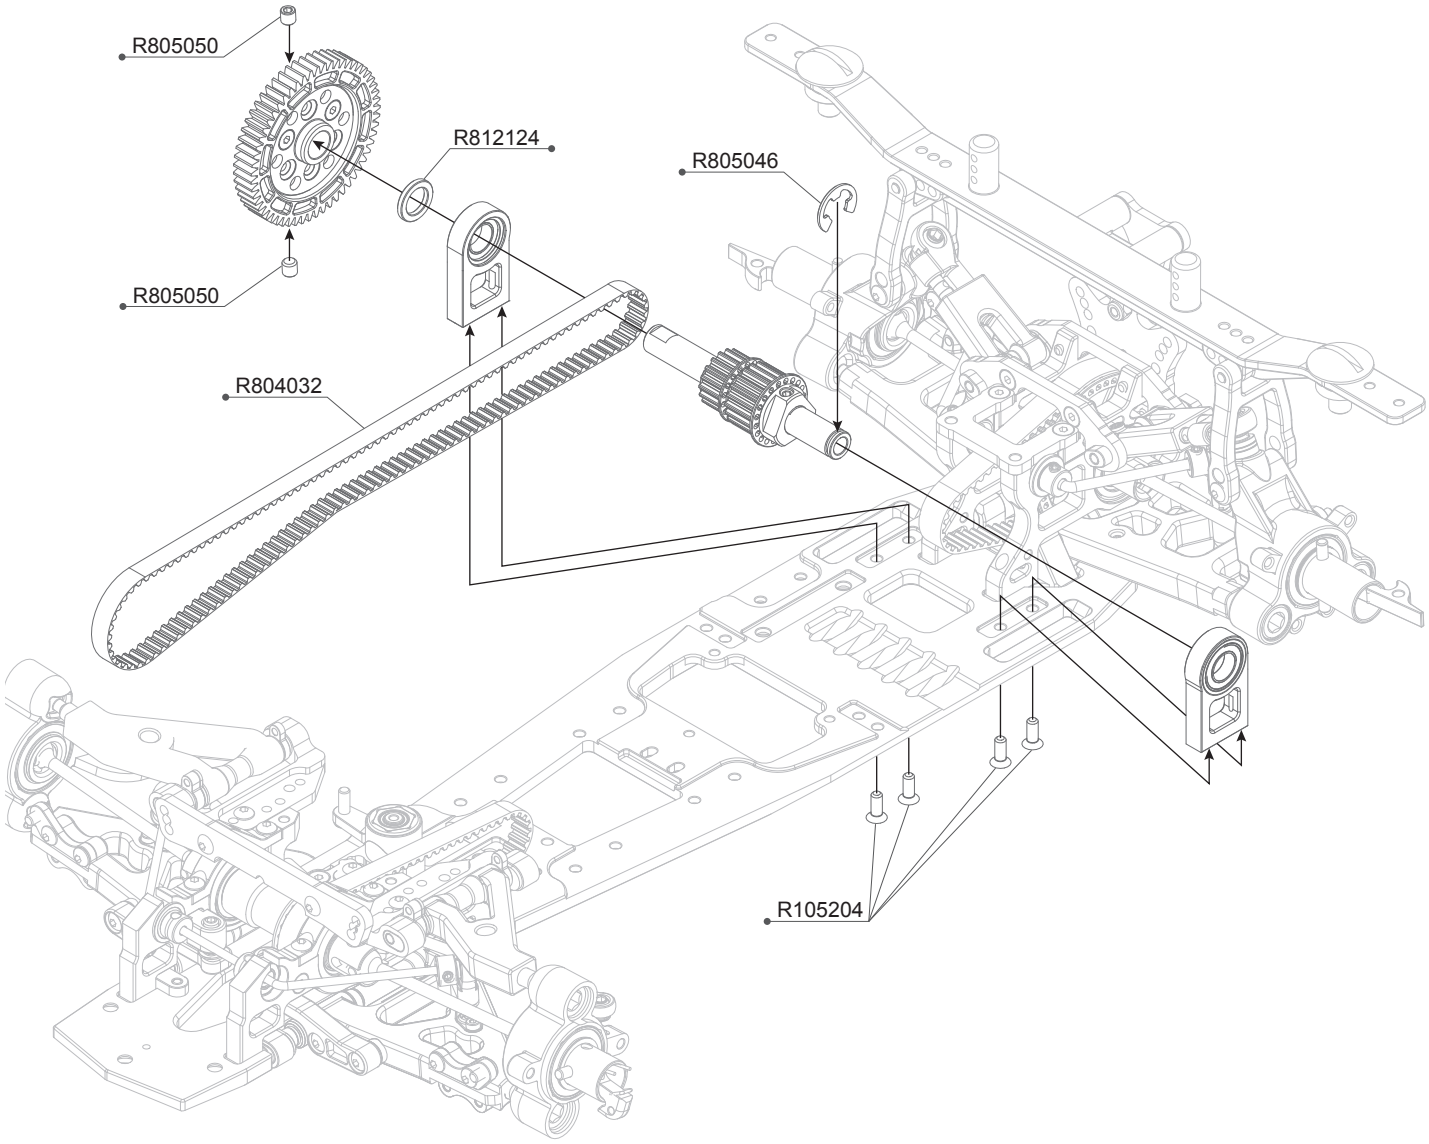


R105204	3x8mm Flat Screw (10)	R805046	E-Clip 7mm (6)
R801045	Bearing Bushing -Main Shaft (2)	R805050	4x4mm Set Screw (10)
R802066	2-Speed Shaft Bracket-High L	R806011	8x14x4 Ball Bearing (2)
R804032	Middle Belt 435	R812124	8x12x1.6mm Alu Shims (2)



R805045
E-Clip 5mm (6)



R805101
4x6 Round Screw (10)





R806100
Ø2.5x11.8 Pin (6)



R806006
6x13x5 Ball Bearing (2)

1:1 Scale

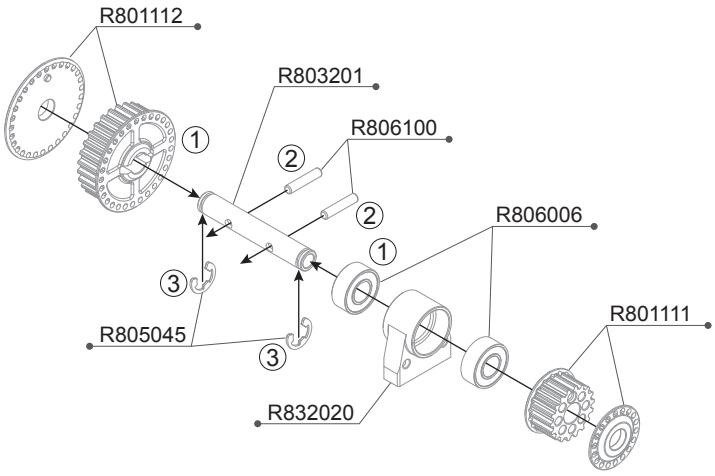

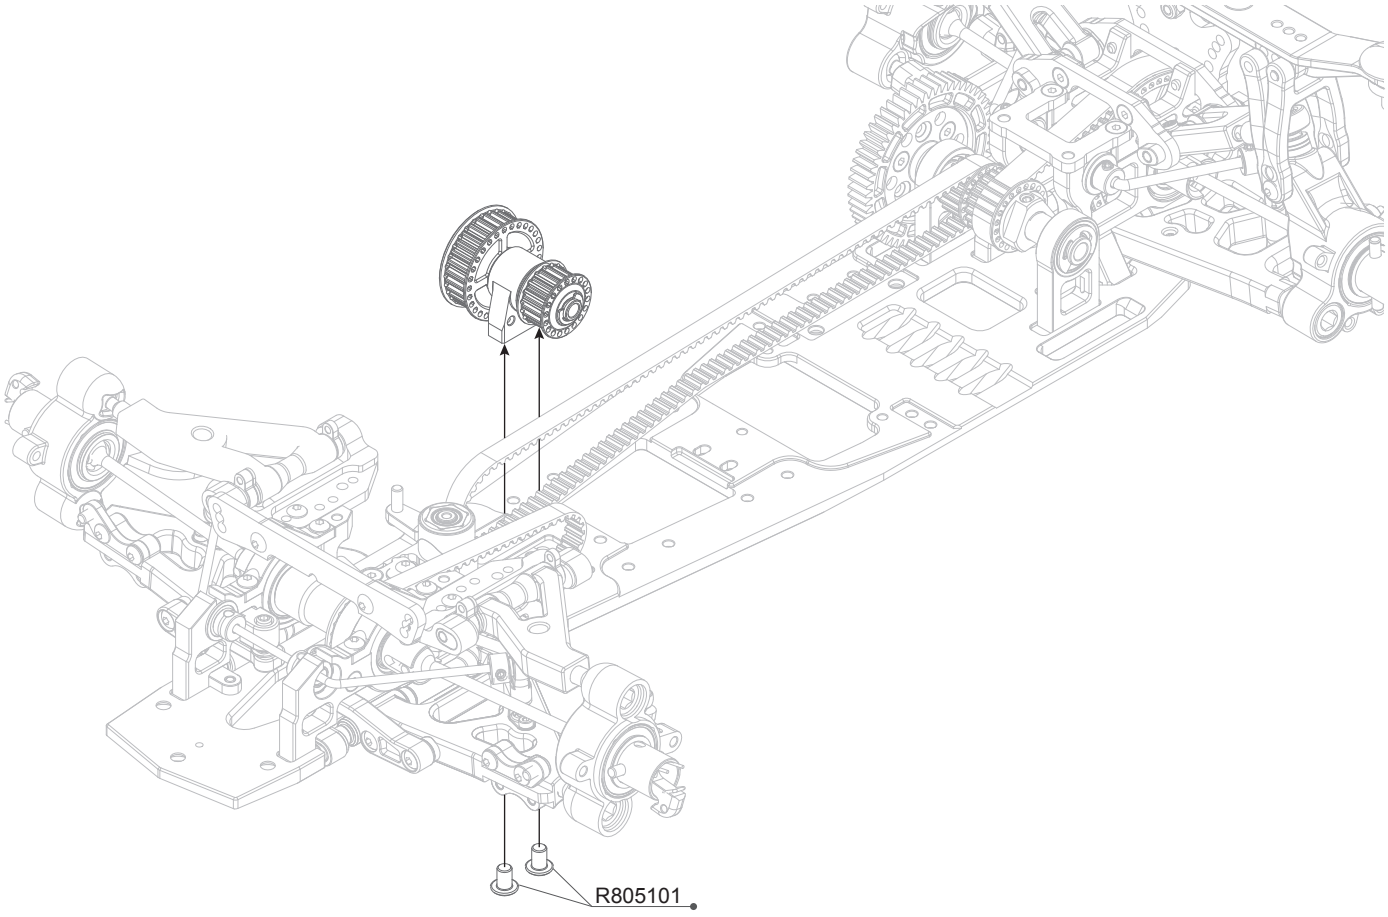


R801111	Pulley Set -Front	R805101	4x6 Round Screw (10)
R801112	Pulley Set -Middle	R806006	6x13x5 Ball Bearing (2)
R803201	R8.0E Middle Shaft	R806100	Pin 2.5x11.8 (6)
R805045	E-Clip 5mm (6)	R832020	R8.3E Middle Shaft Base


R105204
3x8mm Flat Screw (10)

R805201
4x8mm Flat Screw (10)


1:1 Scale

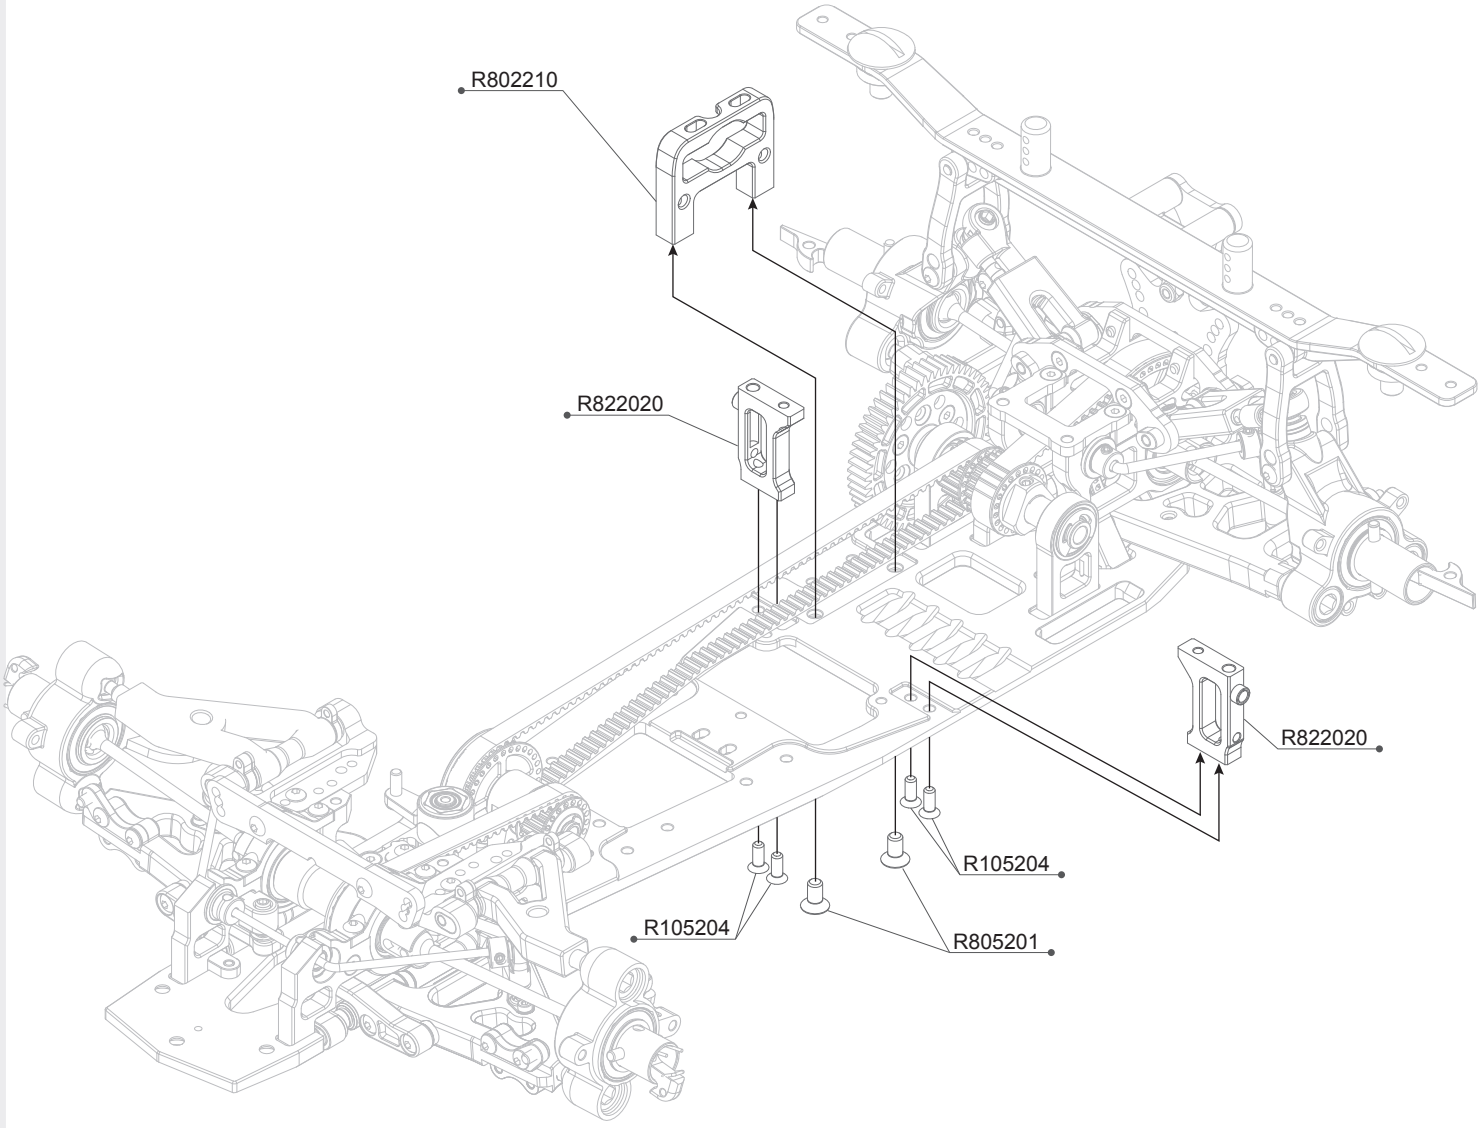

R105204	3x8mm Flat Screw (10)	R805201	4x8mm Flat Screw (10)
R802210	R8.0E Motor Bulkhead	R822020	R8.2 LCG Center Bulkhead



R805103
4x10 Round Screw (10)




R805203
4x12mm Flat Screw (10)




R805302
4mm Nylon Nut (10)

1:1 Scale

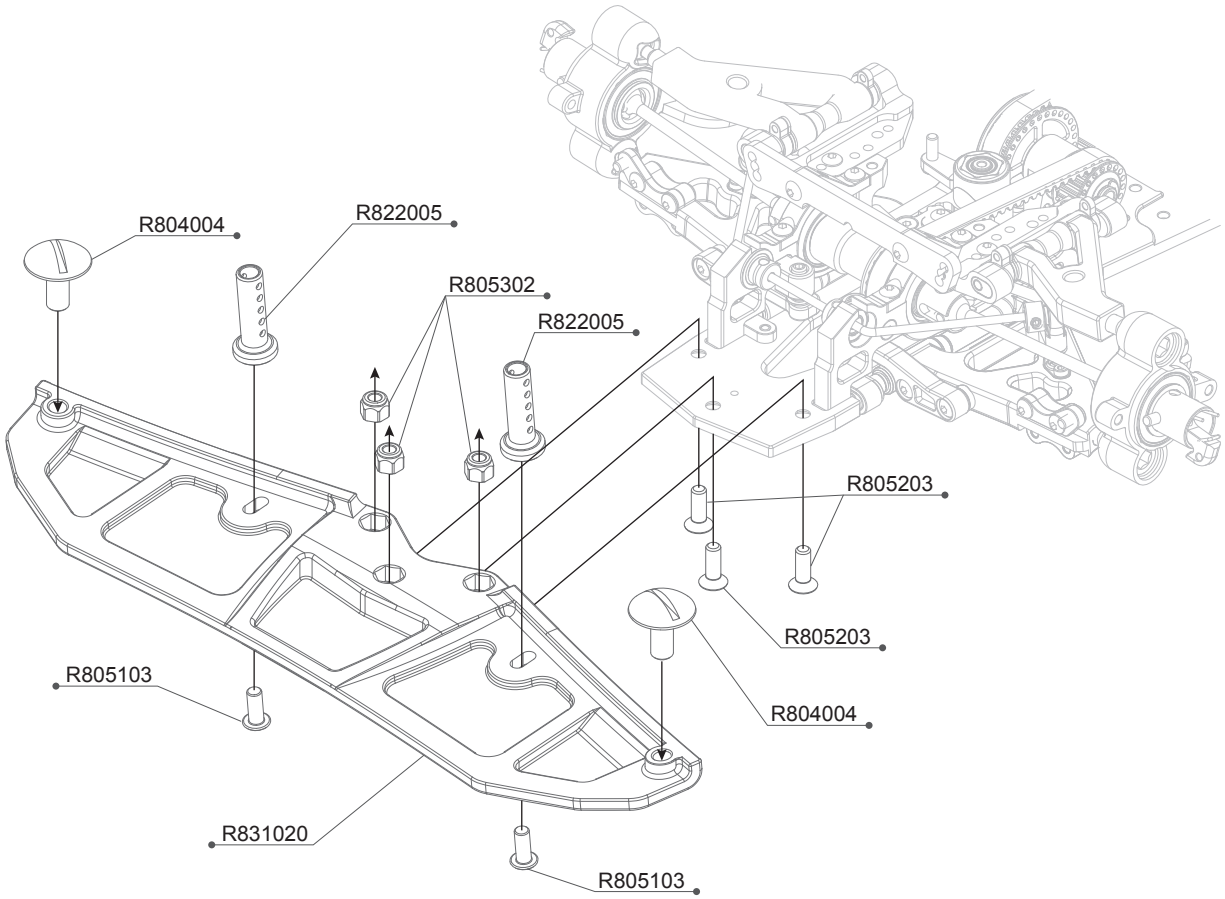


NOTICE

The front body tower is able to move 4mm for fine tune the body-shell position, recommend to start from position 0.
前車殼支柱共有4mm的距離可用來微調車殼的位置，建議由圖示中的0做為起啟位置。

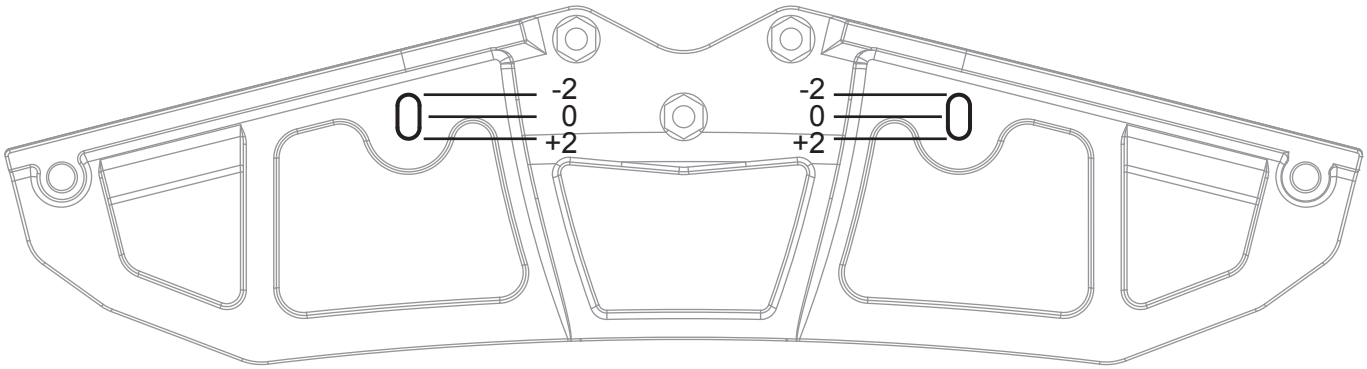

R804004	Body Mount Screw(4)	R805302	4mm Nylon Nut (10)
R805103	4x10 Round Screw (10)	R822005	1/8 On-Road Car Front Body Tower (Alu) (2)
R805203	4x12mm Flat Screw (10)	R831020	R8.3 Light Weight Bumper Set




R105105
3x8 Round Screw (10)




R105205
3x10mm Flat Screw (10)

1:1 Scale

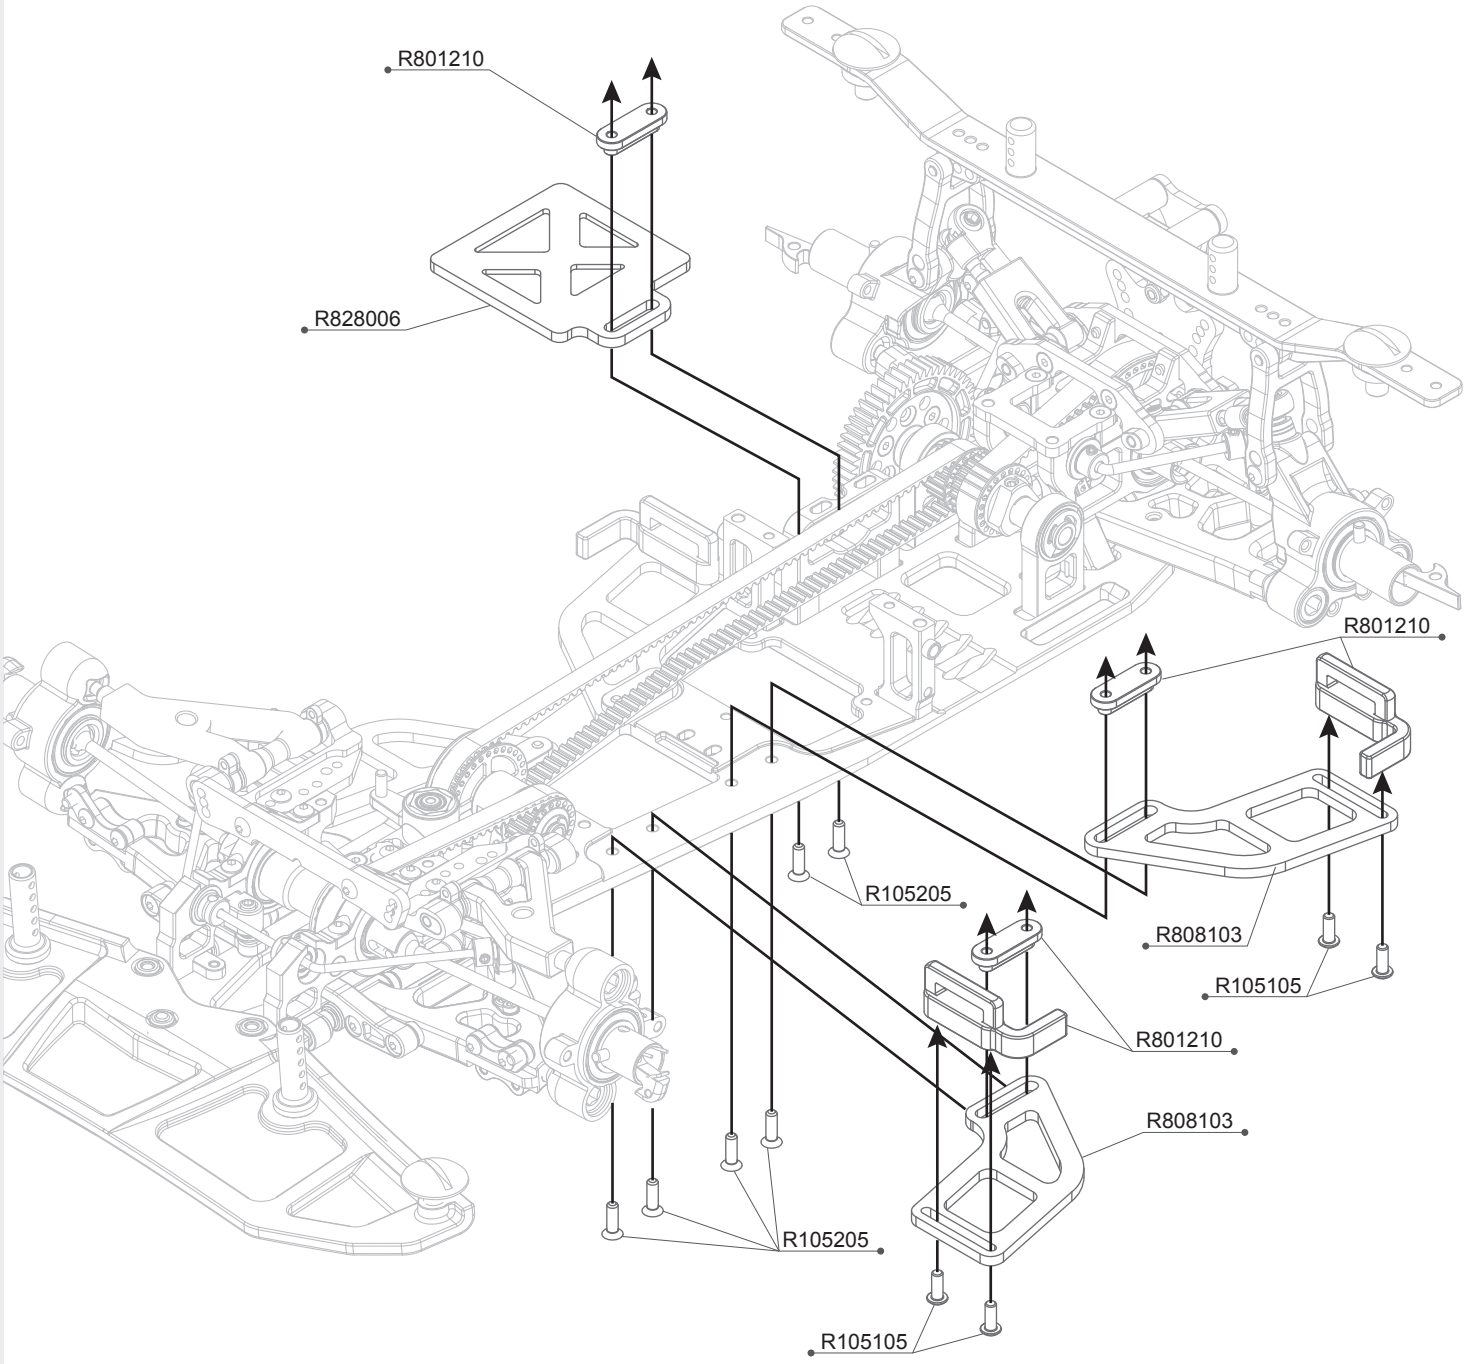

R105105	3x8 Round Screw (10)	R808103	Battery Holder Carbon (2)
R105205	3x10mm Flat Screw (10)	R828006	R8.3E ESC Plate
R801210	Battery Mount		


R8.3E BAG 05 PARTS EXPLORE VIEW

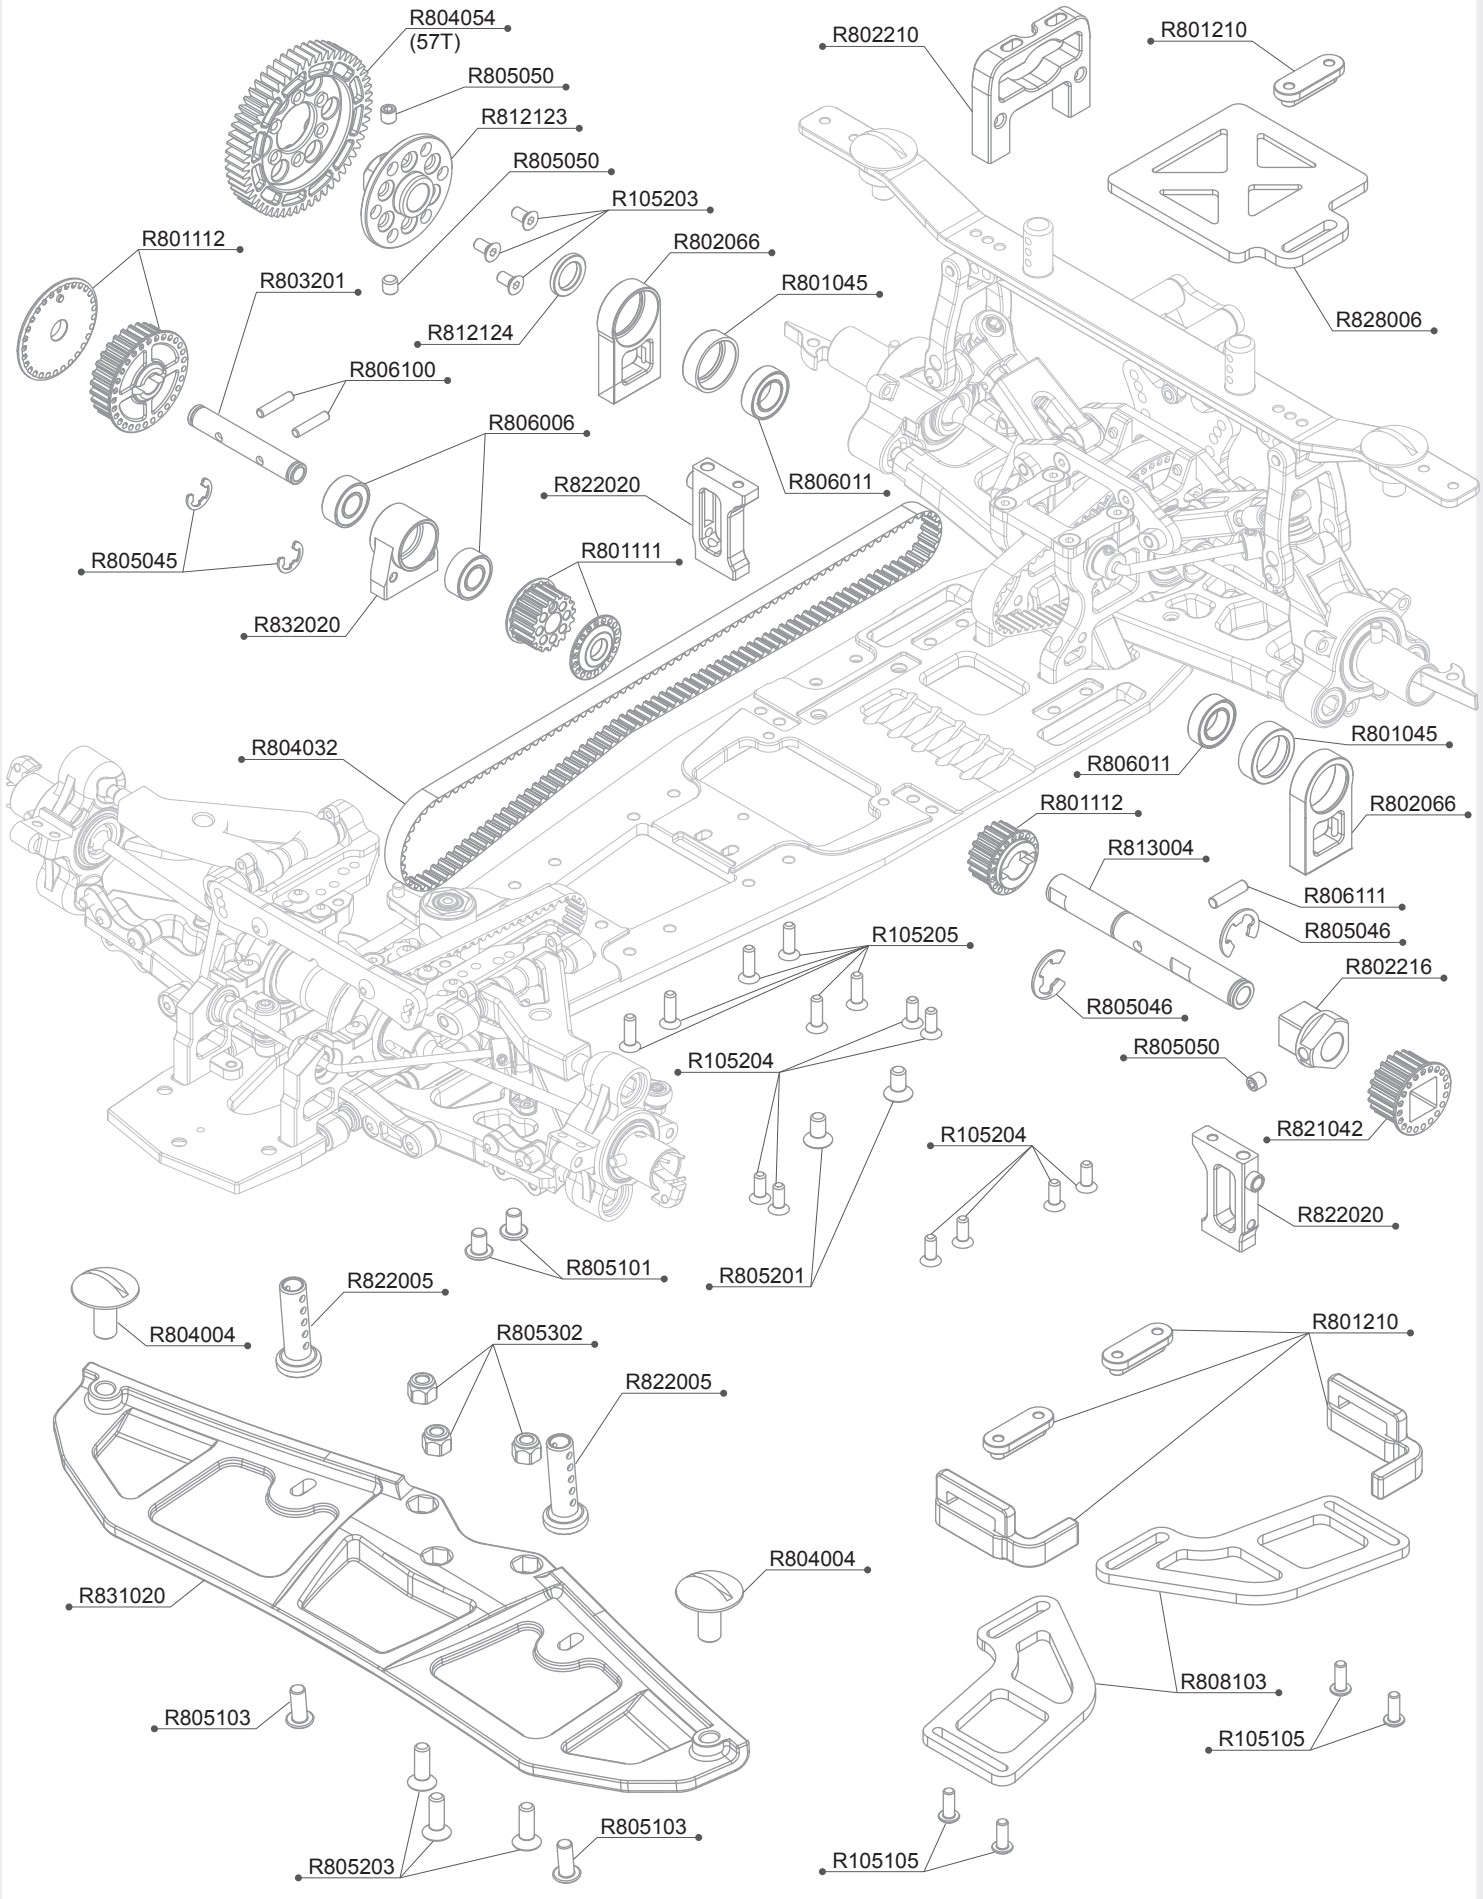


R8.3E BAG 05 PARTS LIST

R105105	3x8 Round Screw (10)
R105203	3x6mm Flat Screw (10)
R105204	3x8mm Flat Screw (10)
R105205	3x10mm Flat Screw (10)
R801045	Bearing Bushing -Main Shaft (2)
R801111	Pulley Set -Front
R801112	Pulley Set -Middle
R801210	Battery Mount
R802066	2-Speed Shaft Bracket-High L
R802210	R8.0E Motor Bulkhead
R802216	Pulley Adaptor
R803201	R8.0E Middle Shaft
R804004	Body Mount Screw(4)
R804032	Middle Belt 435
R804054	2nd Spur 57T
R805045	E-Clip 5mm (6)
R805046	E-Clip 7mm (6)
R805050	4x4mm Set Screw (10)
R805101	4x6 Round Screw (10)
R805103	4x10 Round Screw (10)
R805201	4x8mm Flat Screw (10)
R805203	4x12mm Flat Screw (10)
R805302	4mm Nylon Nut (10)
R806006	6x13x5 Ball Bearing (2)
R806011	8x14x4 Ball Bearing (2)
R806100	Pin 2.5x11.8 (6)
R806111	Pin 3x11.8 (6)
R808103	Battery Holder Carbon (2)
R812123	Spur Adaptor 2nd Speed
R812124	8x12x1.6mm Alu Shims (2)
R813004	R8.1E Main Shaft
R821042	R8.3 Rear Pulley Set
R822005	1/8 On-Road Car Front Body Tower (Alu) (2)
R822020	R8.2 LCG Center Bulkhead
R828006	R8.3E ESC Plate
R831020	R8.3 Light Weight Bumper Set
R832020	R8.3E Middle Shaft Base


1:1 SCALE



R105105
3x8 Round Screw (10)



R805101
4x6 Round Screw (10)




R805103
4x10 Round Screw (10)



R105203
3x6mm Flat Screw (10)




R105204
3x8mm Flat Screw (10)



R105205
3x10mm Flat Screw (10)




R805201
4x8mm Flat Screw (10)




R805203
4x12mm Flat Screw (10)



R805050
4x4mm Set Screw (10)



R806100
Ø2.5x11.8 Pin (6)



R806111
Ø3x11.8 Pin (6)




R805045
E-Clip 5mm (6)



R805046
E-Clip 7mm (6)



R805302
4mm Nylon Nut (10)




R806006
6x13x5 Ball Bearing (2)




R806011
8x14x4 Ball Bearing (2)

FRONT /前避震器

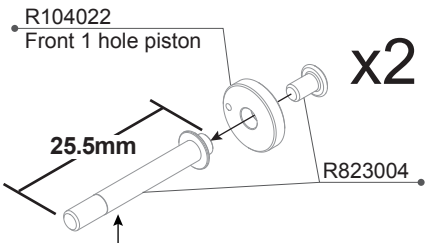



REAR /後避震器

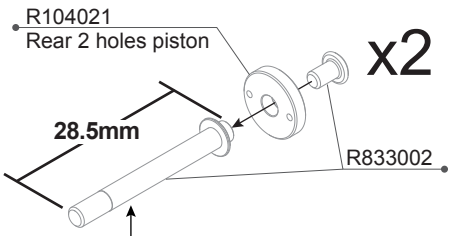



Option Parts (Not Included) / 改裝品(未附於套件內)


R839002 R8.3 Shock Shaft-Titanium Coating (4)

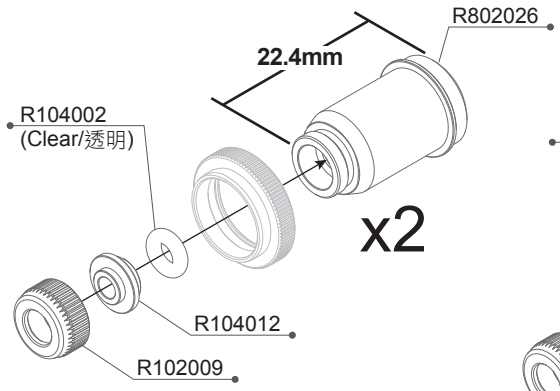


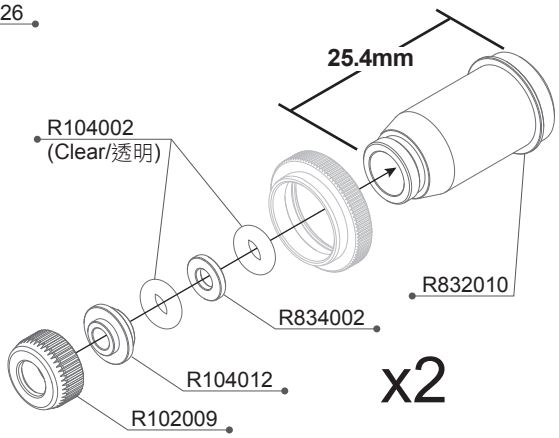

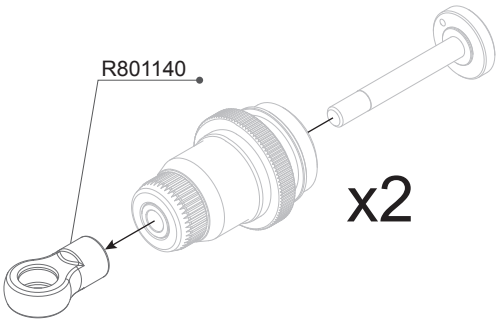

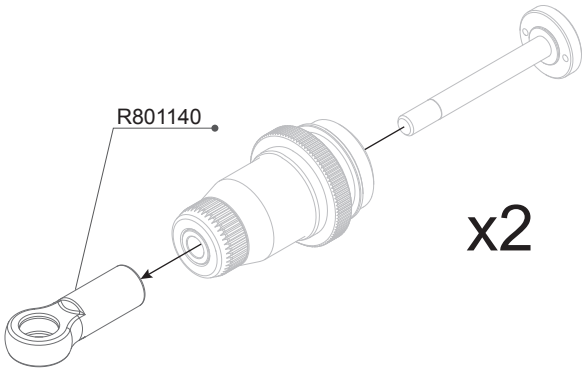

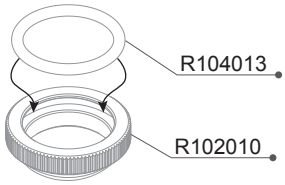

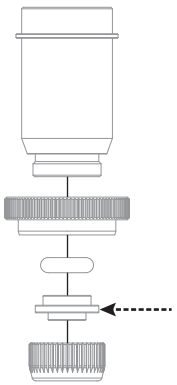



NOTICE



NOTICE


Fill #500 Cst Oil both front & rear
請使用#500CST避震油於前後避震器

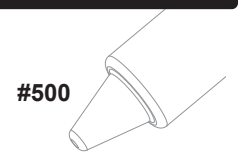

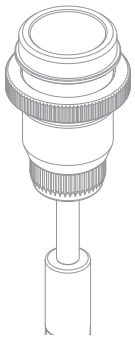



R102009	Shock Low Cap Alu(2pcs)
R102010	Shock ADJ Nut Alu (2pcs)
R104002	O'ring 3x2(4pcs)
R104012	Shock Shaft Shim(4pcs)
R104013	O'ring 13x1 (2pcs)
R104021	Shock Pistion 1mm X 2 Hole (4pcs)
R104022	Shock Pistion 1mm X 1 Hole (4pcs)
R801140	Shock Ball Joint Set V2
R802026	Shock Body-V2016 (2)
R823004	Shock Shaft-Screw Type (4)
R832010	R8.3 Rear Shock Body (2)
R833002	R8.3 Rear Shock Shaft (2)
R834002	Shock Shims (2)


FRONT/前避震器

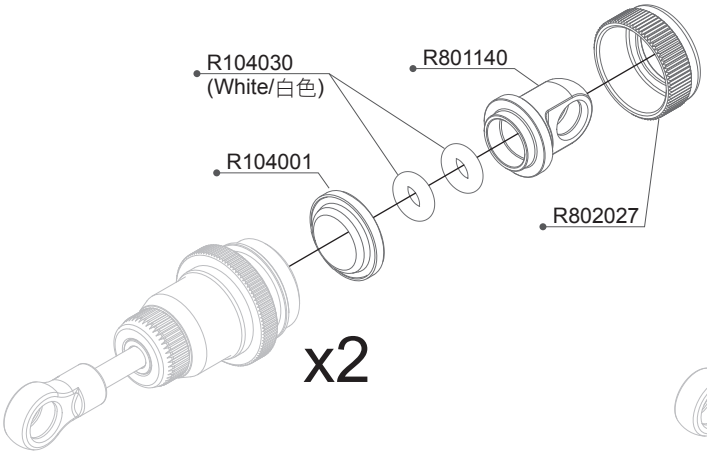

REAR/後避震器

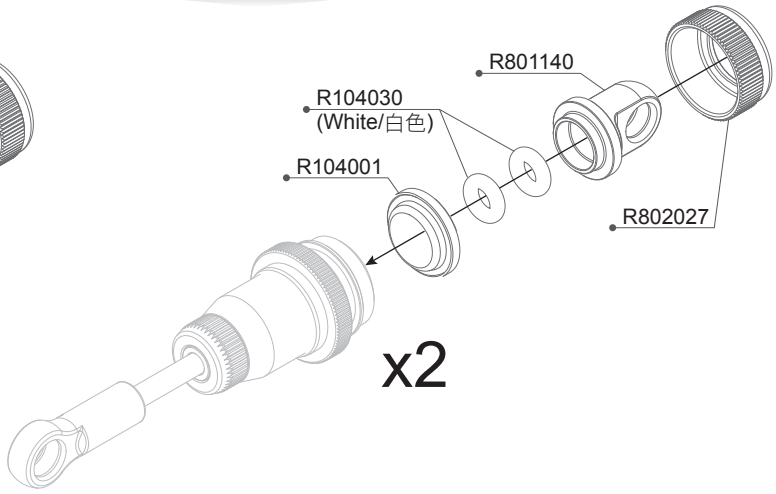


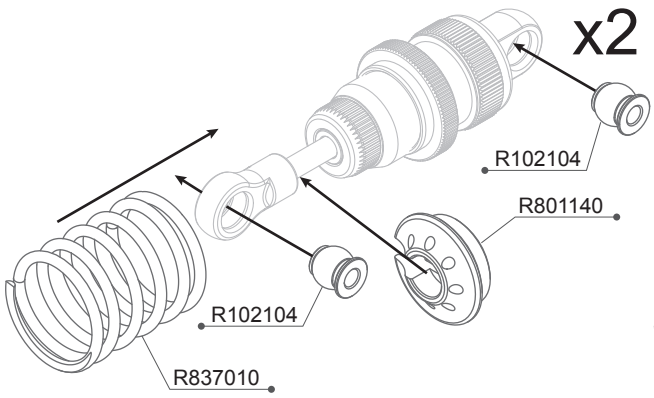

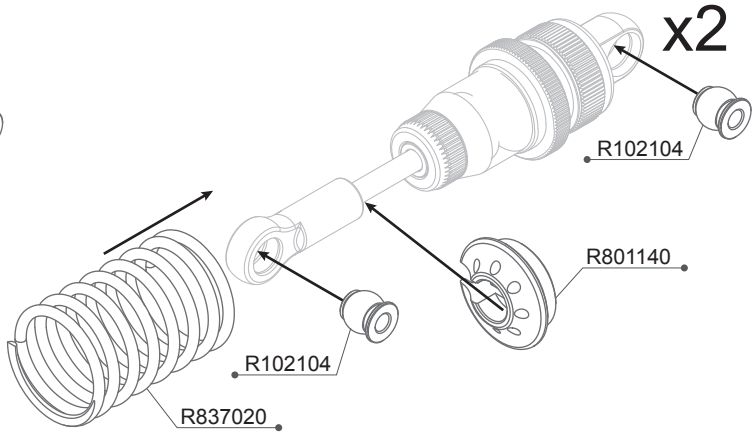


NOTICE

FRONT (Short) Set to 65.5mm
前避震器總長請設定成65.5mm

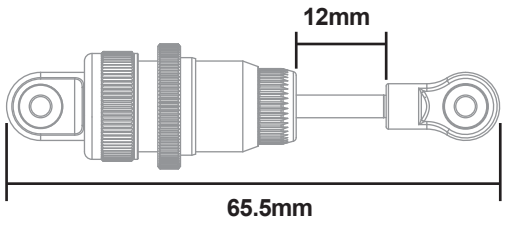


REAR (Long) Set to 74.5mm
後避震器總長請設定成74.5mm

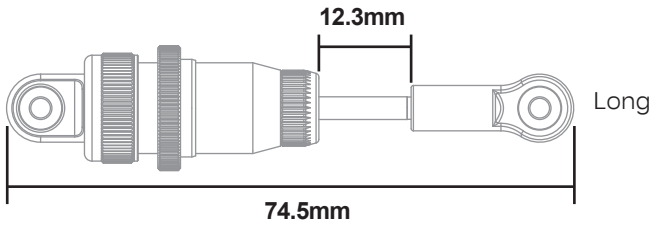


Build shocks to the following lengths / 請依圖示來設定避震器長度


R102104	5.8mm Ball end Short type Alu (4pcs)	R802027	Shock Cap-V2016 (2)
R104001	Shock Chamber(4pcs)	R837010	R8.3 Front Shock Spring-White
R104030	O'ring 3x2 (Soft)(4pcs)	R837020	R8.3 Rear Shock Spring-White
R801140	Shock Ball Joint Set V2		




R105104
3x6 Round Screw (10)

1:1 Scale

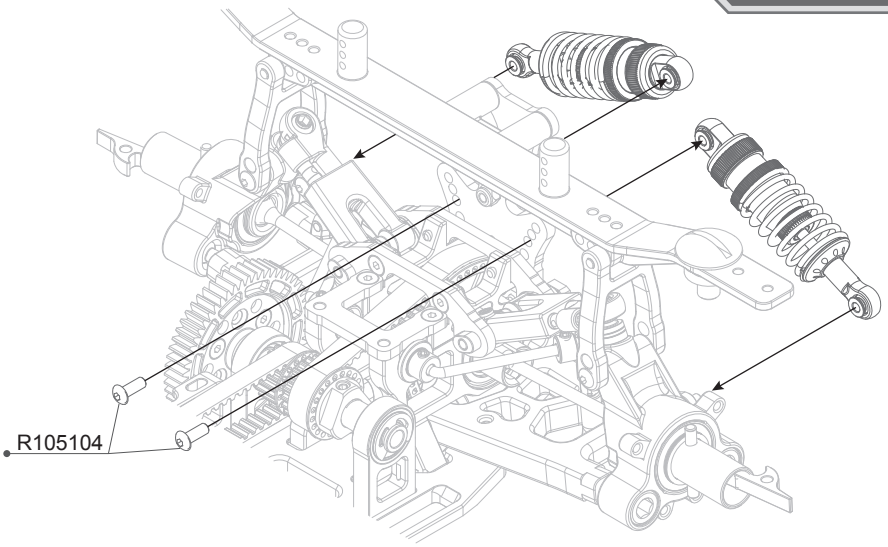

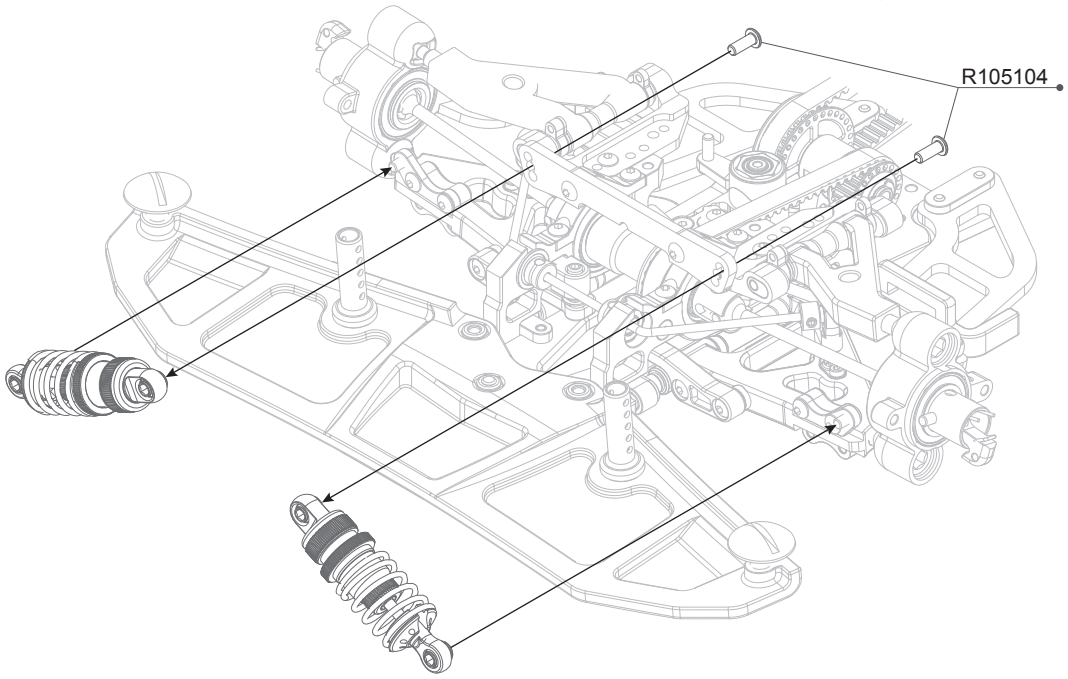

NOTICE

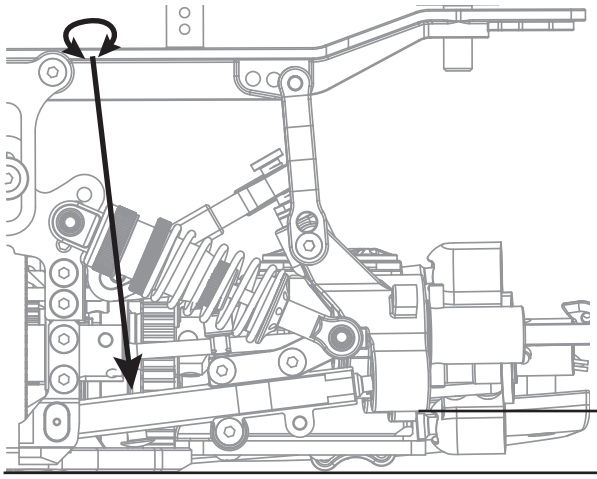


Using only ball 2.0mm hex wrench.
請使用2.0六角工具來調整上抬量。

Please setup the rear droop as above instruction / 請依圖示將後方上抬量設定成8mm

R105104 3x6 Round Screw (10)

R8.3E BAG 06 PARTS EXPLORE VIEW

REAR SHOCK
後避震器

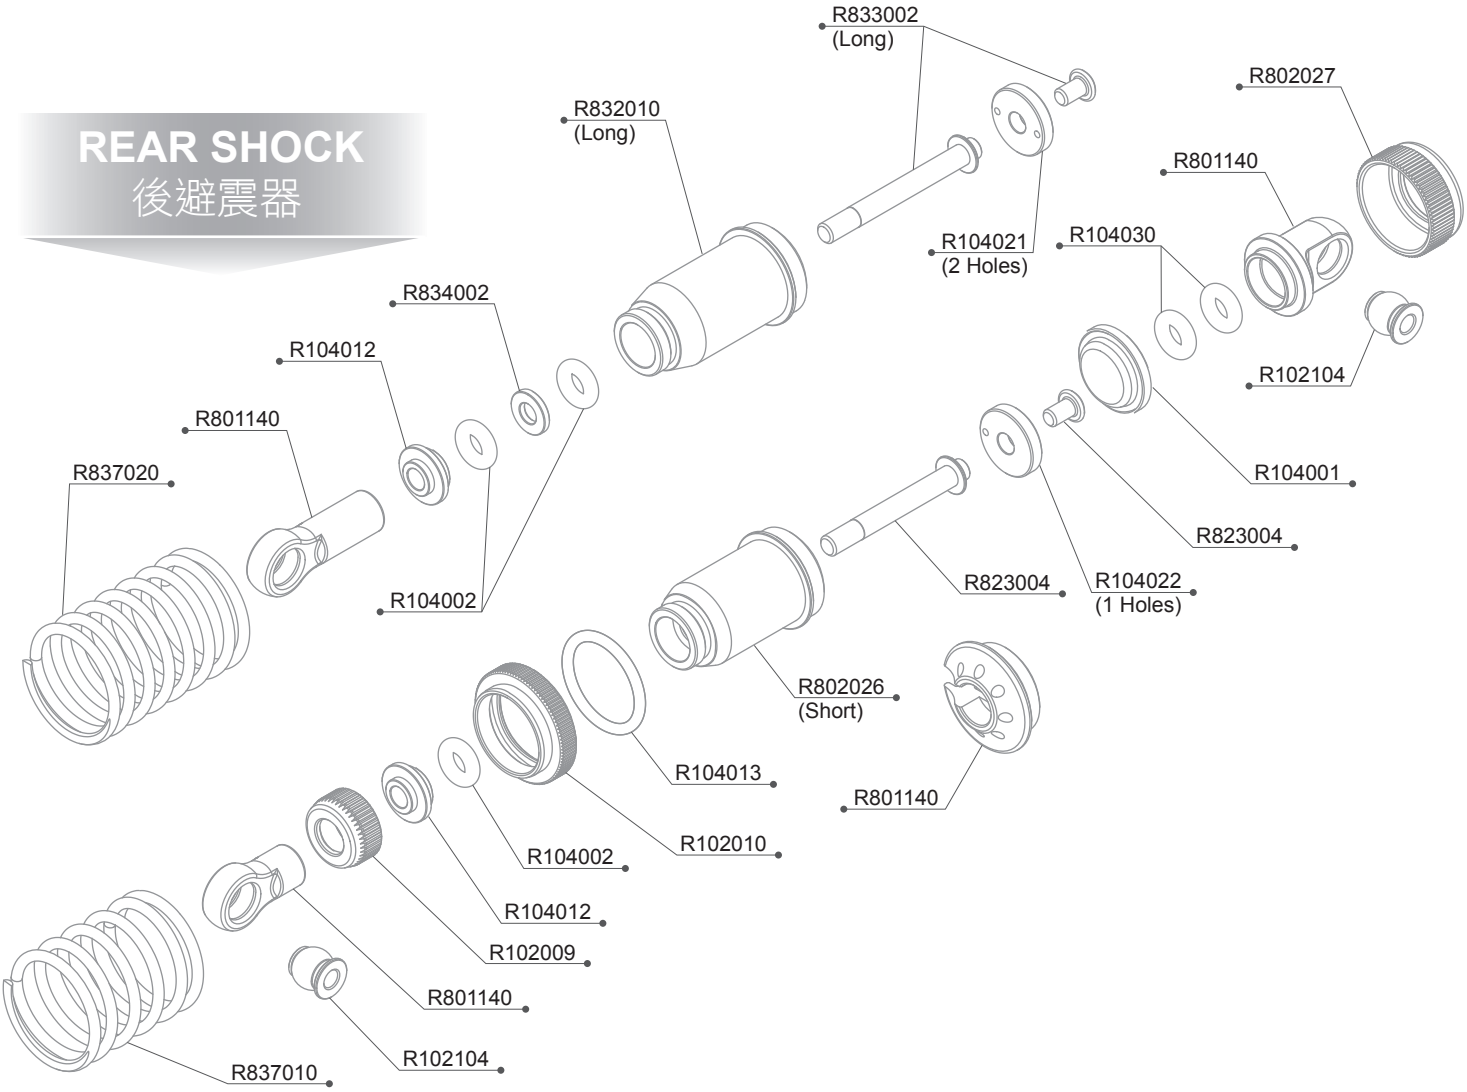

FRONT SHOCK
前避震器

R8.3E BAG 06 PARTS LIST


R102009	Shock Low Cap Alu(2pcs)
R102010	Shock ADJ Nut Alu (2pcs)
R102104	5.8mm Ball end Short type Alu (4pcs)
R104001	Shock Chamber(4pcs)
R104002	O'ring 3x2(4pcs)
R104012	Shock Shaft Shim(4pcs)
R104013	O'ring 13x1 (2pcs)
R104021	Shock Pistion 1mm X 2 Hole (4pcs)
R104022	Shock Pistion 1mm X 1 Hole (4pcs)
R104030	O'ring 3x2 (Soft)(4pcs)
R105104	3x6 Round Screw (10)
R801140	Shock Ball Joint Set V2
R802026	Shock Body-V2016 (2)
R802027	Shock Cap-V2016 (2)
R823004	Shock Shaft-Screw Type (4)
R832010	R8.3 Rear Shock Body (2)
R833002	R8.3 Rear Shock Shaft (2)
R834002	Shock Shims (2)
R837010	R8.3 Front Shock Spring-White
R837020	R8.3 Rear Shock Spring-White



R105104
3x6 Round Screw (10)



R105105
3x8 Round Screw (10)



R105108
3x14 Round Screw (10)



R105204
3x8mm Flat Screw (10)





R106002
5x8x2.5mm
Ball Bearing /Metal Seal (4)




R806002
5x8x2.5mm
Flange Ball Bearing (2)

1:1 Scale

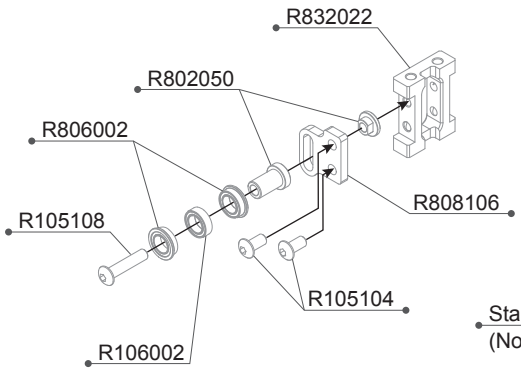

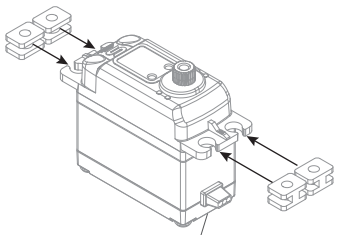


Standard Servo/標準伺服機
(Not Included/未附於套件內)

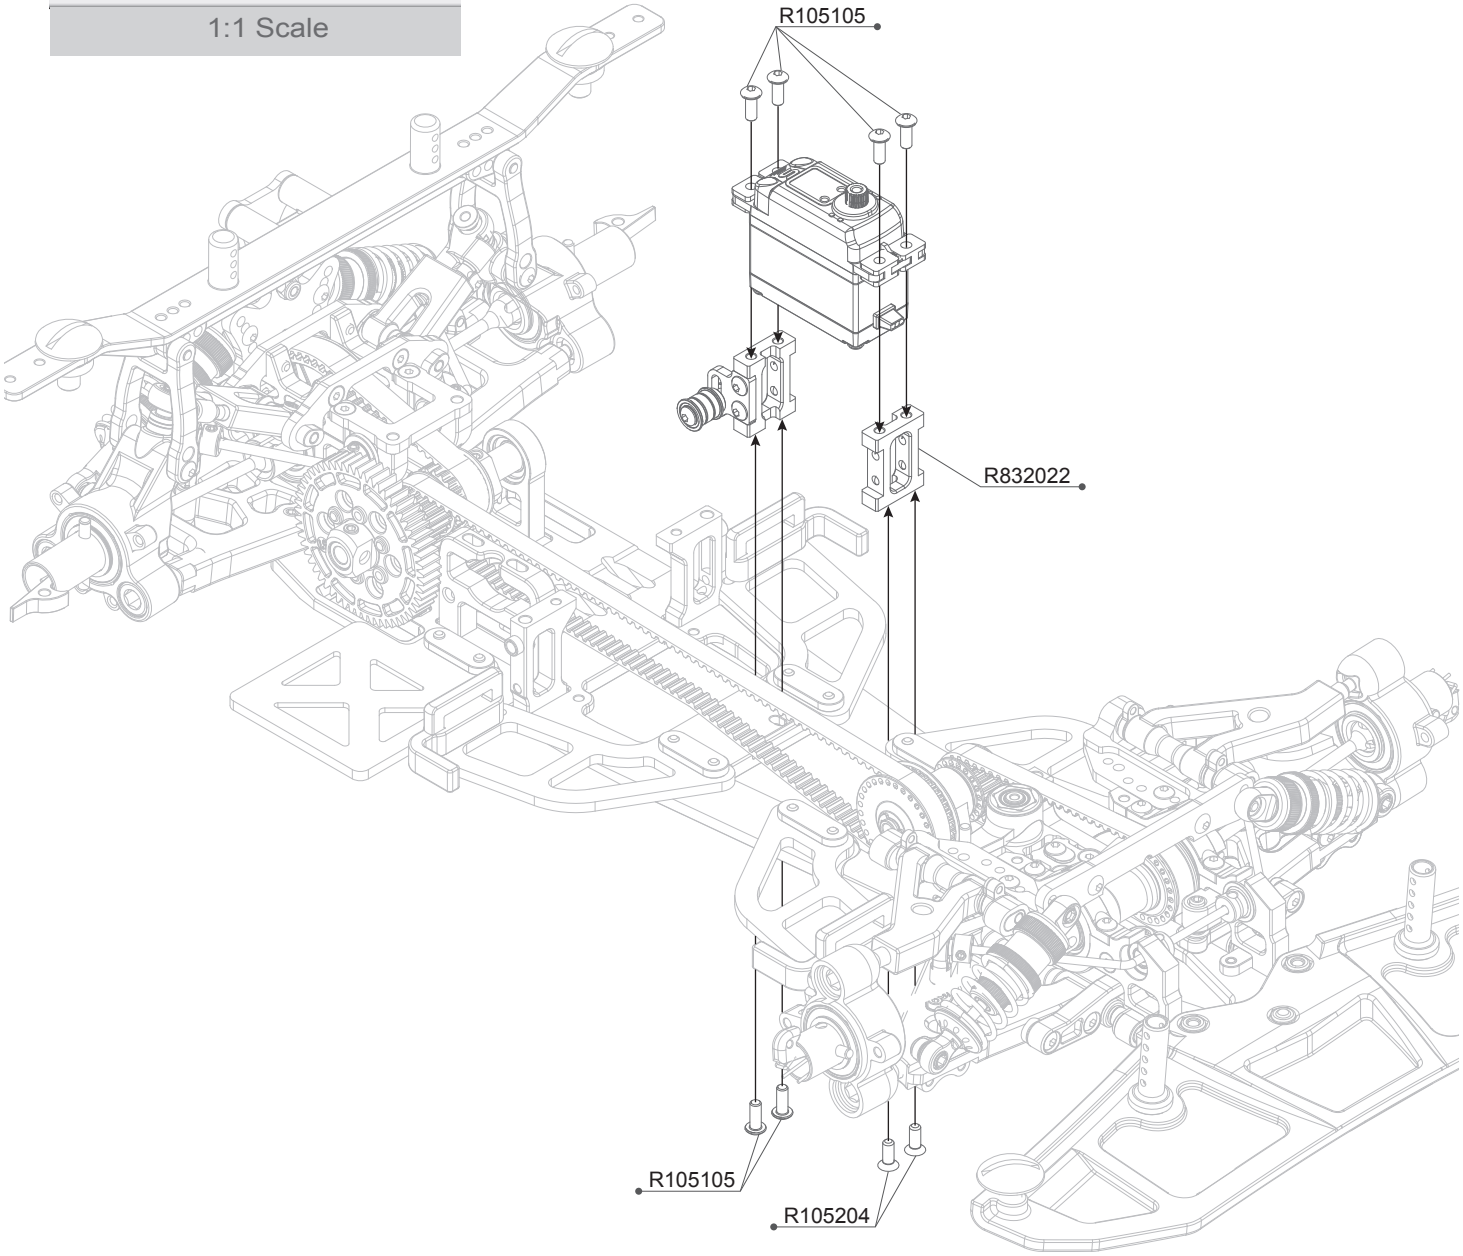

R105104	3x6 Round Screw (10)	R802050	Belt Tensioner Shaft
R105105	3x8 Round Screw (10)	R806002	5x8x2.5mm Flange Ball Bearing (2)
R105108	3x14 Round Screw (10)	R808106	R8.0E Belt Tensioner Plate
R105204	3x8mm Flat Screw (10)	R832022	R8.3E Servor Holder-Alu
R106002	5x8x2.5mm Ball Bearing /Metal Seal (4)		

R805010
3x5mm Flat Screw (10)

1:1 Scale

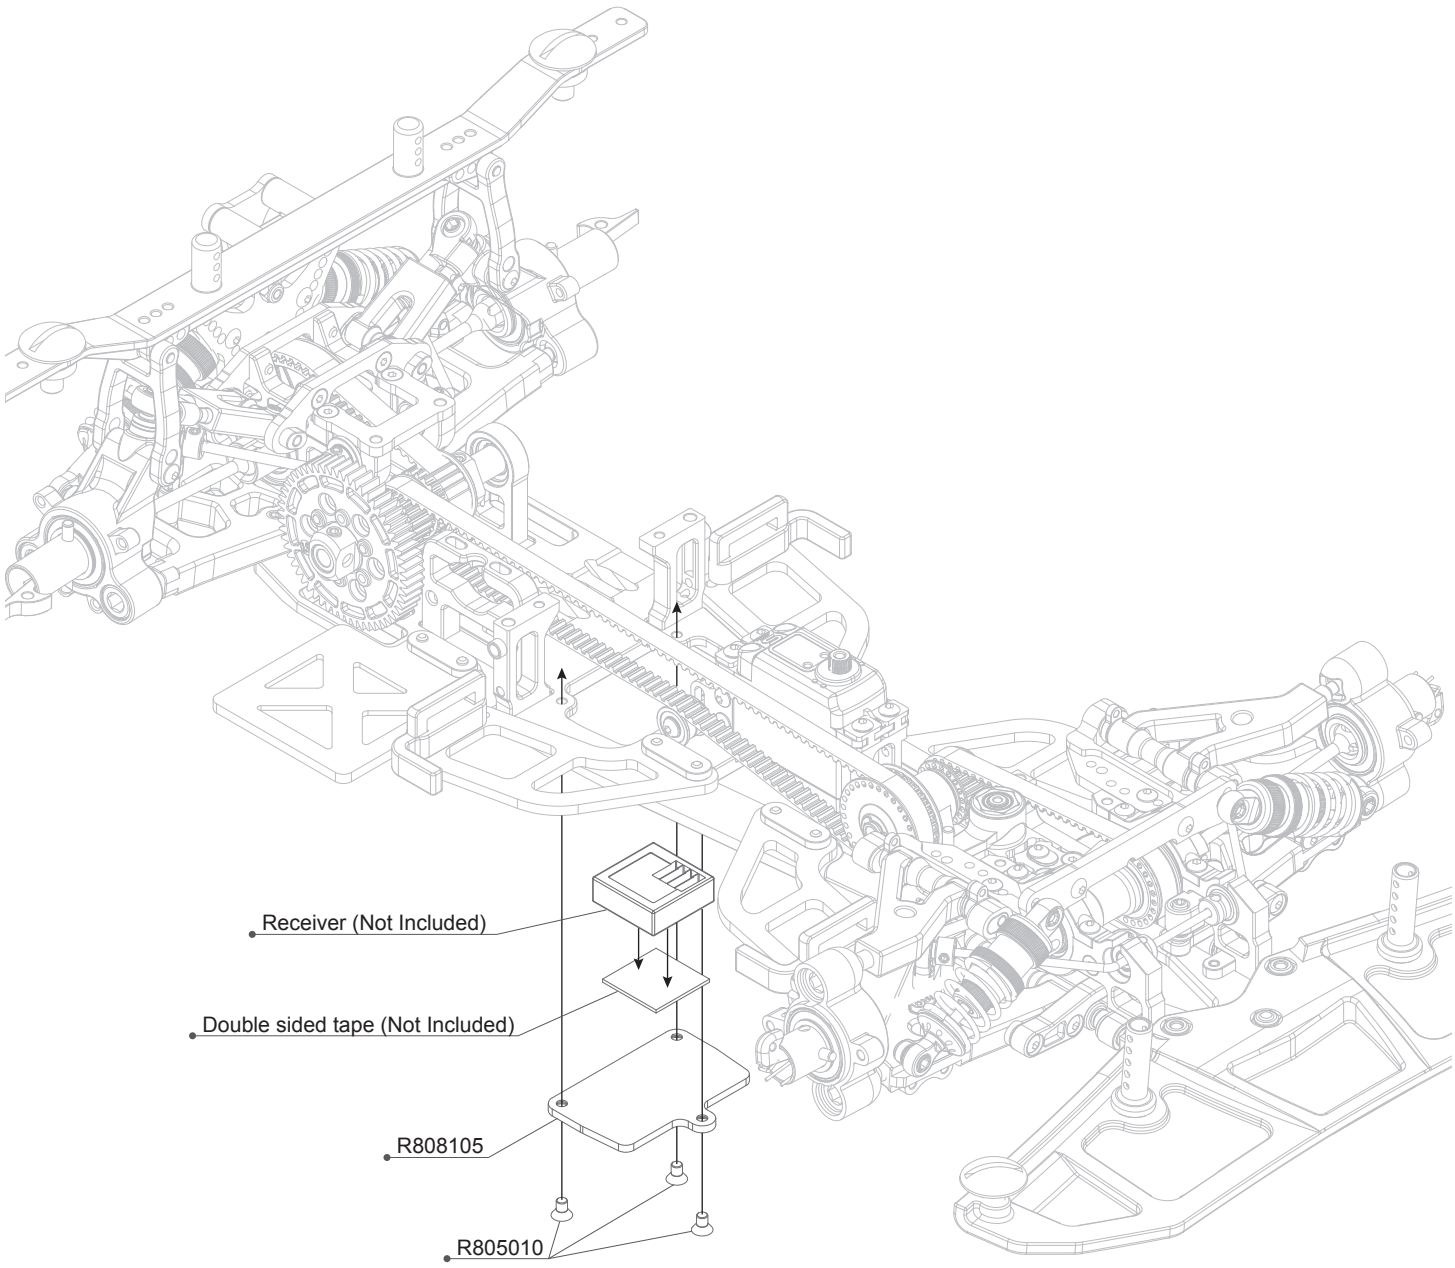

R805010 3x5mm Flat Screw (10)

R808105 R8.0E Receiver Holder




R105301
3x8mm Cap Screw (10)


R805304
3x12mm Cap Screw (10)

R805020
3x8x1mm Steel Shim (6)


R805050
4x4mm Set Screw (10)

1:1 Scale

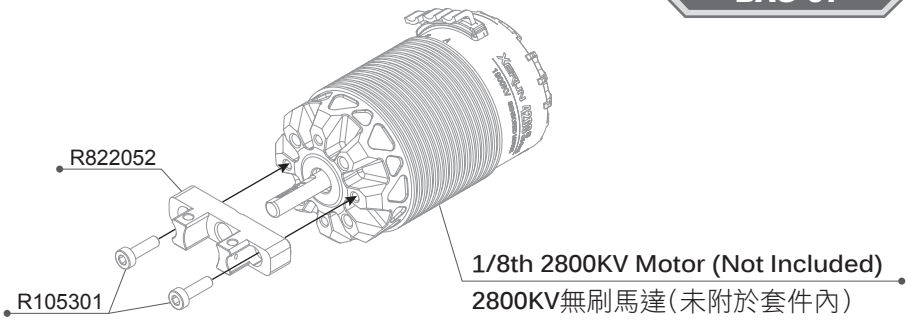

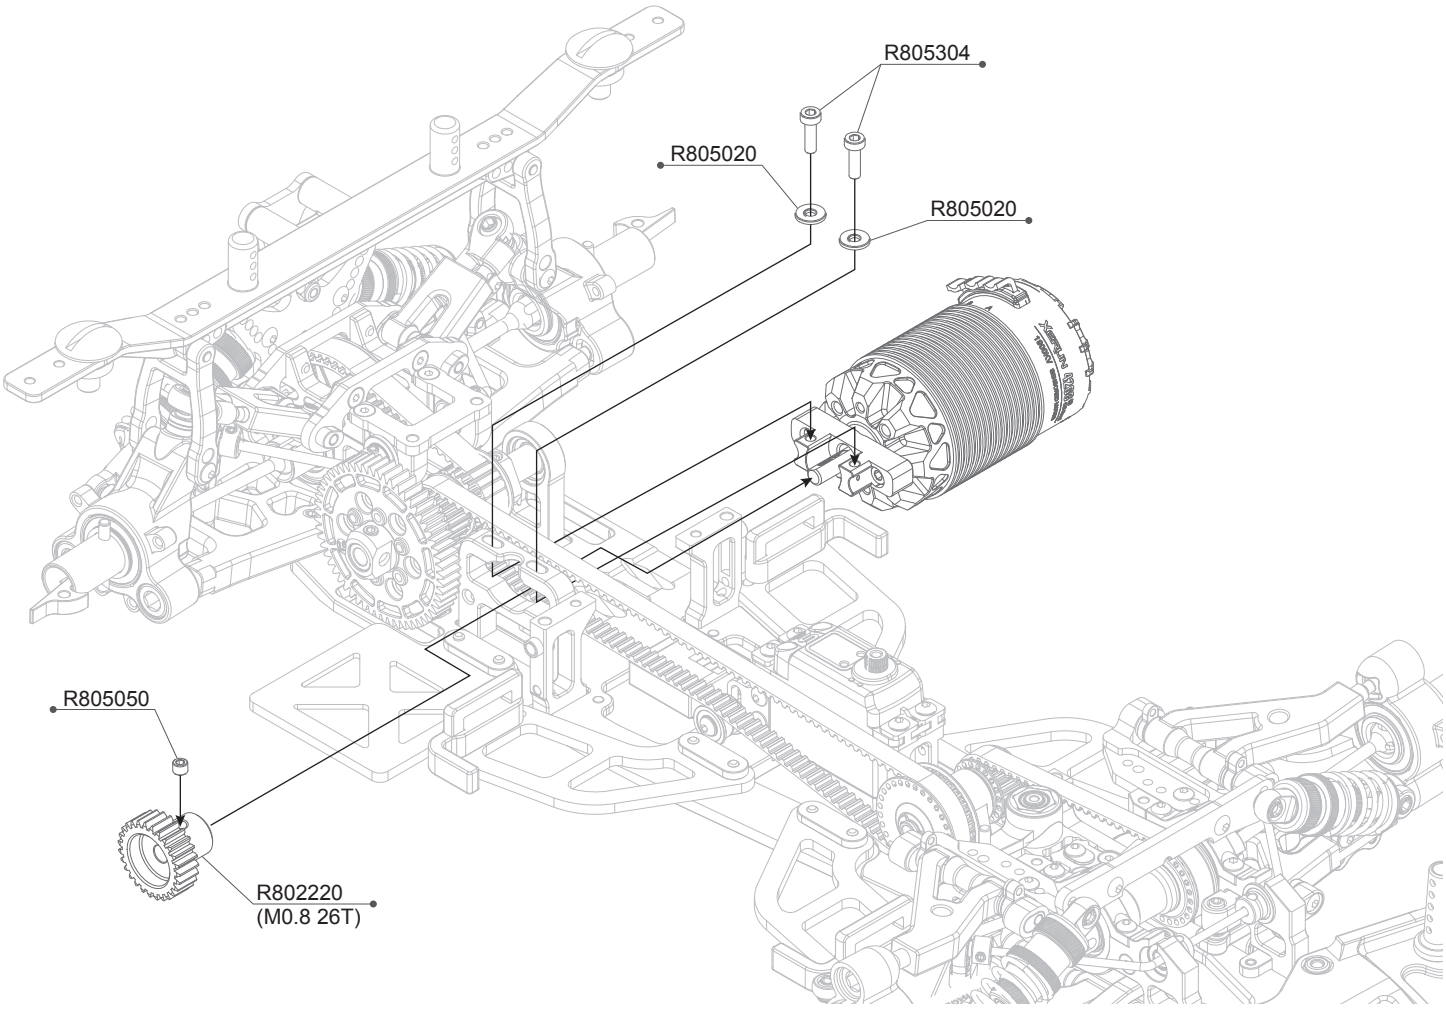


NOTICE

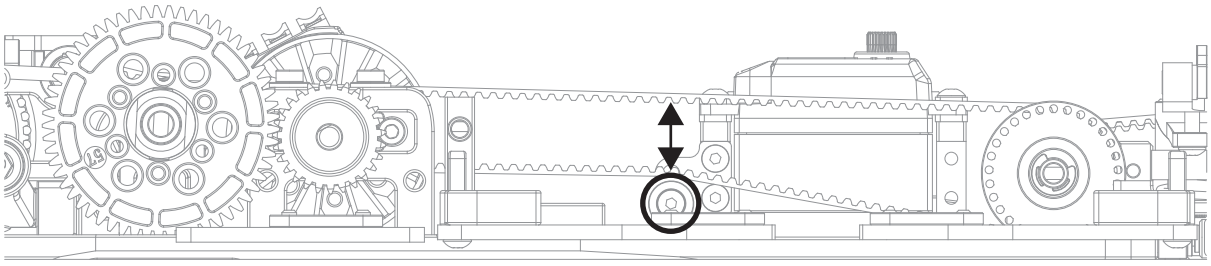


Adjust center blet tension here / 請由此處調整中皮帶的張力


R105301	3x8mm Cap Screw (10)	R805050	4x4mm Set Screw (10)
R802220	R8.0E Pinion 26T	R805304	3x12mm Cap Screw (10)
R805020	3x8x1mm Steel Shim (6)	R822052	R8.3E Motor Adaptor



R105104
3x6 Round Screw (10)

1:1 Scale

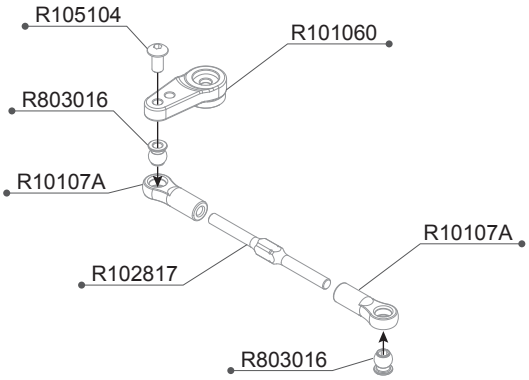

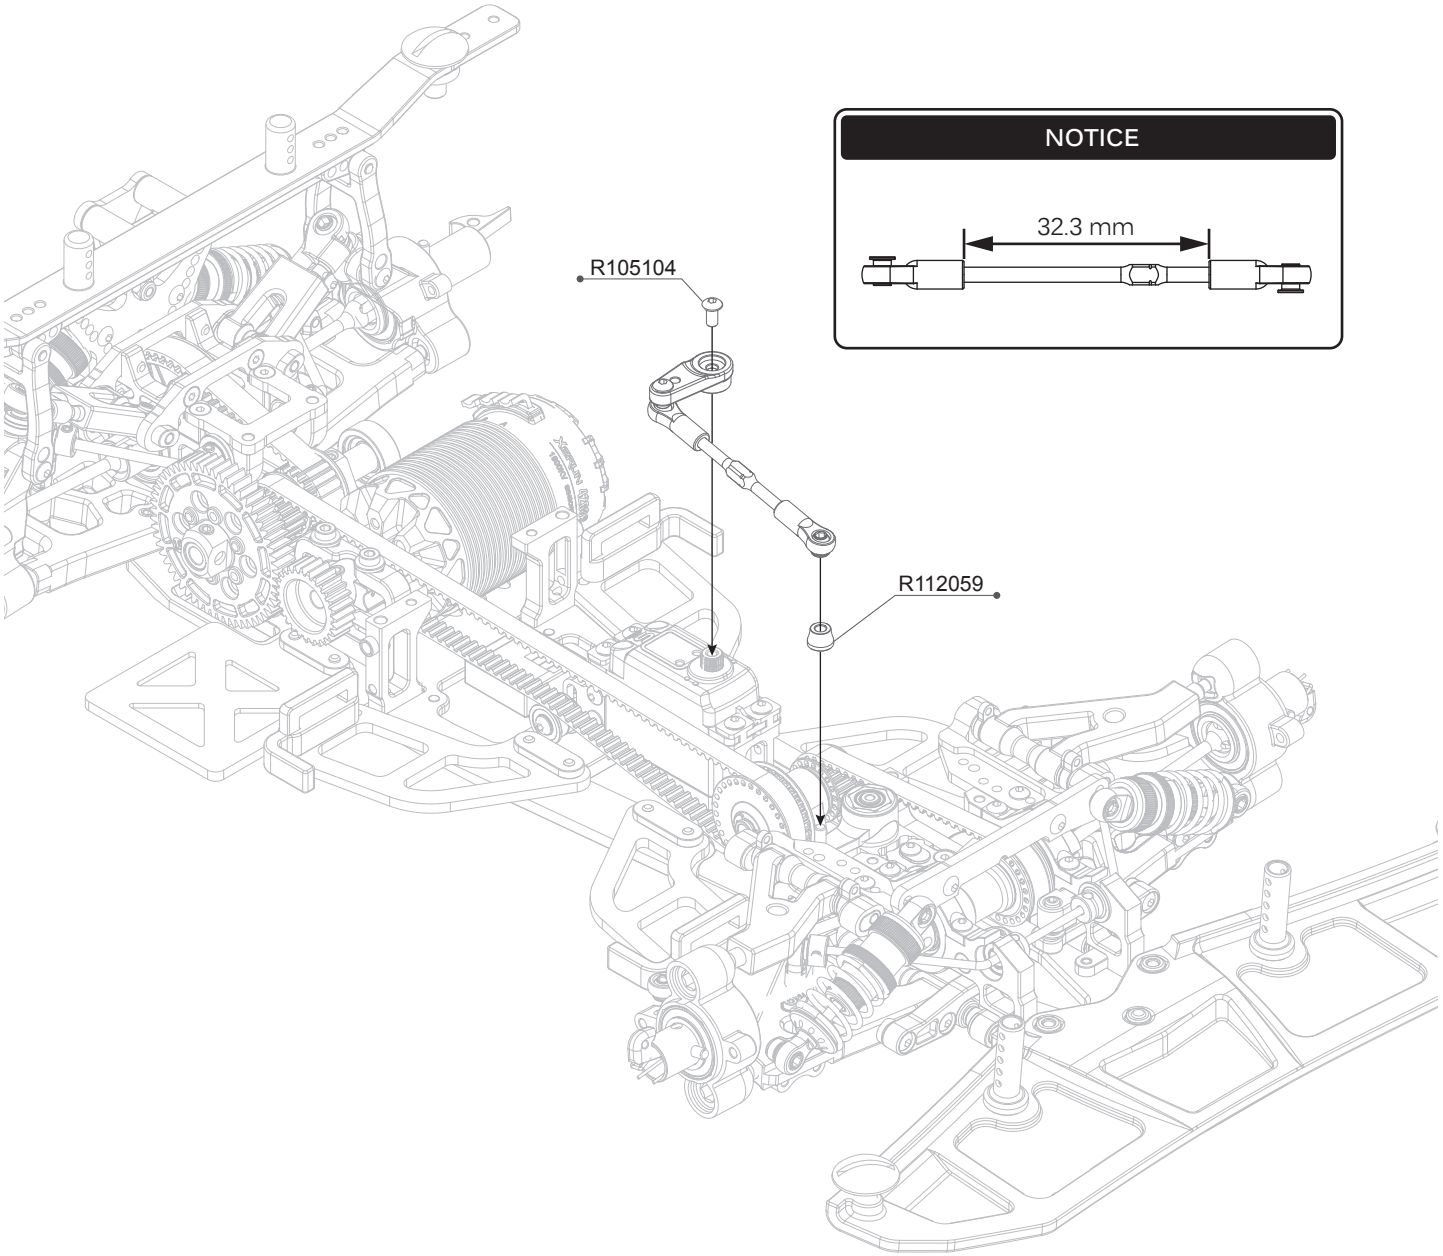

NOTICE

R101060	Servo Horn Dual steering arm	R105104	3x6 Round Screw (10)
R10107A	Ball Joint 4.9mm Open (6pcs)	R112059	ATS Base Tower 5mm (2)
R102817	Turnbuckle 3x43mm ALU-7075 (2pcs)	R803016	Ball Head 4.9mm (4)



R105104
3x6 Round Screw (10)





R105203
3x6mm Flat Screw (10)



R105205
3x10mm Flat Screw (10)

1:1 Scale

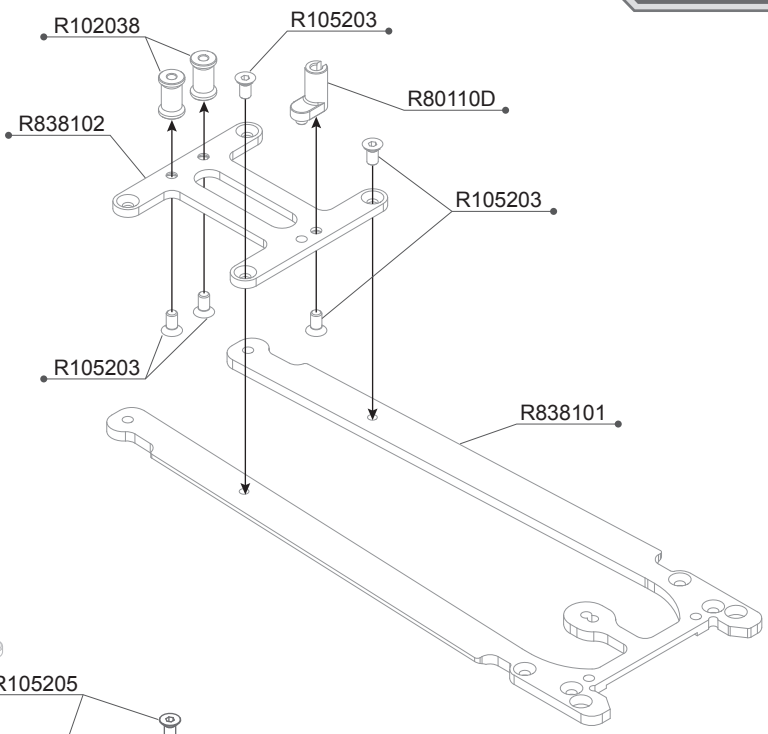

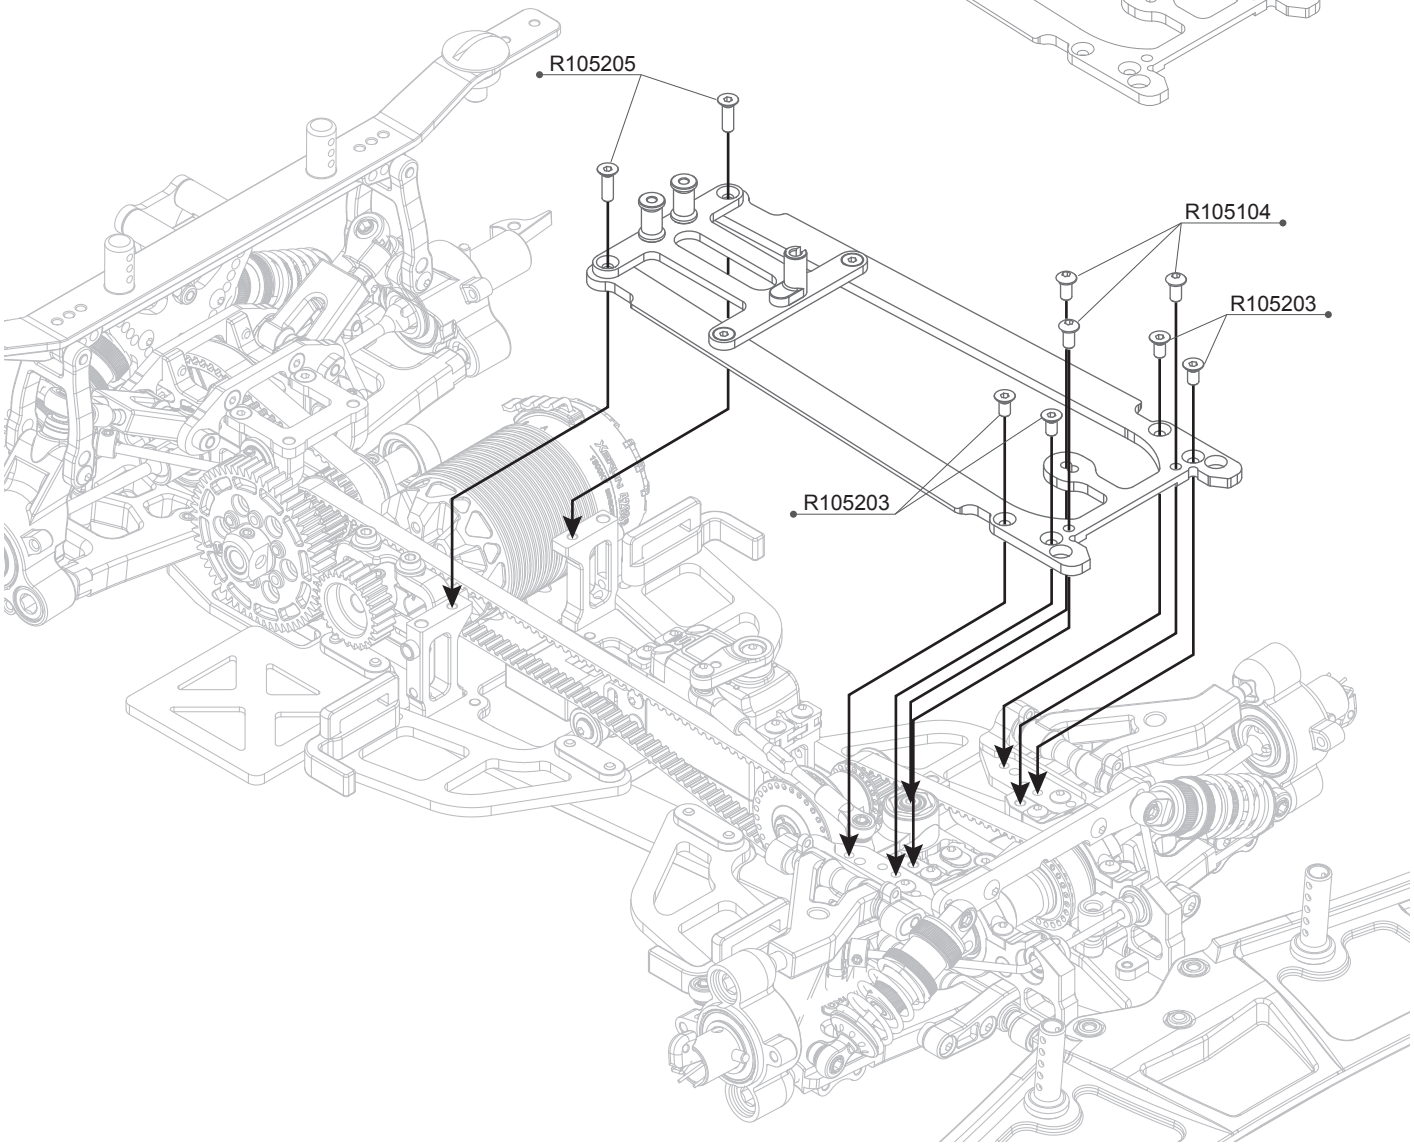


R102038	Aluminum Tower (2)
R105104	3x6 Round Screw (10)
R105203	3x6mm Flat Screw (10)
R105205	3x10mm Flat Screw (10)
R80110D	Antenna Holder
R838101	R8.3E Upper Deck
R838102	R8.3E H Deck




R102017
3x5.5x3mm Alu Shims (4)



R102018
3x5.5x4mm Alu Shims (4)



R105107
3x12 Round Screw (10)





R105108
3x14 Round Screw (10)




R105203
3x6mm Flat Screw (10)

1:1 Scale

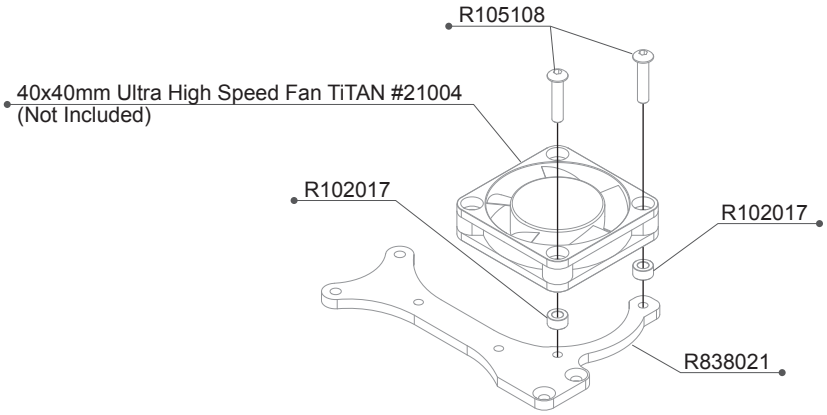


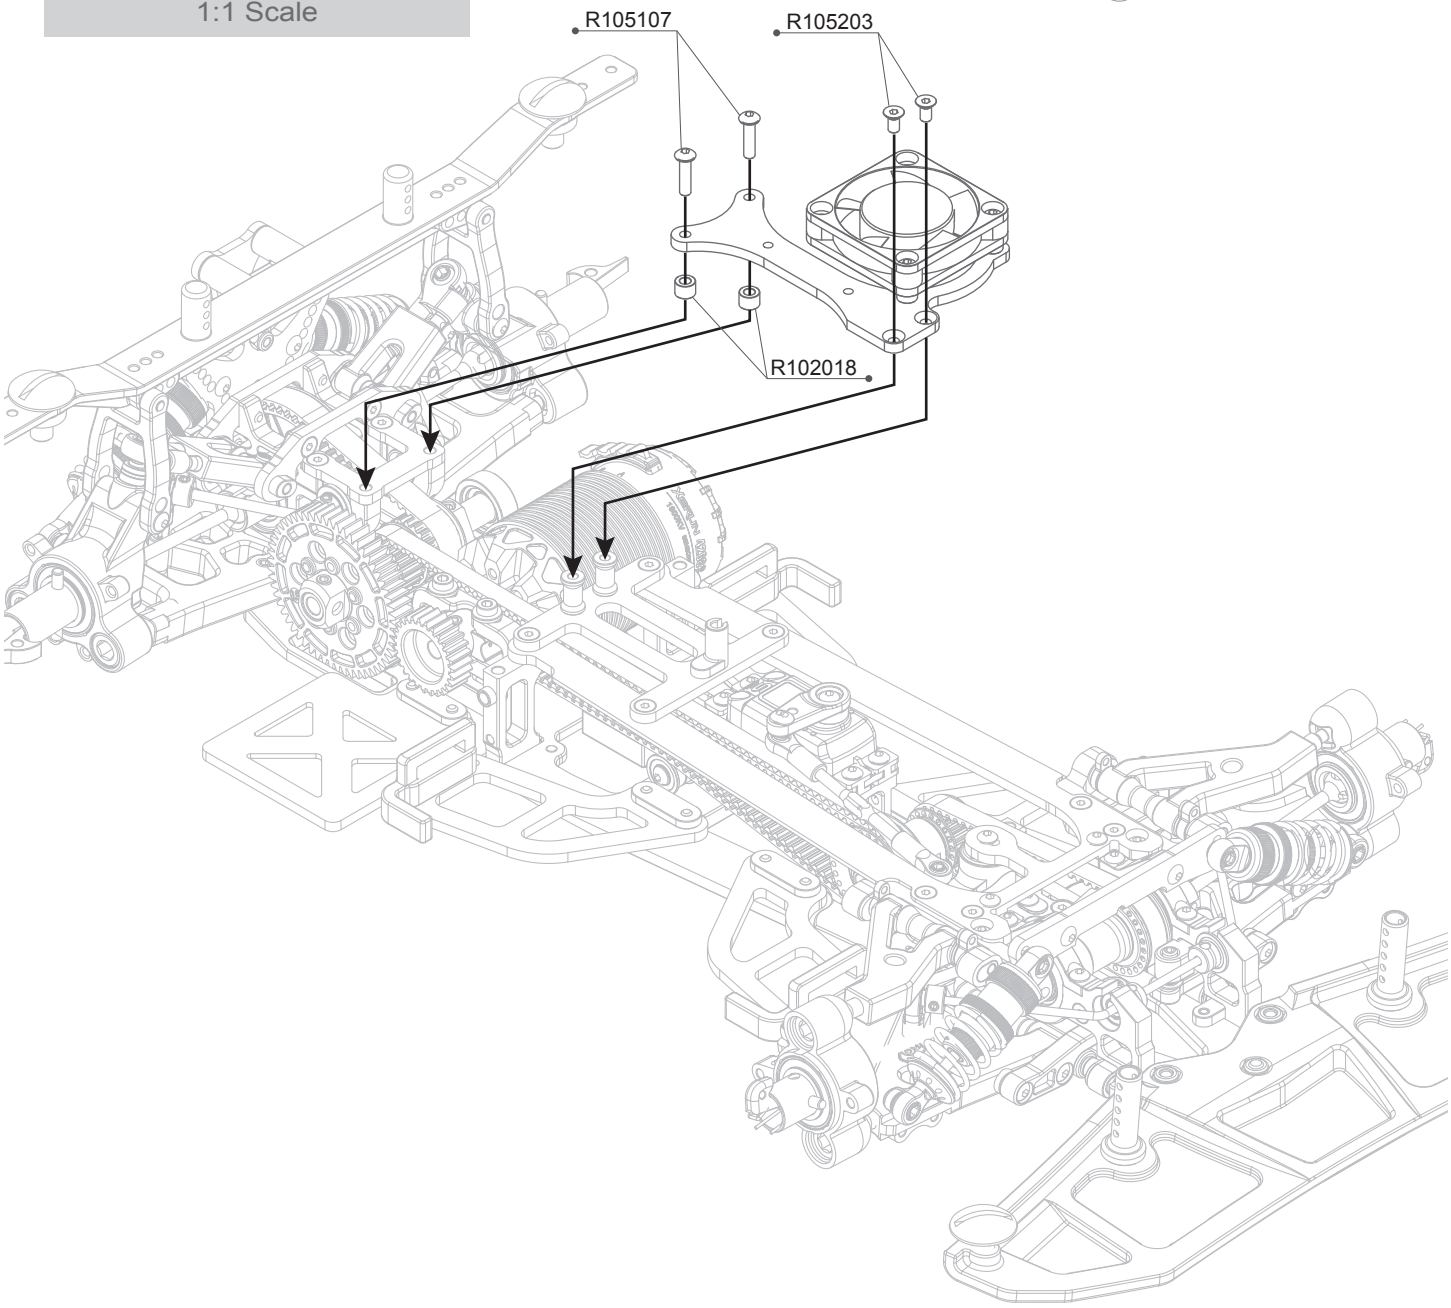


R102017	3X5.5X3mm Alu Shims(4pcs)	R105108	3x14 Round Screw (10)
R102018	3x5.5x4mm Alu Shims(4pcs)	R105203	3x6mm Flat Screw (10)
R105107	3x12 Round Screw (10)	R838021	R8.3E Fan Mount

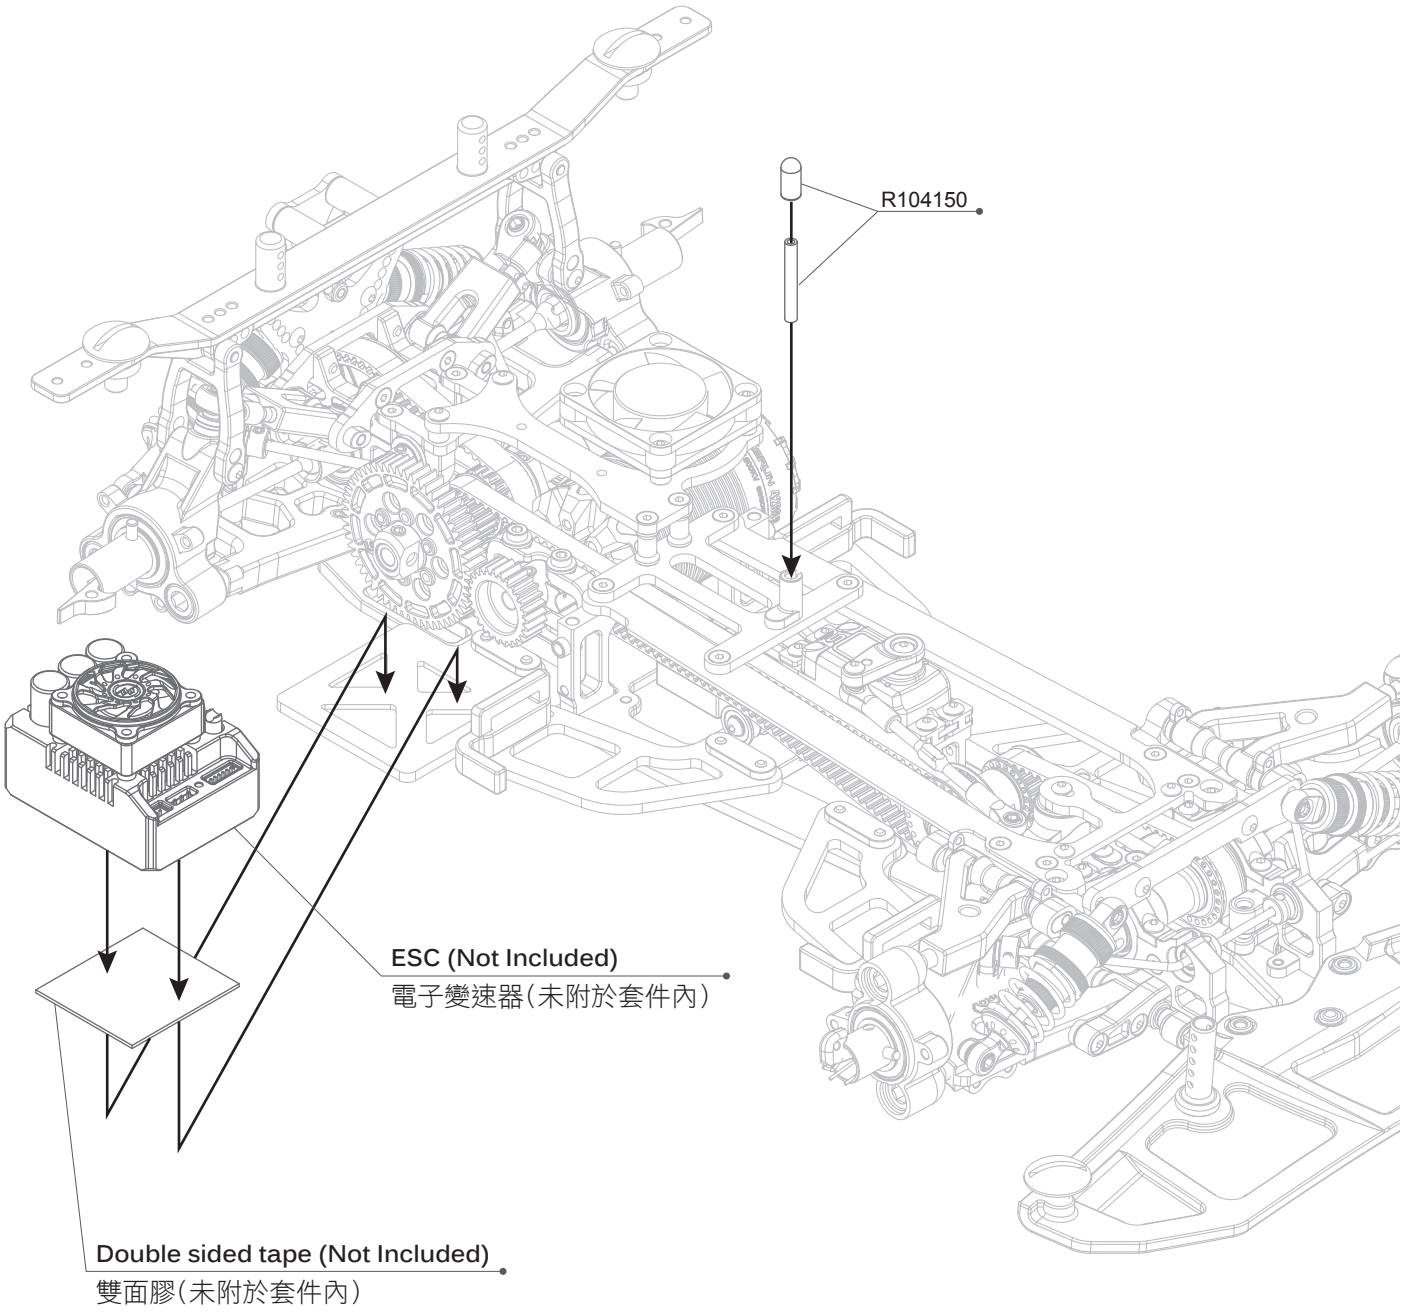


R104150 Antenna (1set)

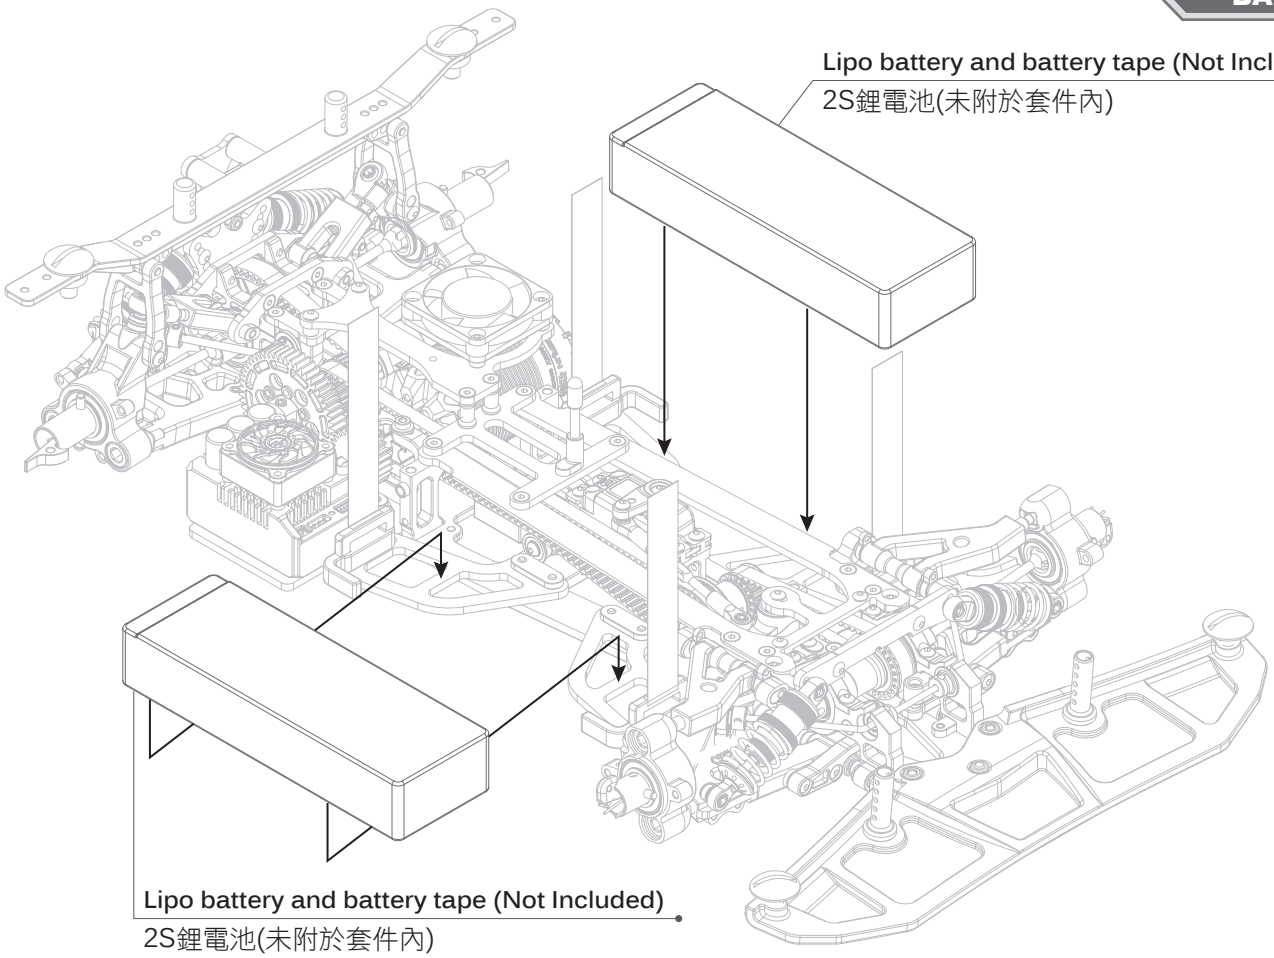
Lipo battery and battery tape (Not Included)
2S鋰電池(未附於套件內)
Lipo battery and battery tape (Not Included)
2S鋰電池(未附於套件內)

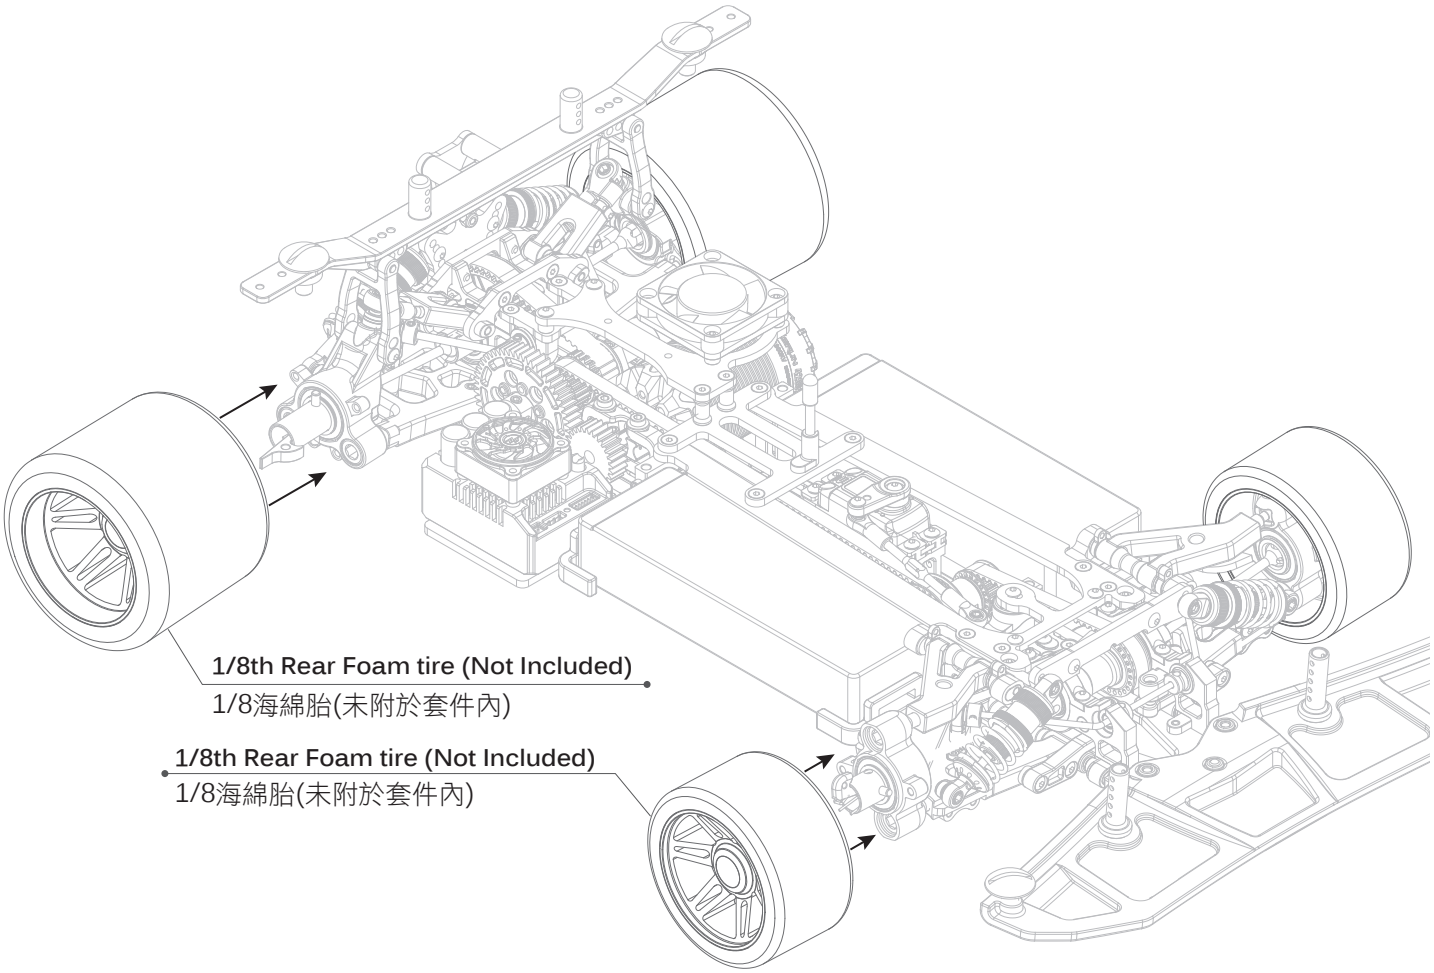
1/8th Rear Foam tire (Not Included)
1/8海綿胎(未附於套件內)
1/8th Rear Foam tire (Not Included)
1/8海綿胎(未附於套件內)


R8.3E BAG 07 PARTS EXPLORE VIEW

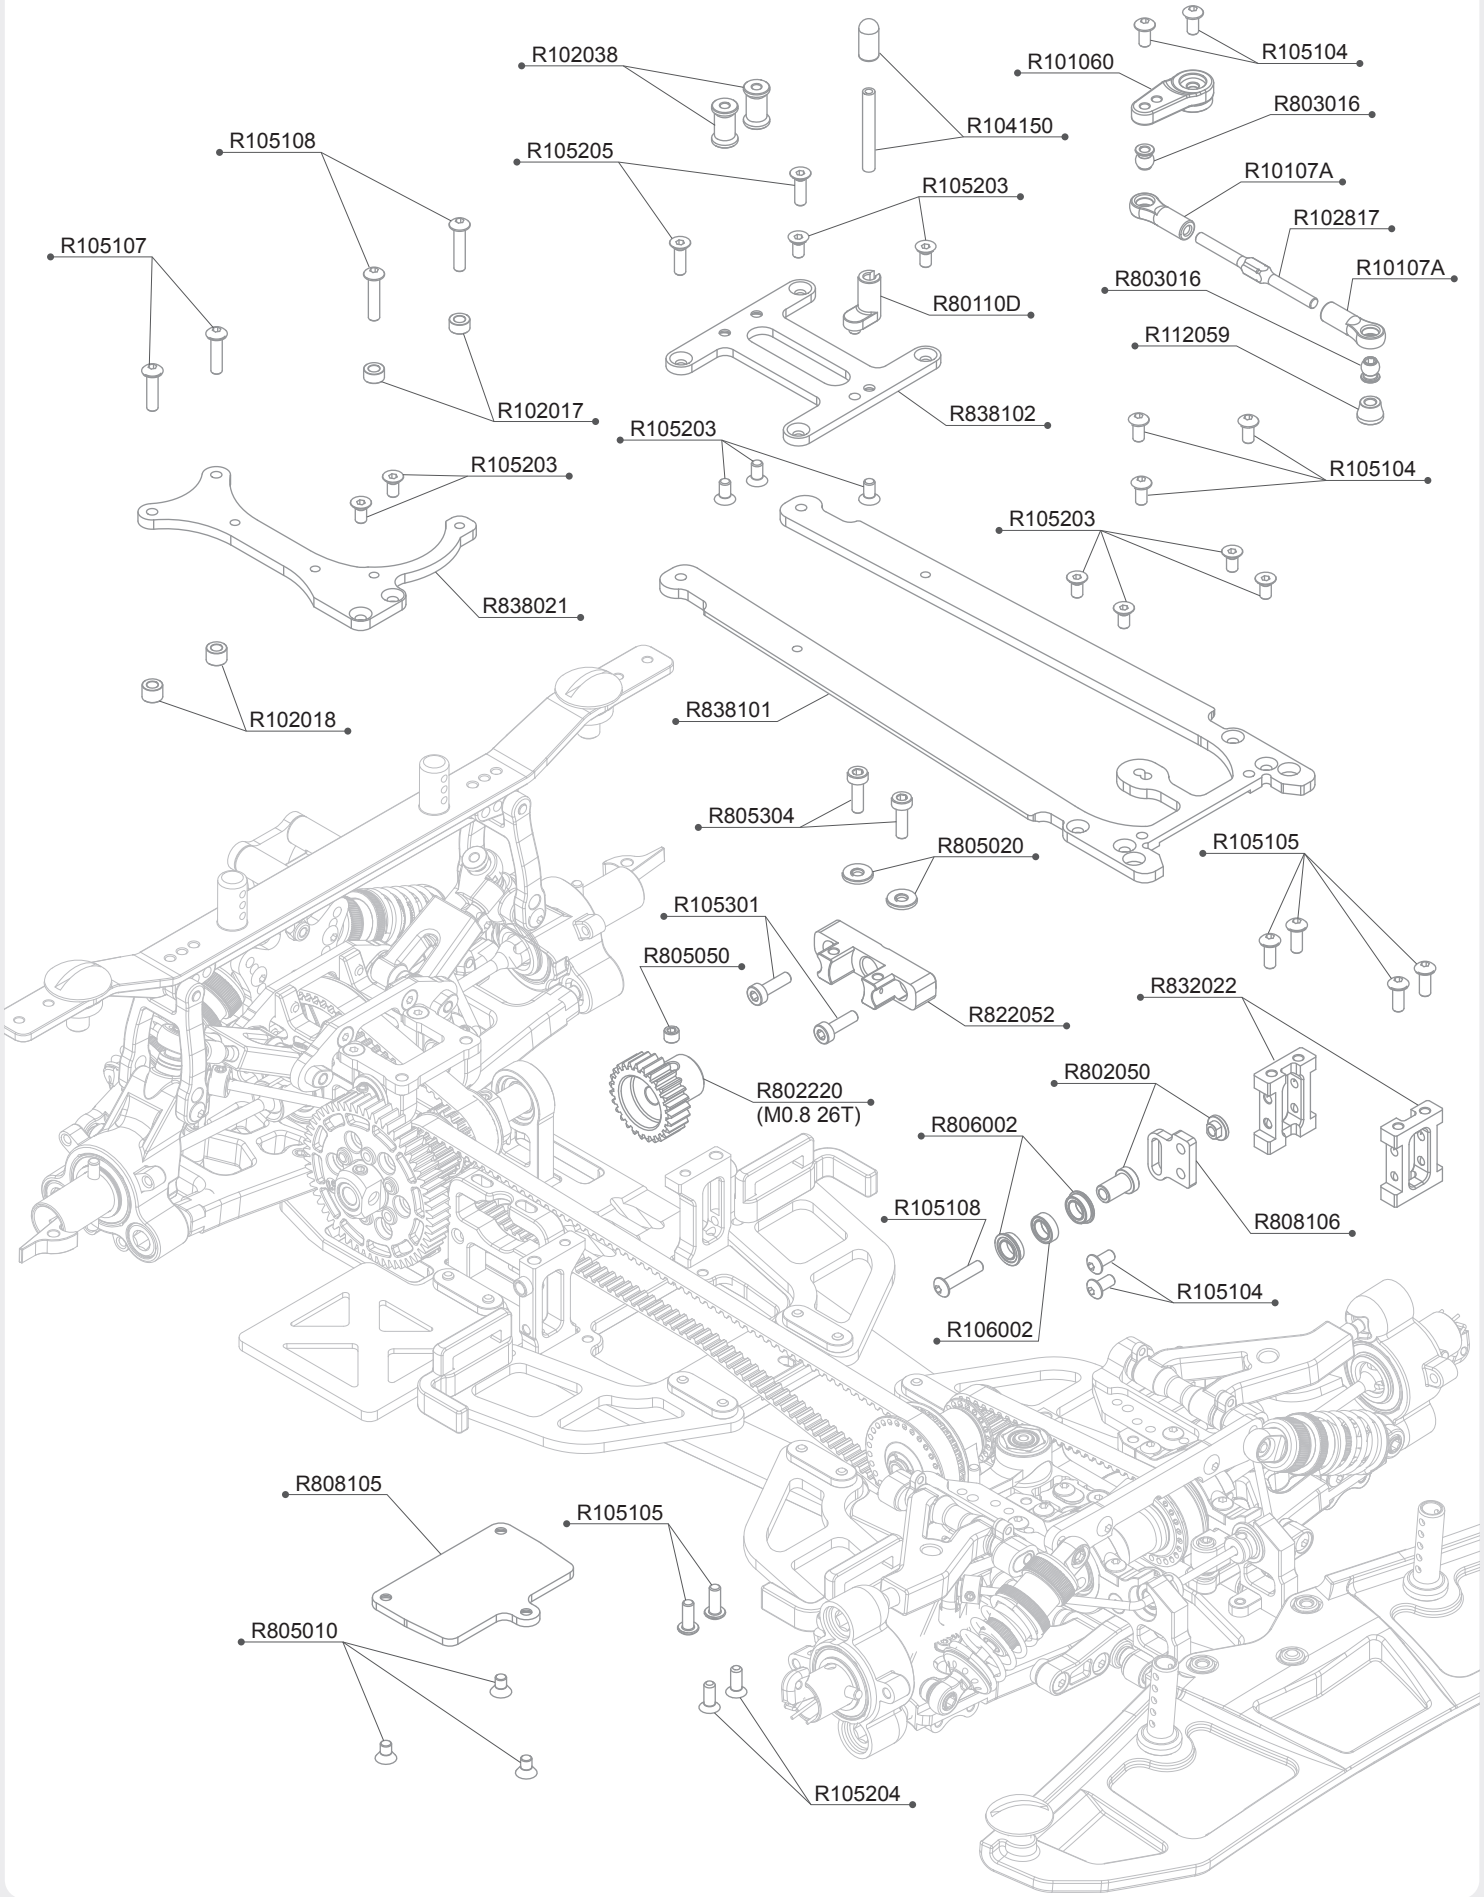


R8.3E BAG 07 PARTS LIST

R101060	Servo Horn Dual steering arm
R10107A	Ball Joint 4.9mm Open (6pcs)
R102017	3X5.5X3mm Alu Shims(4pcs)
R102018	3x5.5x4mm Alu Shims(4pcs)
R102038	Aluminum Tower (2)
R102817	Turnbuckle 3x43mm ALU-7075 (2pcs)
R104150	Antenna (1set)
R105104	3x6 Round Screw (10)
R105105	3x8 Round Screw (10)
R105107	3x12 Round Screw (10)
R105108	3x14 Round Screw (10)
R105203	3x6mm Flat Screw (10)
R105204	3x8mm Flat Screw (10)
R105205	3x10mm Flat Screw (10)
R105301	3x8mm Cap Screw (10)
R106002	5x8x2.5mm Ball Bearing /Metal Seal (4)
R112059	ATS Base Tower 5mm (2)
R80110D	Antenna Holder
R802050	Belt Tensioner Shaft
R802220	R8.0E Pinion 26T
R803016	Ball Head 4.9mm (4)
R805010	3x5mm Flat Screw (10)
R805020	3x8x1mm Steel Shim (6)
R805050	4x4mm Set Screw (10)
R805304	3x12mm Cap Screw (10)
R806002	5x8x2.5mm Flange Ball Bearing (2)
R808105	R8.0E Receiver Holder
R808106	R8.0E Belt Tensioner Plate
R822052	R8.3E Motor Adaptor
R832022	R8.3E Servor Holder-Alu
R838021	R8.3E Fan Mount
R838101	R8.3E H Deck
R838102	R8.3E Upper Deck


1:1 SCALE




R105104
3x6 Round Screw (10)



R105105
3x8 Round Screw (10)



R105107
3x12 Round Screw (10)



R105108
3x14 Round Screw (10)




R805010
3x5mm Flat Screw (10)



R105203
3x6mm Flat Screw (10)



R105204
3x8mm Flat Screw (10)




R105205
3x10mm Flat Screw (10)




R102017
3x5.5x3mm Alu Shims (4)



R102018
3x5.5x4mm Alu Shims (4)



R105301
3x8mm Cap Screw (10)



R805304
3x12mm Cap Screw (10)



R805020
3x8x1mm Steel Shim (6)



R805050
4x4mm Set Screw (10)



R106002
5x8x2.5mm
Ball Bearing /Metal Seal (4)



R806002
5x8x2.5mm
Flange Ball Bearing (2)