www.teamcracing.net

# TC10

## *Instruction manual*

## 1/10 SCALE RADIO CONTROL TOURING CAR

**Dimensions 尺寸:**


Length 長度.....420mm

Width 寬度 .....200mm

Height 高度.....105mm

# Transmitter Preparation
## 調整遙控器



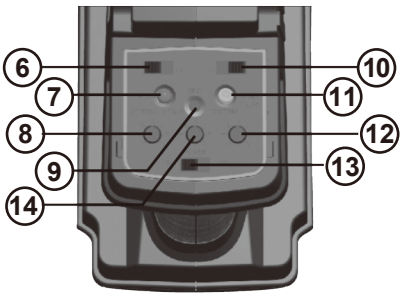




**GLG20**
**2.4GHz**

1 Control Panel 控制面板
2 Steering Wheel 轉向輪
3 Throttle Trigger 油門板扣
4 Battery Compartment 電池盒
5 Charging Jack 充電接口
6 Sterring Servo Reverse 轉向正逆轉開關
7 Power LED 電源指示燈
8 Steering Trim 轉向调節
9 Bind Button 設定按扭
10 Throttle Servo Reverse 油門正逆轉開關
11 Battery Voltage 電池電壓
12 Steering Dual Rate 轉向大小微調
13 Power Switch 電源開關
14 Throttle Trim 油門微調


Transmitter Battery Installation
遙控器電池安裝

Open battery cover at the bottom of transmitter. Install batteries. Follow the direction of batteries designated in the inside of battery box.
在遙控器的底部打開電池蓋子, 安裝電池。
跟隨電池的指示在電池盒裡面指定。

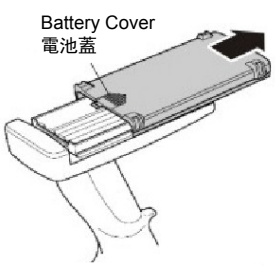






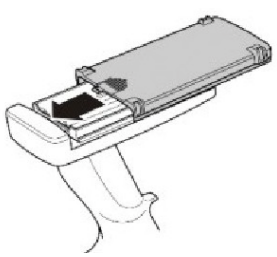

## Transmitter Preparation
## 調整遙控器

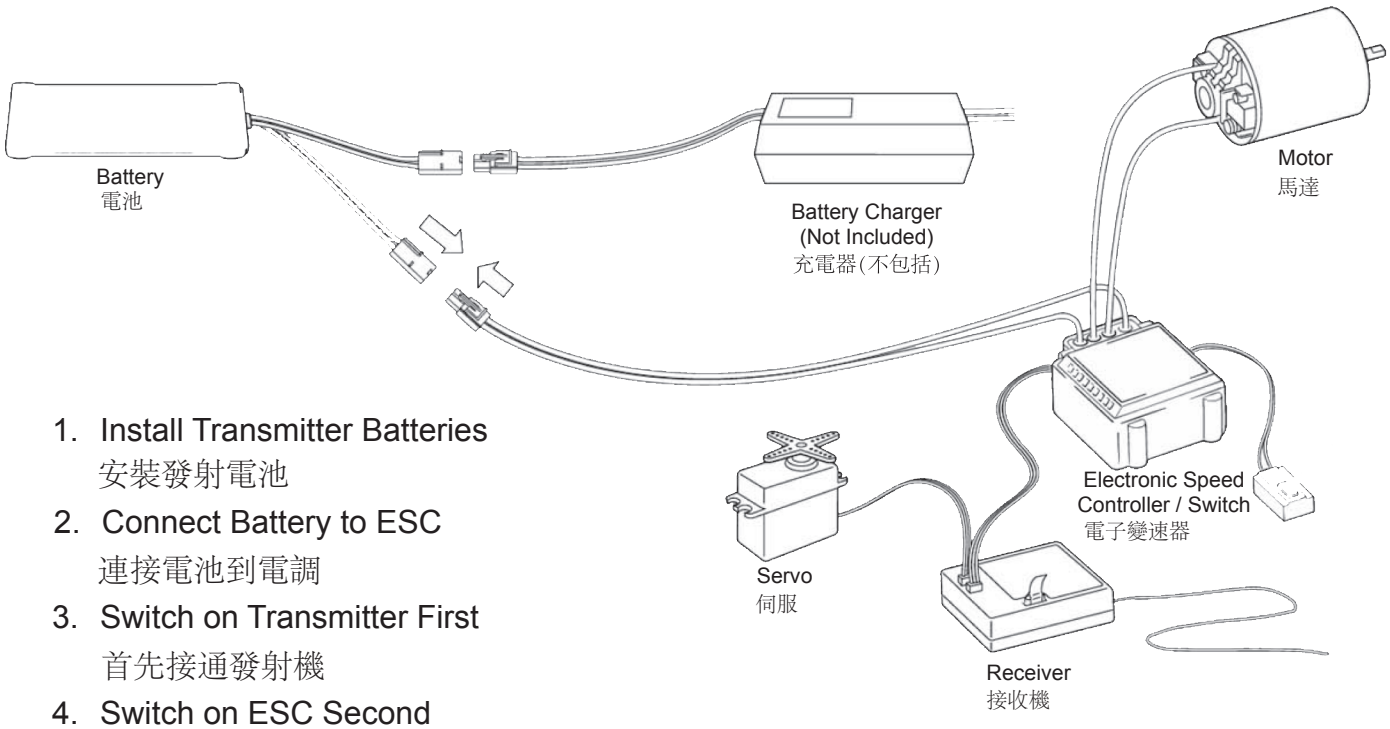



1. Install Transmitter Batteries
   安裝發射電池
2. Connect Battery to ESC
   連接電池到電調
3. Switch on Transmitter First
   首先接通發射機
4. Switch on ESC Second
   其次接通電調

Note: When done driving Turn Off the ESC and THEN Transmitter

注意:當停止駕駛首先要關掉電調
其次再關掉發射機

## Tools required
## 組裝需要的工具

- Needie Nose Pllers
  尖嘴鉗



- Awl
  錐




- Grease
  潤滑油




- Screw Cement
  螺絲膠水



- ***H162***
  Instant Glue
  瞬間膠水




- Differential Grease
  差速油




- Molybdenum Grease(Black)
  鉬油(黑)




- Hex Wrench
  六角扳手




- Hex Wrench
  十字套筒




- ***H154***
  Body Reamer
  車殼絞刀





No need to pre-drill precise holes
(1mm to 15mm)can be drilled
可以對預鑽的孔準確地鑽1mm-15mm


- Wire Cutters
  鋼絲鉗



- Sharp Hobby knife
  美工刀




- ***H096***
  ROUND CUTTER
  剪刀

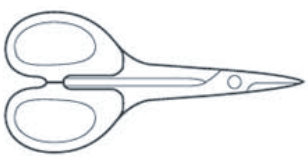

For trimming bodies!
用于修剪車殼!

## 1 Gear Differential 齿轮差动

**Bag-A**

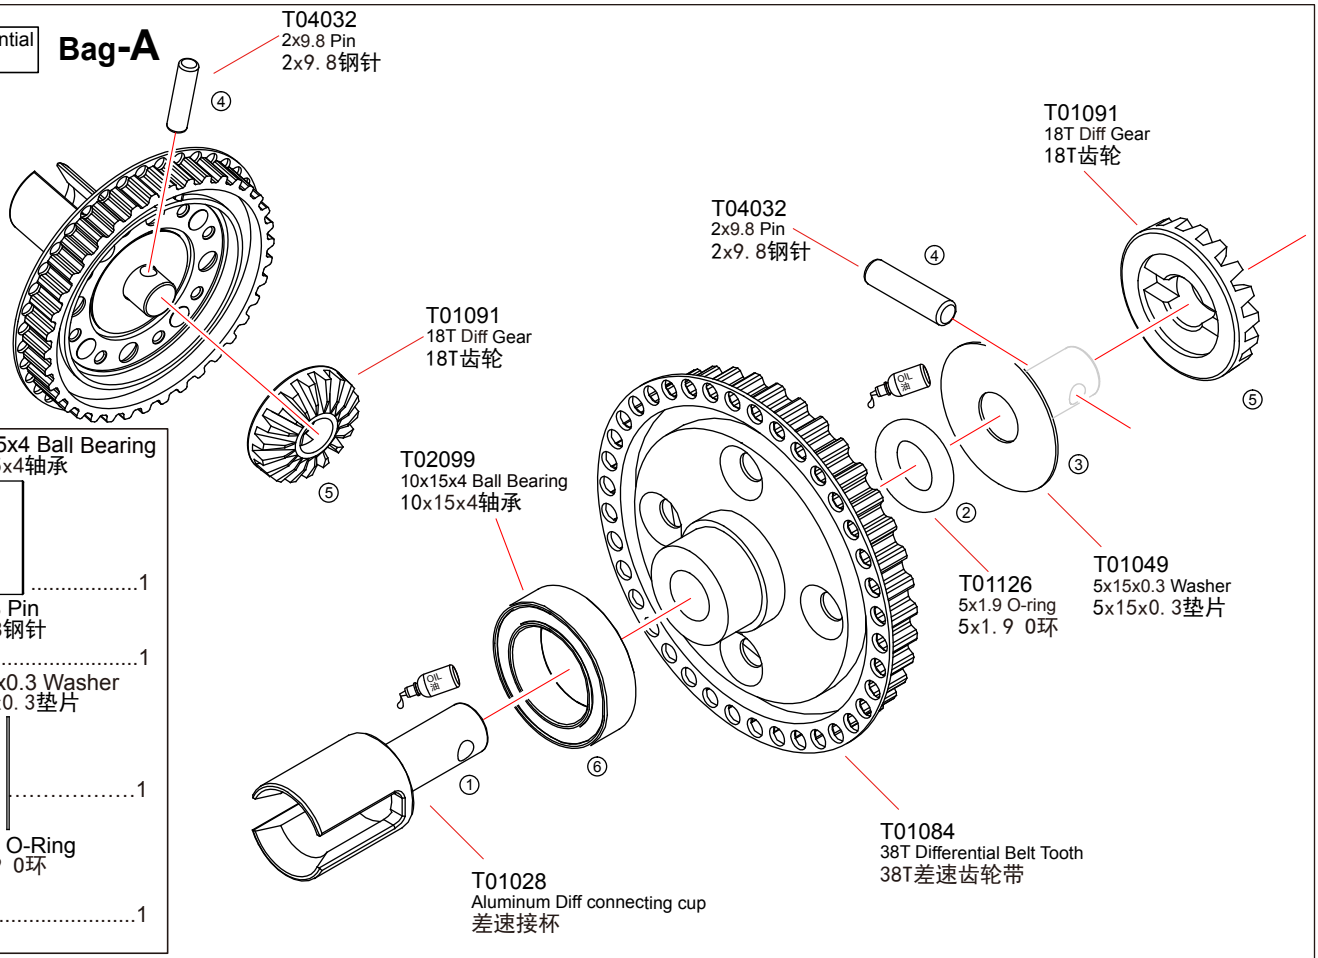


T02099 10x15x4 Ball Bearing
10x15x4轴承 .....1


T04032 2x9.8 Pin
2x9. 8钢针 .....1

T01049 5x15x0.3 Washer
5x15x0. 3垫片 .....1

T01126 5x1.9 O-Ring
5x1. 9 0环 .....1

## 2 Gear Differential 齿轮差动

**Bag-A**

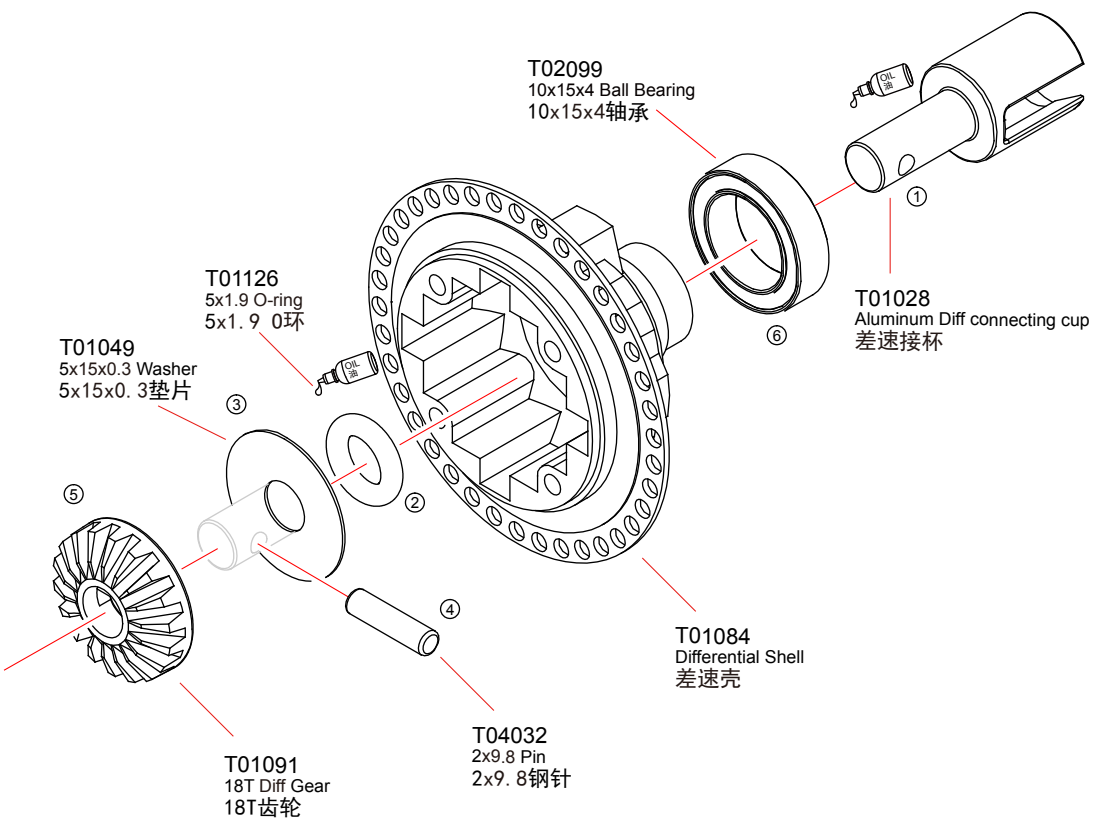



T02099 10x15x4 Ball Bearing
10x15x4轴承 .....1

T04032 2x9.8 Pin
2x9. 8钢针 .....1

T01049 5x15x0.3 Washer
5x15x0. 3垫片 .....1


T01126 5x1.9 O-Ring
5x1. 9 0环 .....1

## 3 Gear Differential 齿轮差动 Bag-A

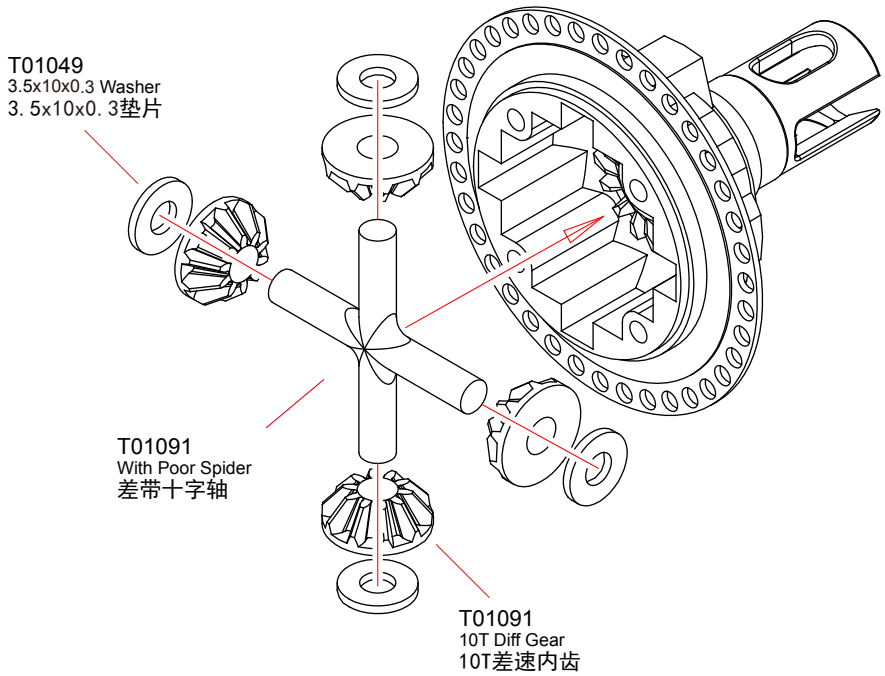


T01049 3.5x10x0.3 Washer
3. 5x10x0. 3垫片
.....4


## 4 Gear Differential 齿轮差动 Bag-A

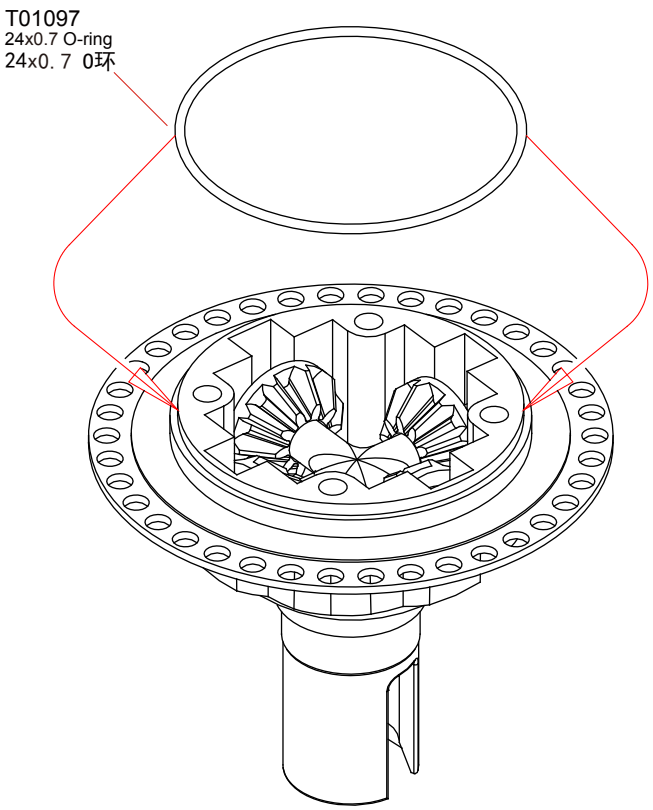



T01097 24x0.7 O-Ring
24x0. 7 0环
.....1

## 5 Gear Differential 齿轮差动 Bag-A


T01117 M2.5x8 Screw
M2. 5x8螺丝 .....4

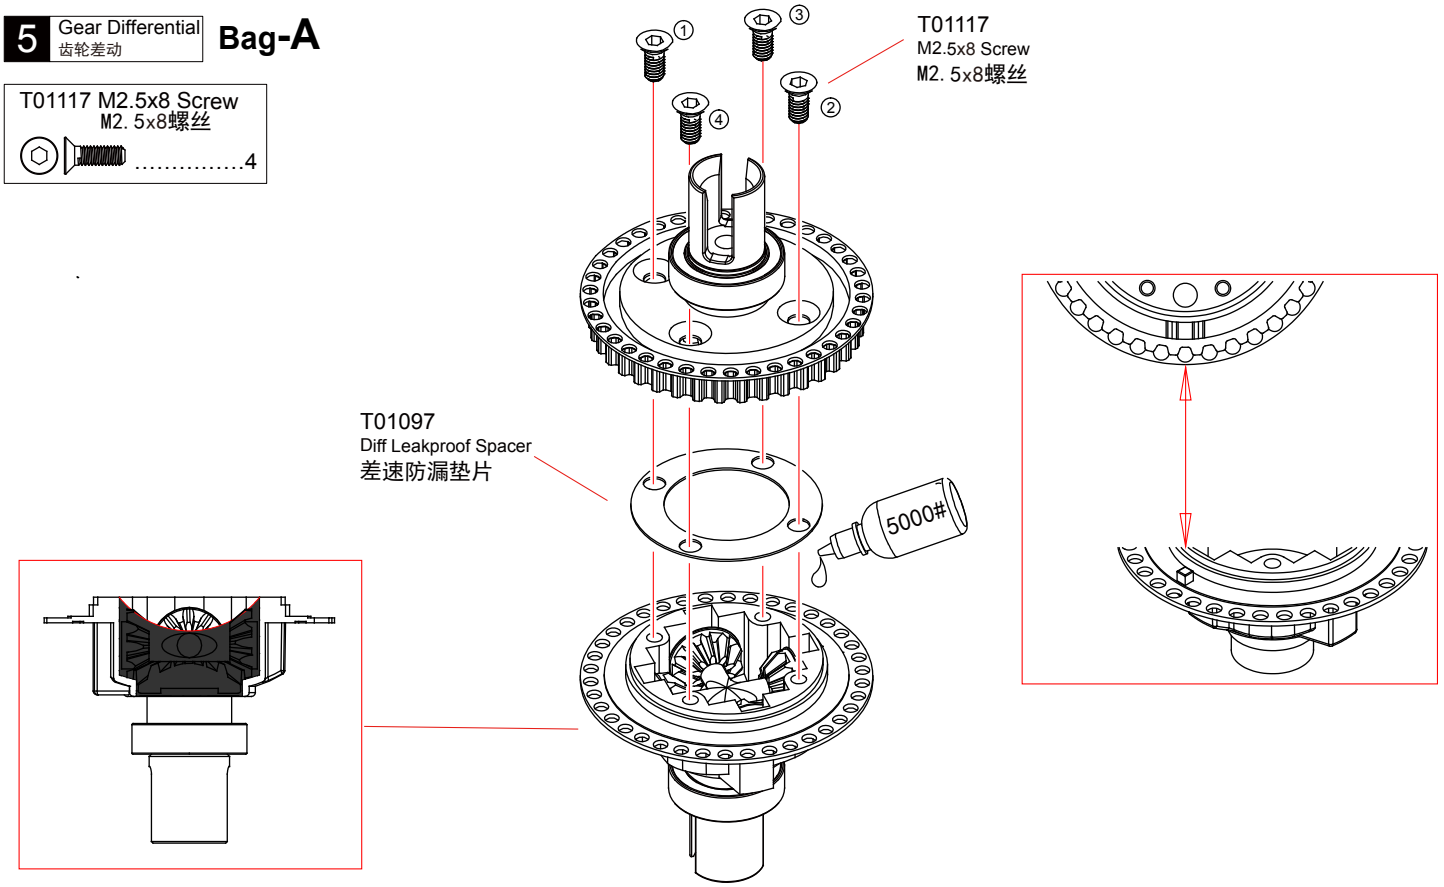


## 6 Gear Differential 齿轮差动 Bag-A

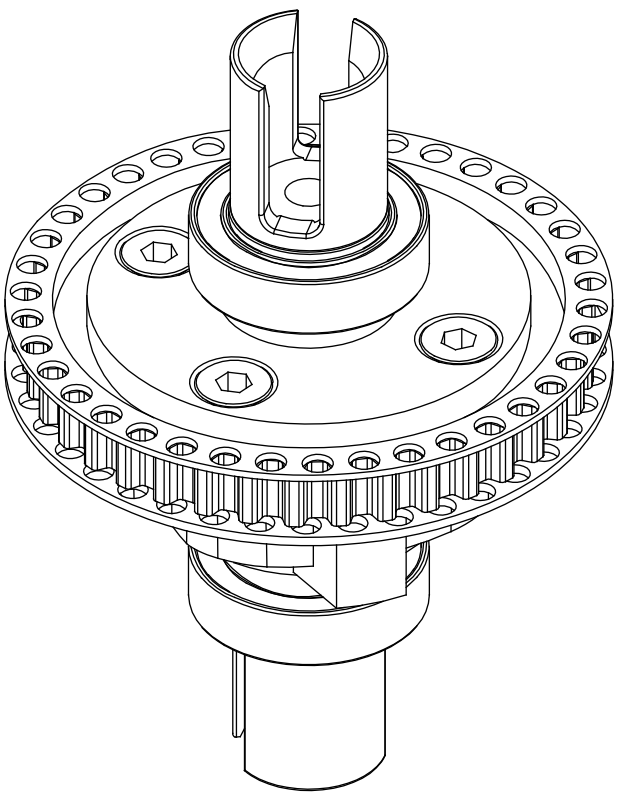

# 7 Solid Axle 实心轴 Bag-A

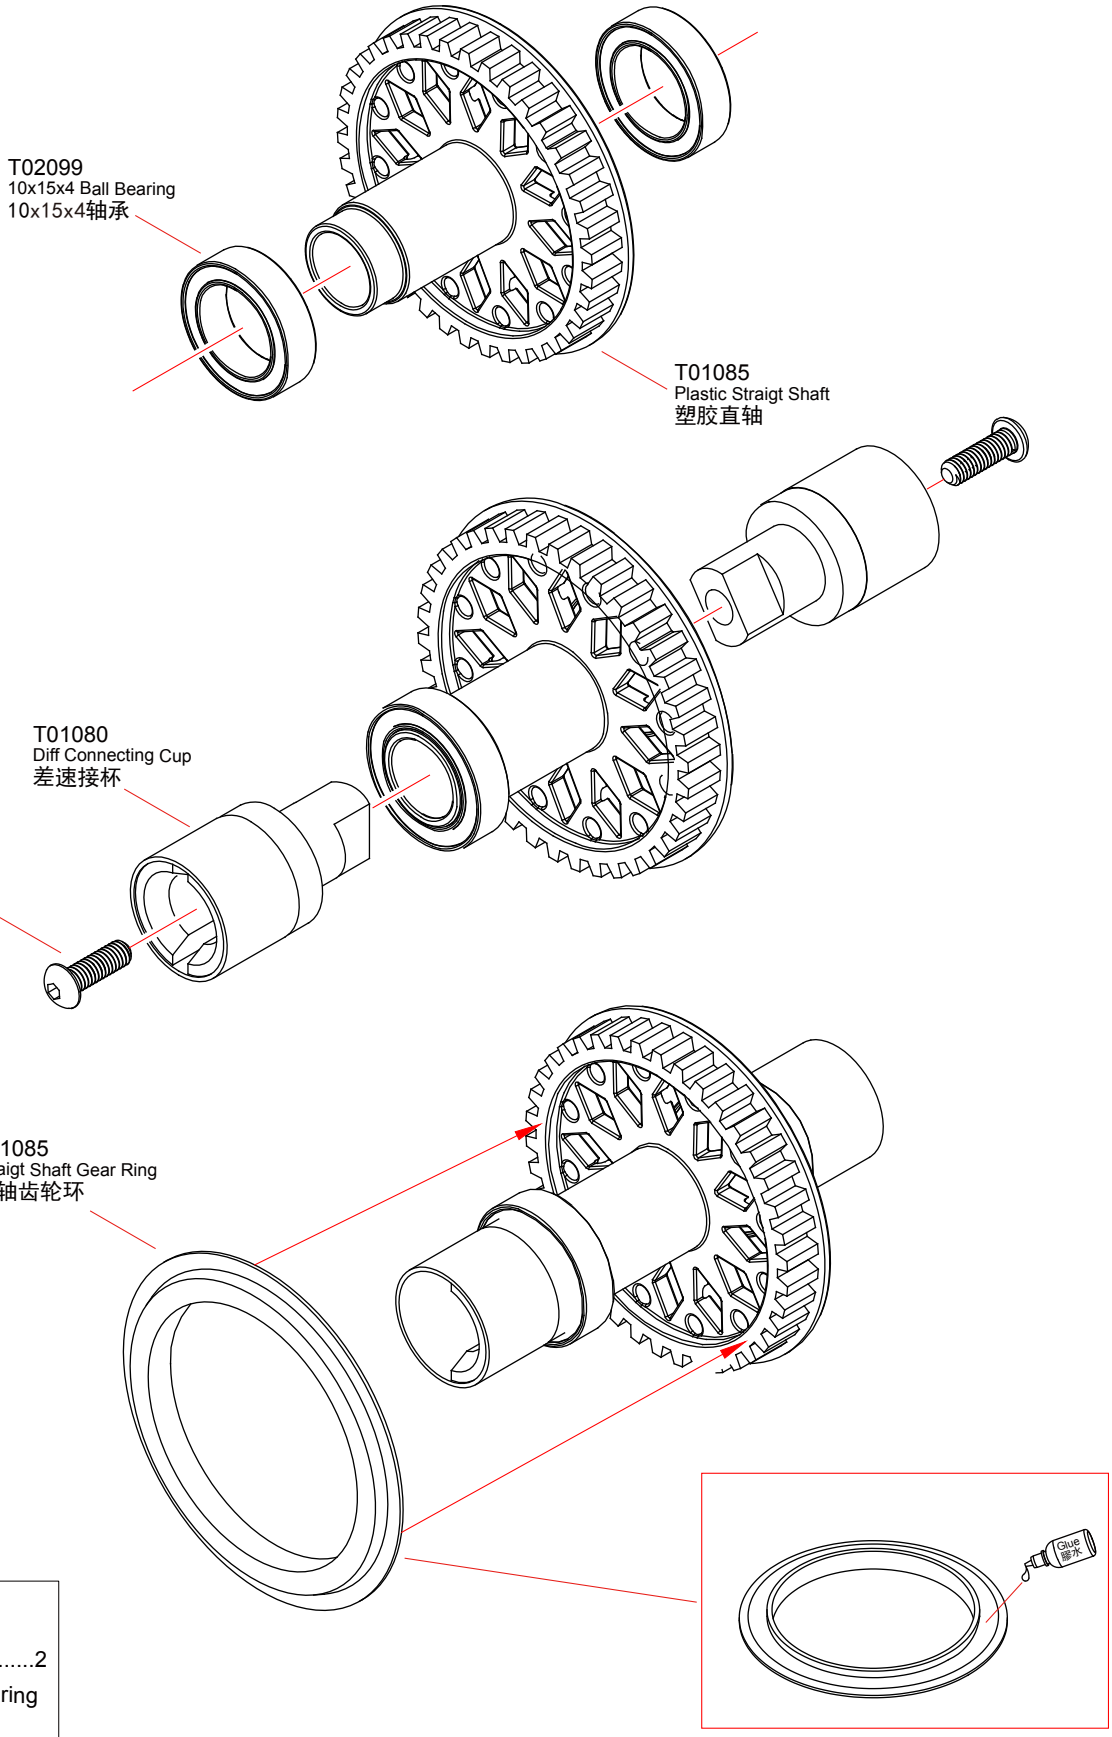



T01115 M3x10 Screw
M3x10螺丝 .....2

T02099 10x15x4 Ball Bearing
10x15x4轴承 .....2


## 8 Motor Mount/Side Panel
马达座/侧板

**Bag-B**

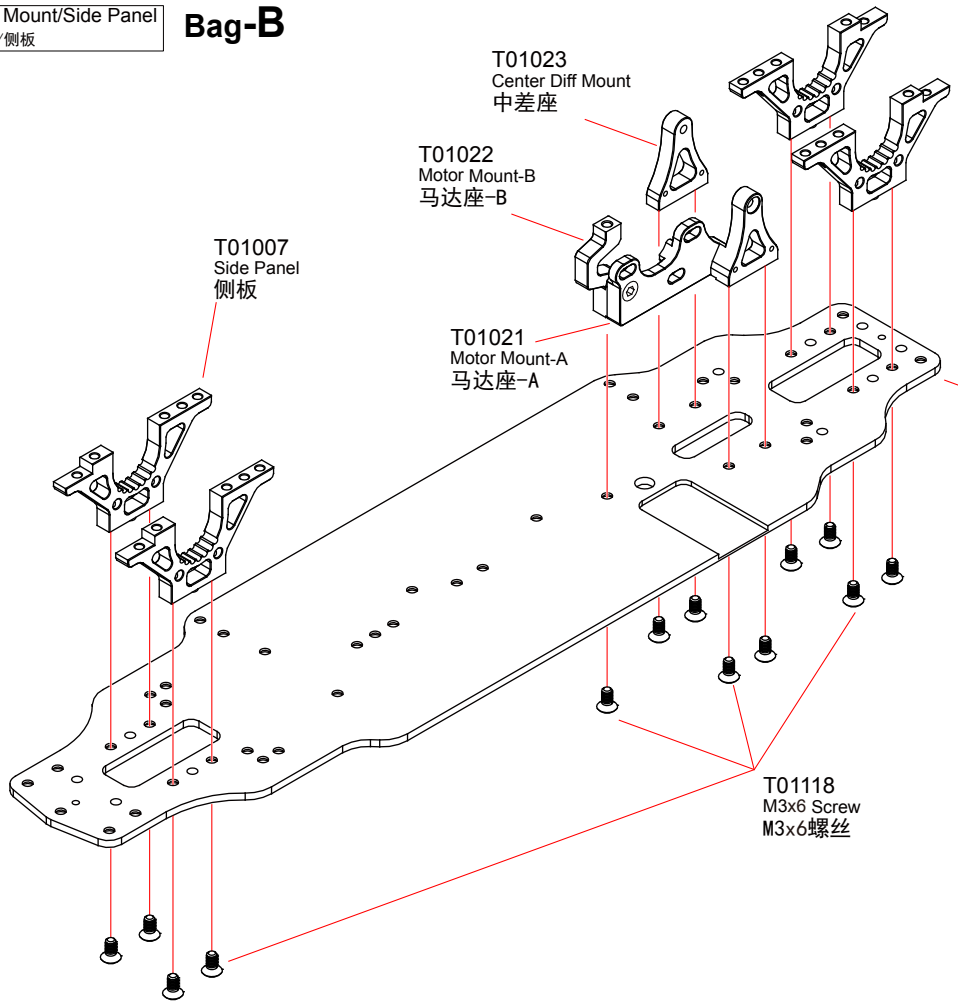



T01118 M3x6 Screw
M3x6螺絲 .....13

T01120 M3x10 Screw
M3x10螺丝 .....1

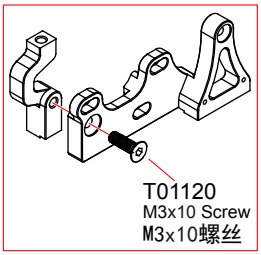


## 9 Center Gear Adaptor
中心齿轮适配器

**Bag-B**

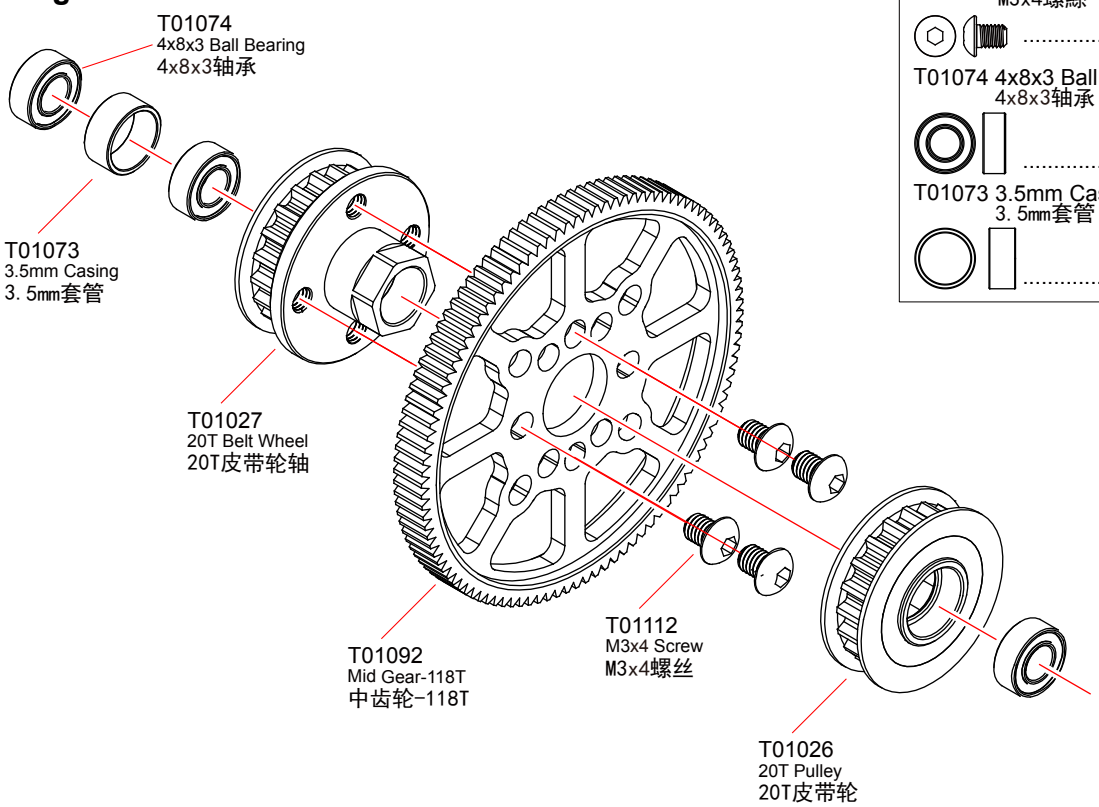



T01112 M3x4 Screw
M3x4螺絲 .....4

T01074 4x8x3 Ball Bearing
4x8x3轴承 .....3

T01073 3.5mm Casing
3. 5mm套管 .....1

## 10 Differential assembly 差速组装 Bag-B

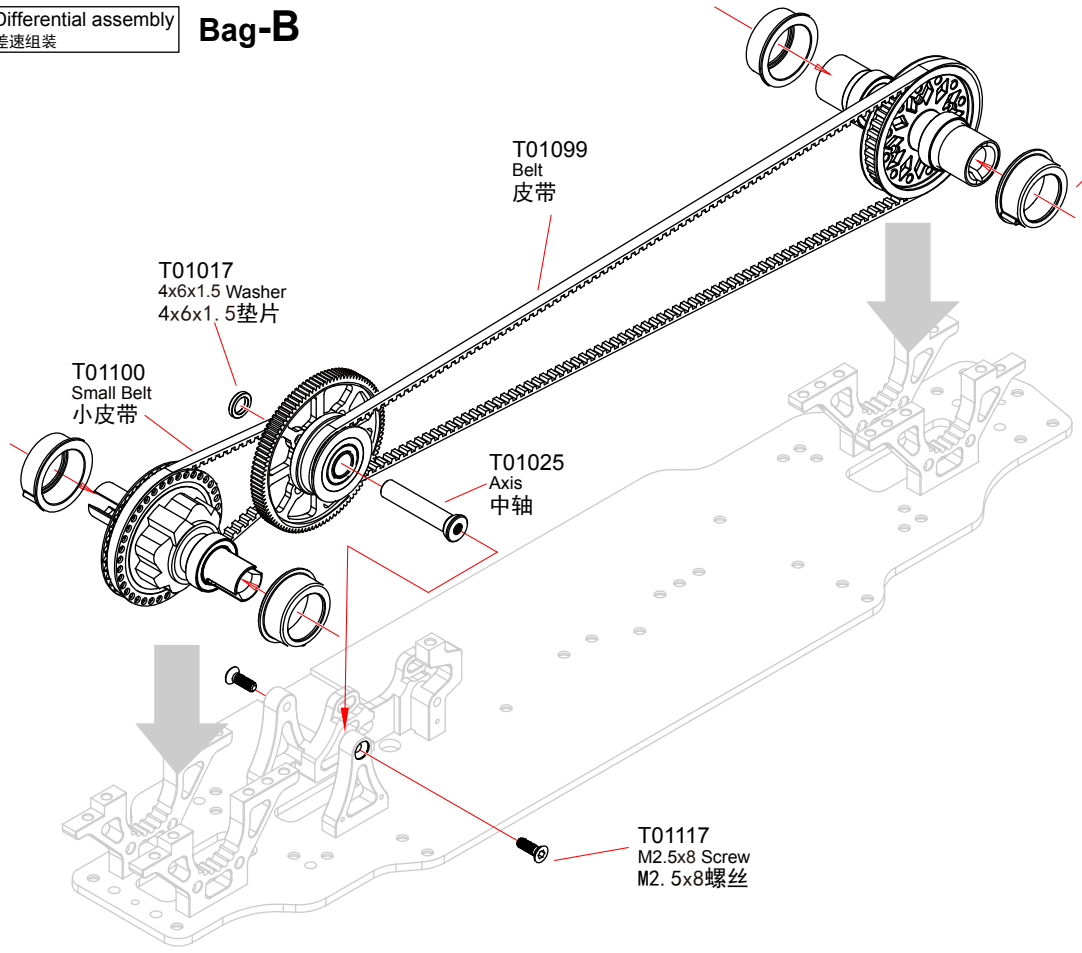



T01017 4x6x1.5 Washer 4x6x1. 5垫片 .....1
T01117 M2.5x8 Screw M2. 5x8螺丝 .....2


## 11 Differential assembly 差速组装 Bag-B

Front diff upper position provides more steering but provides less front traction.Recommended for medium-high grip tracks and technical tracks.
上层位置提供更多前差速转向但提供更少的前牵引。推荐用於中-高抓地赛道中控制。

4 Quarter

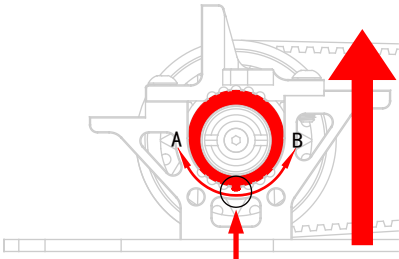



Front diff low position provides more front traction but makes the car more push on power.Recommended for low traction track.
提供更低的位置前面差速前牵引但使汽车更多的推动力量。推荐用於低抓地赛道。

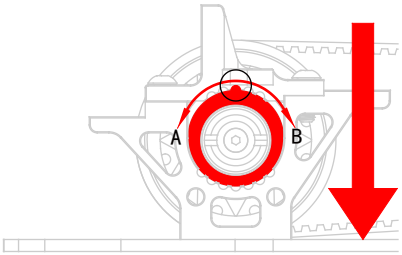



TO LOOSEN FRONT BELT: Rotate both front nylon hubs in arrow direction A
TO TIGHTEN FRONT BELT: Rotate both front nylon hubs in arrow direction B

INITIAL POSITION
PLACE TAB IN THIS BOTTOM NOTCH

Rear diff upper position provides more on-power steering but makes the rear slightly more loose.Recommended for medium-high traction tracks.
上层位置提供更多后方差速权力转向但让后方略微宽松的。推荐用於中-高抓地赛道。

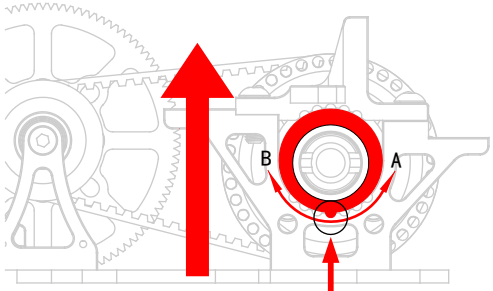


Rear diff lower position provides more rear traction,mainly on power traction and makes the car more stable in the chicanes, but makes the car push more on power.Recommended for low-medium traction.
提供更低的位置前面差速前牵引但使汽车更多的推动力量。推荐用於低抓地赛道。

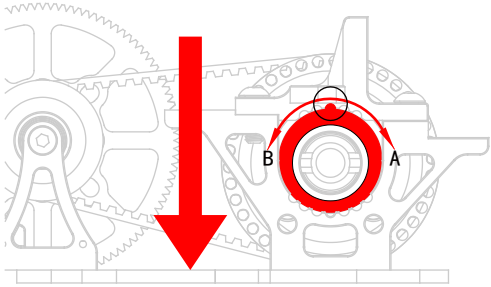



TO LOOSEN FRONT BELT: Rotate both rear nylon hubs in arrow direction A
TO TIGHTEN FRONT BELT: Rotate both rear nylon hubs in arrow direction B


INITIAL POSITION
PLACE TAB IN THIS BOTTOM NOTCH

## 12 Side Panel On The Cover 侧板上盖

**Bag-B**


T01113 M3x6 Screw
M3x6螺丝 .....8

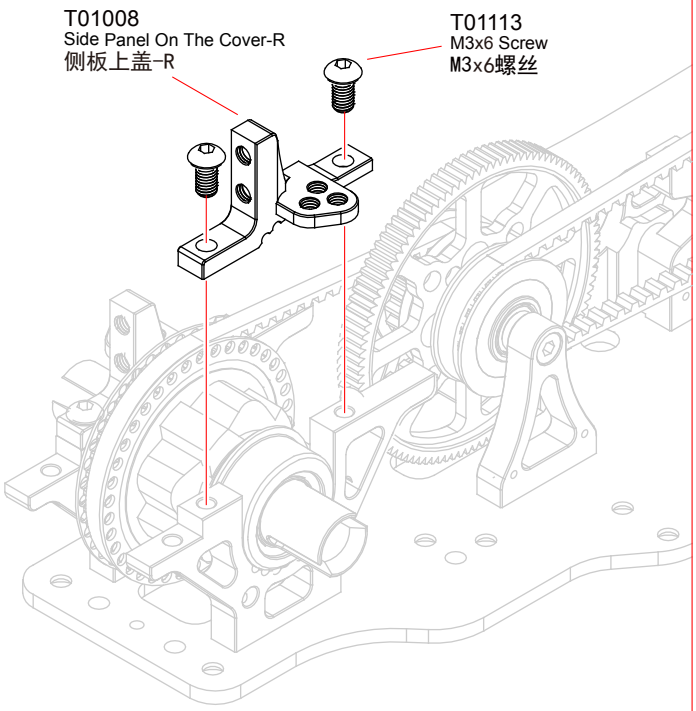


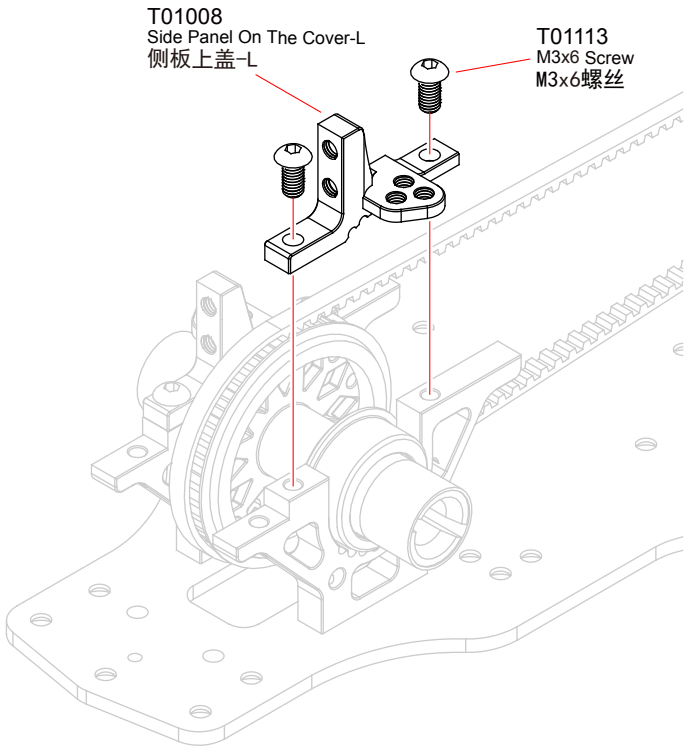
## 13 Front&Rear Shock Tower 前后避震器架

**Bag-B**



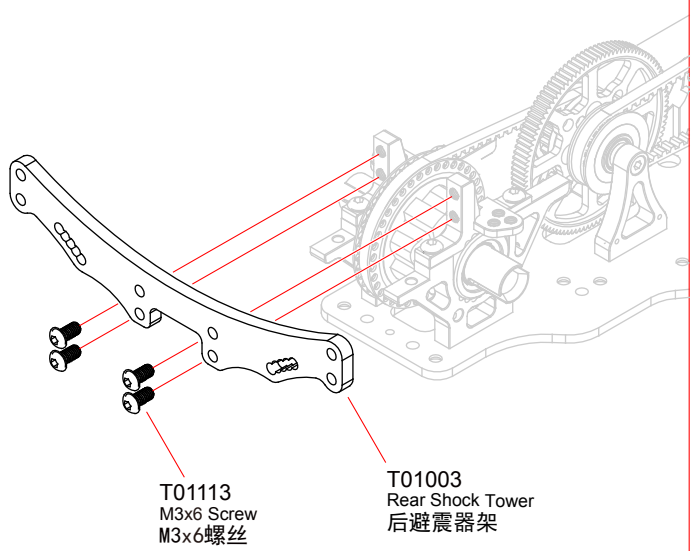


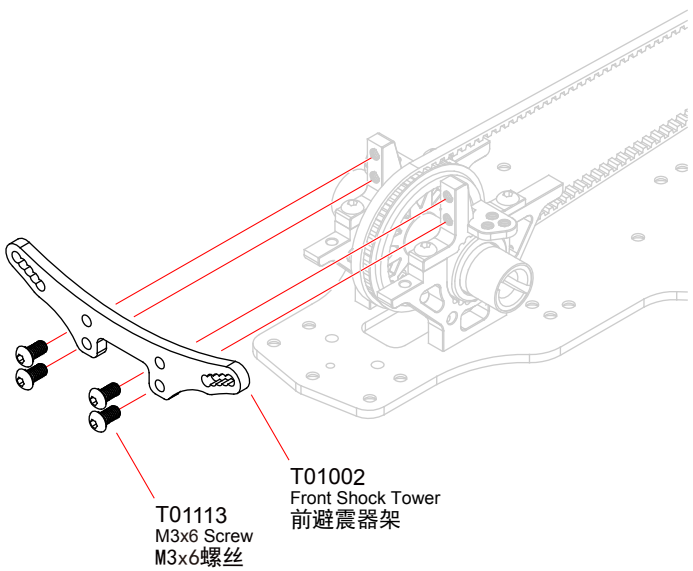

T01113 M3x6 Screw
M3x6螺丝 .....8

Apply threadlocker(screw cement)
打螺絲膠水


Assemble both Left and Right
組裝左和右
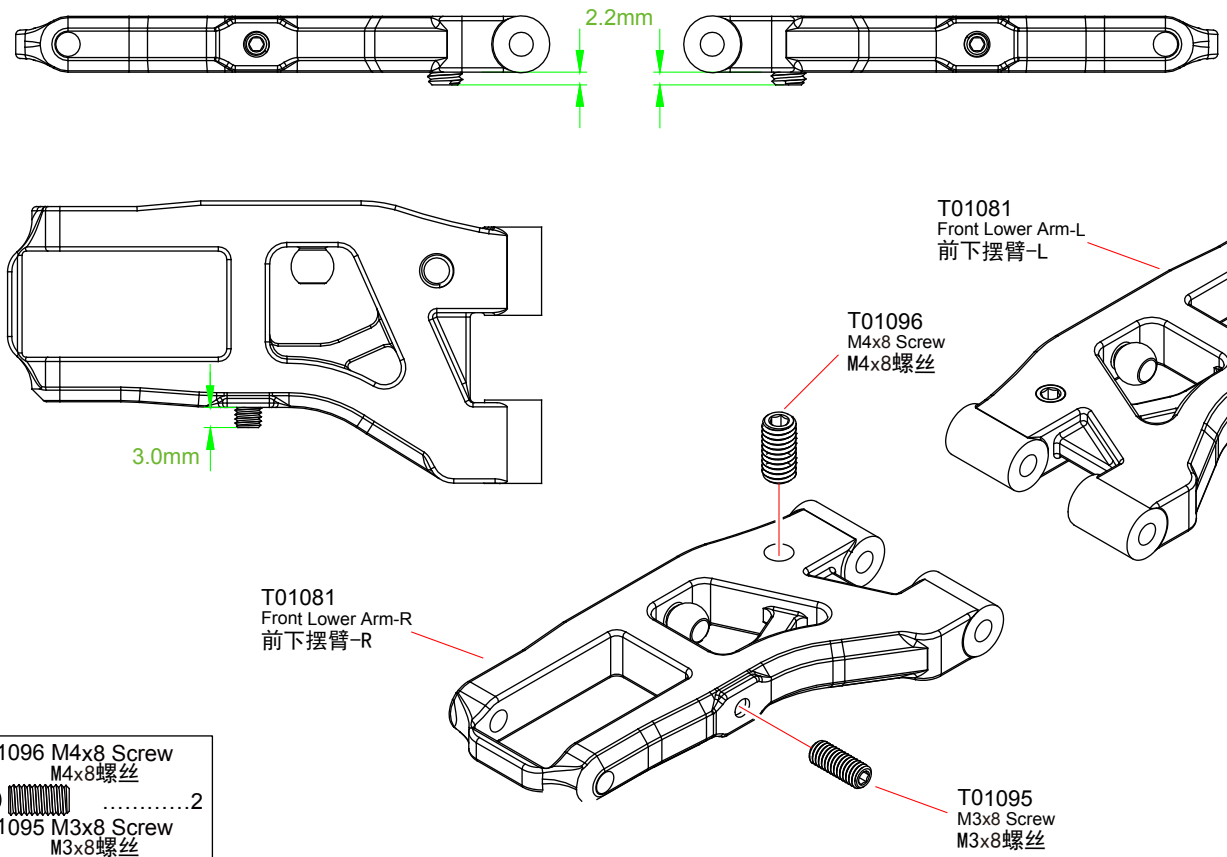
## 14 Front Lower Arm 前下摆臂 Bag-C




T01096 M4x8 Screw
M4x8螺丝 .....2
T01095 M3x8 Screw
M3x8螺丝 .....2

## 15 Rear Lower Arm 后下摆臂 Bag-C

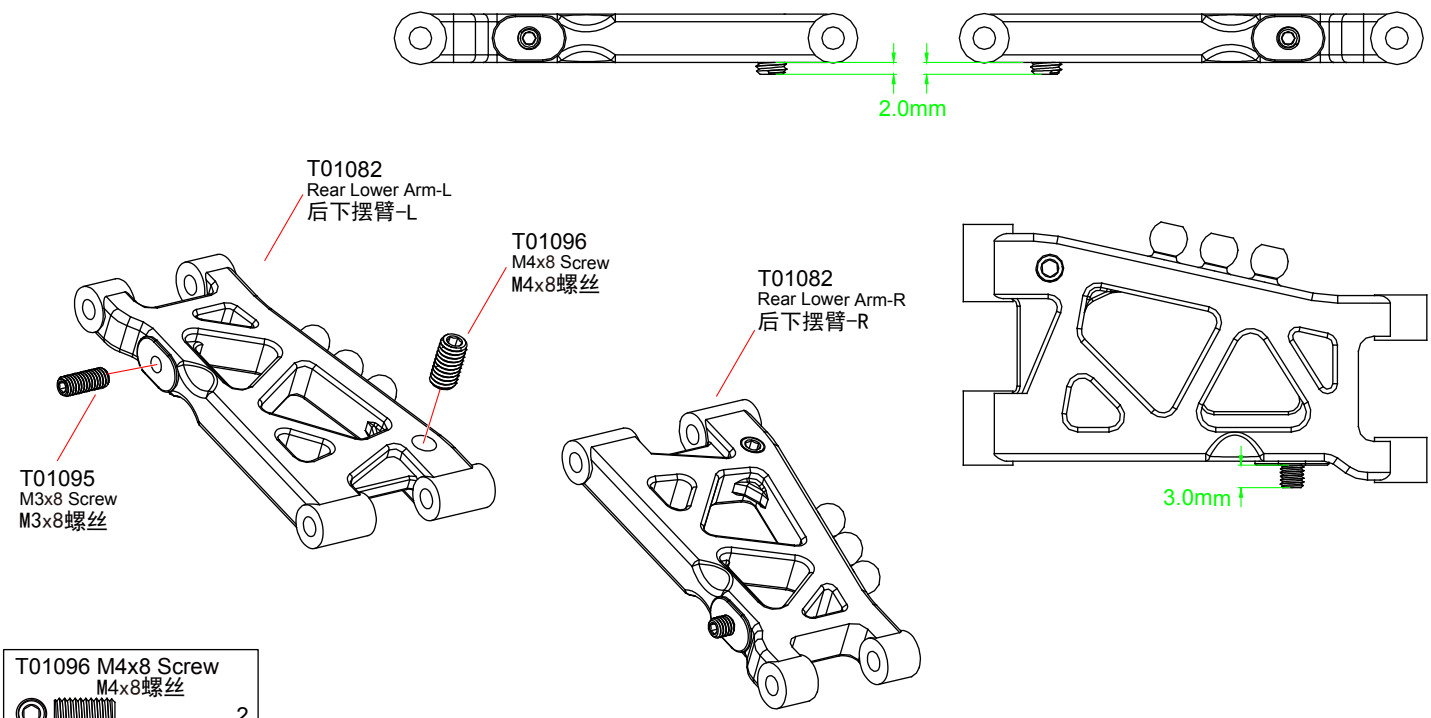



T01096 M4x8 Screw
M4x8螺丝 .....2
T01095 M3x8 Screw
M3x8螺丝 .....2

L/R Assemble both Left and Right
組裝左和右

## 16 Arm Mount/Projection Seat
摆臂固定座/投影座


**Bag-C**

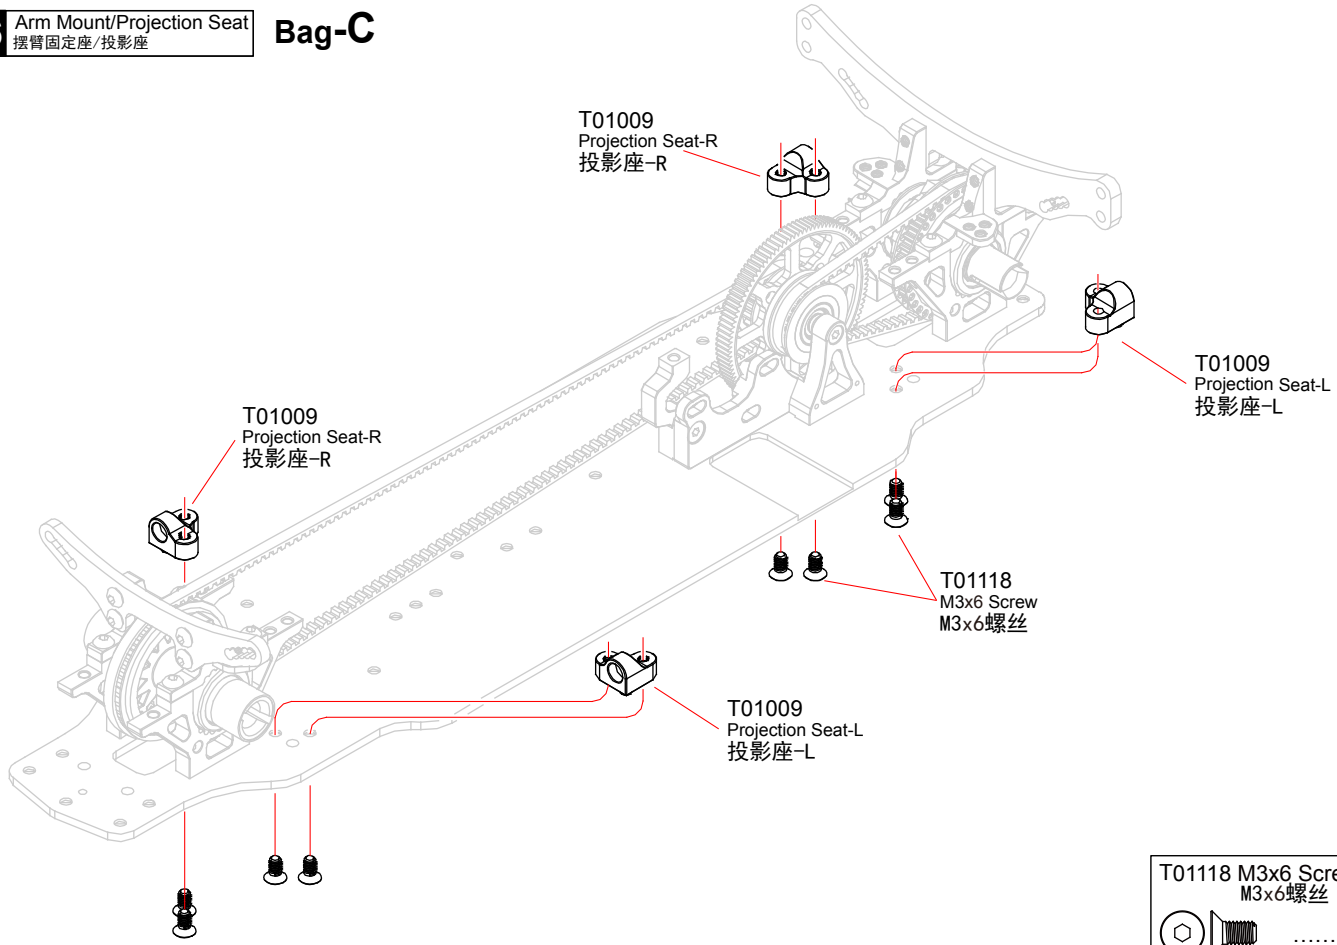


T01118 M3x6 Screw
M3x6螺丝 .....8

## 17 Front Lower Arm
前下摆臂

**Bag-C**

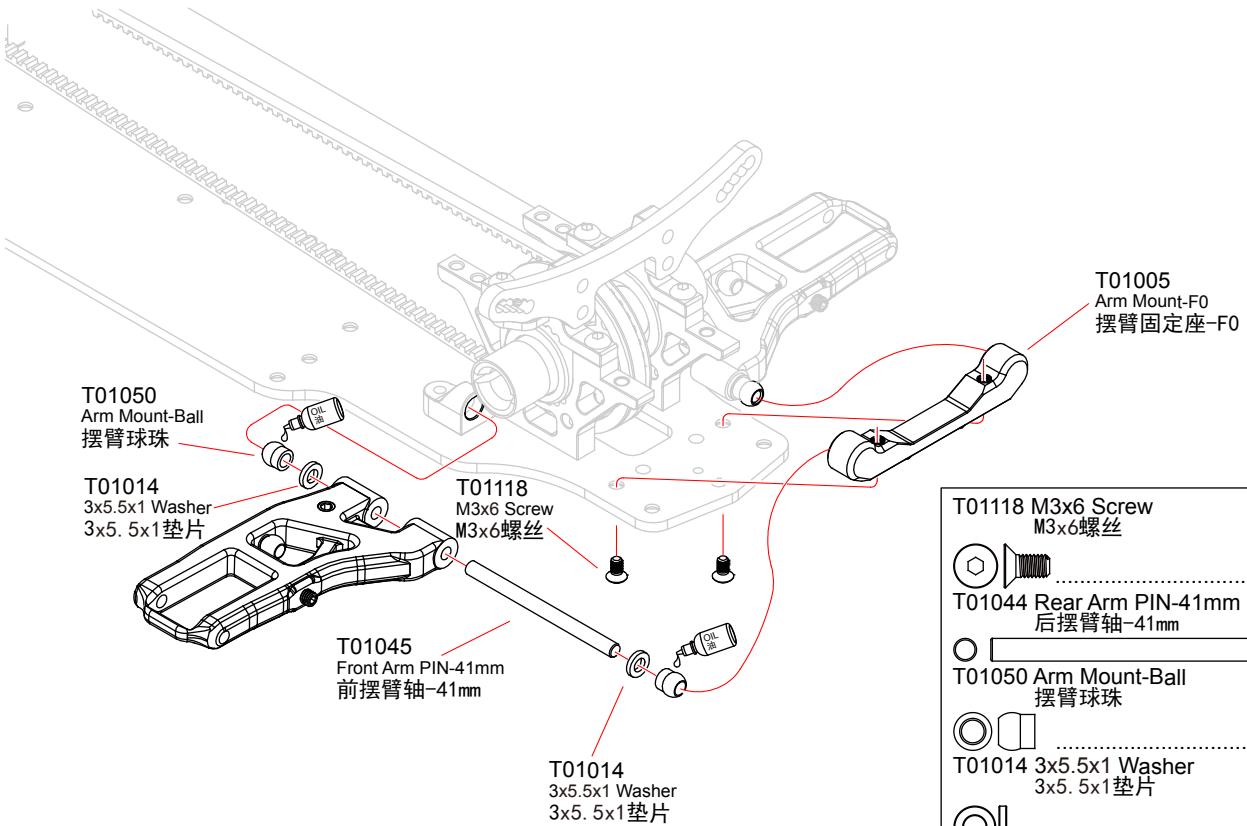


T01118 M3x6 Screw
M3x6螺丝 .....2

T01044 Rear Arm PIN-41mm
后摆臂轴-41mm .....2

T01050 Arm Mount-Ball
摆臂球珠 .....4

T01014 3x5.5x1 Washer
3x5. 5x1垫片 .....4

L/R Assemble both Left and Right
組裝左和右

## 18 Rear Lower Arm 后下摆臂 Bag-C


T01044 Rear Arm PIN-44mm
后摆臂轴-44mm ..... 2

T01050 Arm Mount-Ball
摆臂球珠 ..... 4


T01015 3x5.5x2 Washer
3x5. 5x2垫片 ..... 2

T01014 3x5.5x1 Washer
3x5. 5x1垫片 ..... 2


T01118 M3x6 Screw
M3x6螺丝 ..... 2

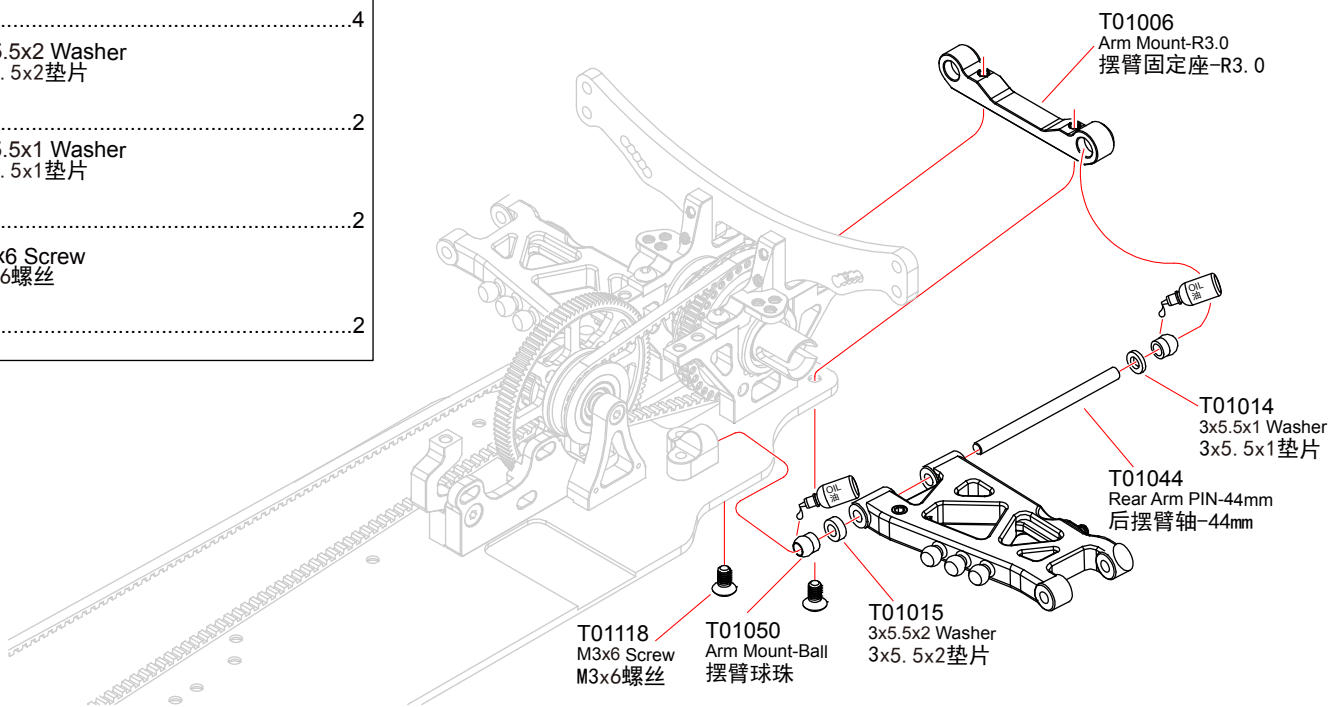



## 19 Turnbuckle 拉杆 Bag-D

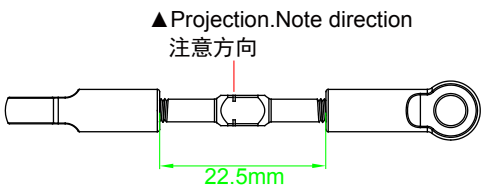




1:1 x1 Draglink-Lift
转向拉杆-左

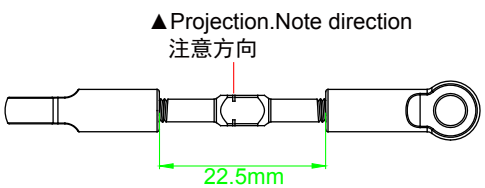


1:1 x1 Draglink-Right
转向拉杆-右

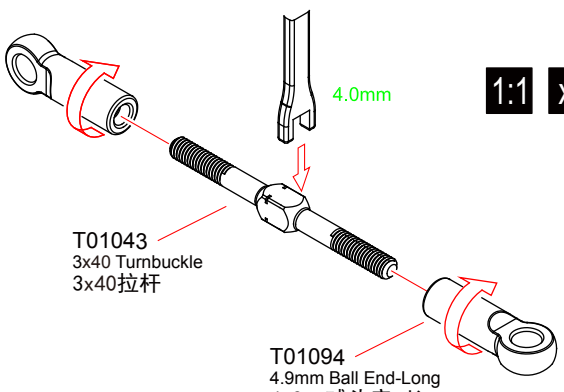

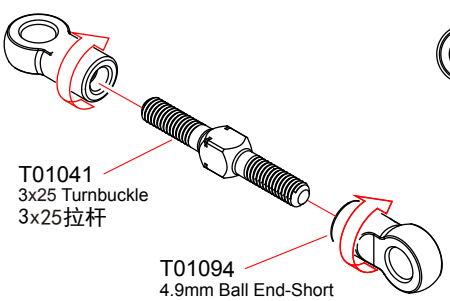
1:1 x1 Steering Servo Rod
转向伺服拉杆

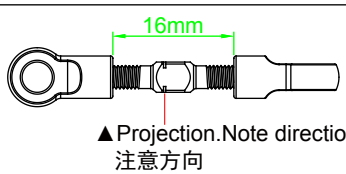T01043 3x40 Turnbuckle
3x40拉杆 ..... 2

T01094 4.9mm Ball End-Long
4. 9mm球头座-长 ..... 4

T01041 3x25 Turnbuckle
3x25拉杆 ..... 1


T01094 4.9mm Ball End-Short
4. 9mm球头座-短 ..... 2


1:1 Ture-to -scale diagram
圖形比例

x1 Assemble as many times as specified
需組裝次數

L/R Assemble both Left and Right
組裝左和右


## 20 Steering System 转向系统 Bag-D

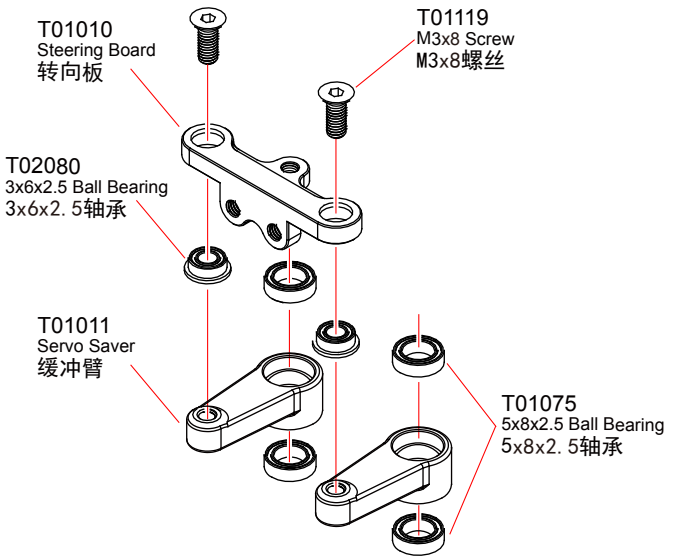

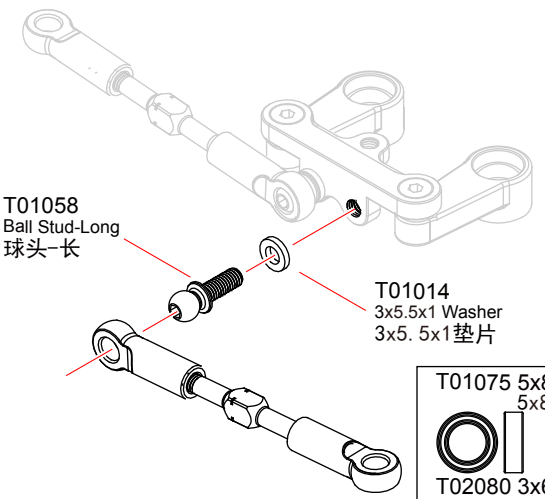
T01075 5x8x2.5 Ball Bearing 5x8x2. 5轴承 .....4
T02080 3x6x2.5 Ball Bearing 3x6x2. 5轴承 .....2
T01119 M3x8 Screw M3x8螺丝 .....2
T01014 3x5.5x1 Washer 3x5. 5x1垫片 .....2
T01058 Ball Stud-Long 球头-长 .....2


## 21 Steering System 转向系统 Bag-D

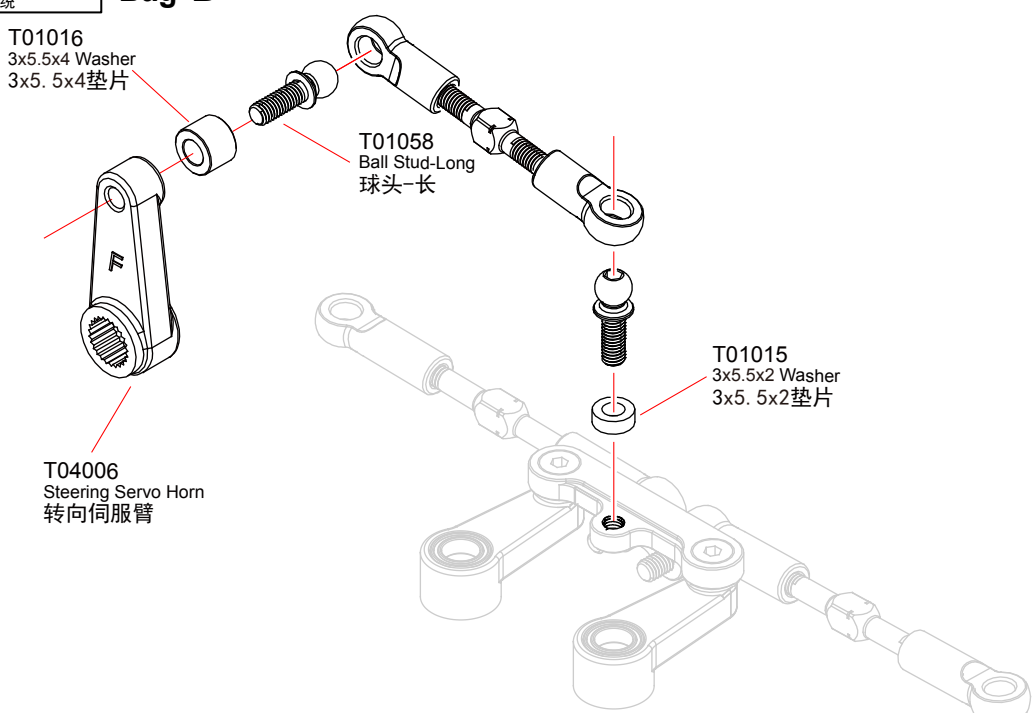


T01016 3x5.5x4 Washer 3x5. 5x4垫片 .....1
T01015 3x5.5x2 Washer 3x5. 5x2垫片 .....1
T01058 Ball Stud-Long 球头-长 .....2


Apply threadlocker(screw cement)
打螺絲膠水


## 22 Steering System 转向系统 Bag-D

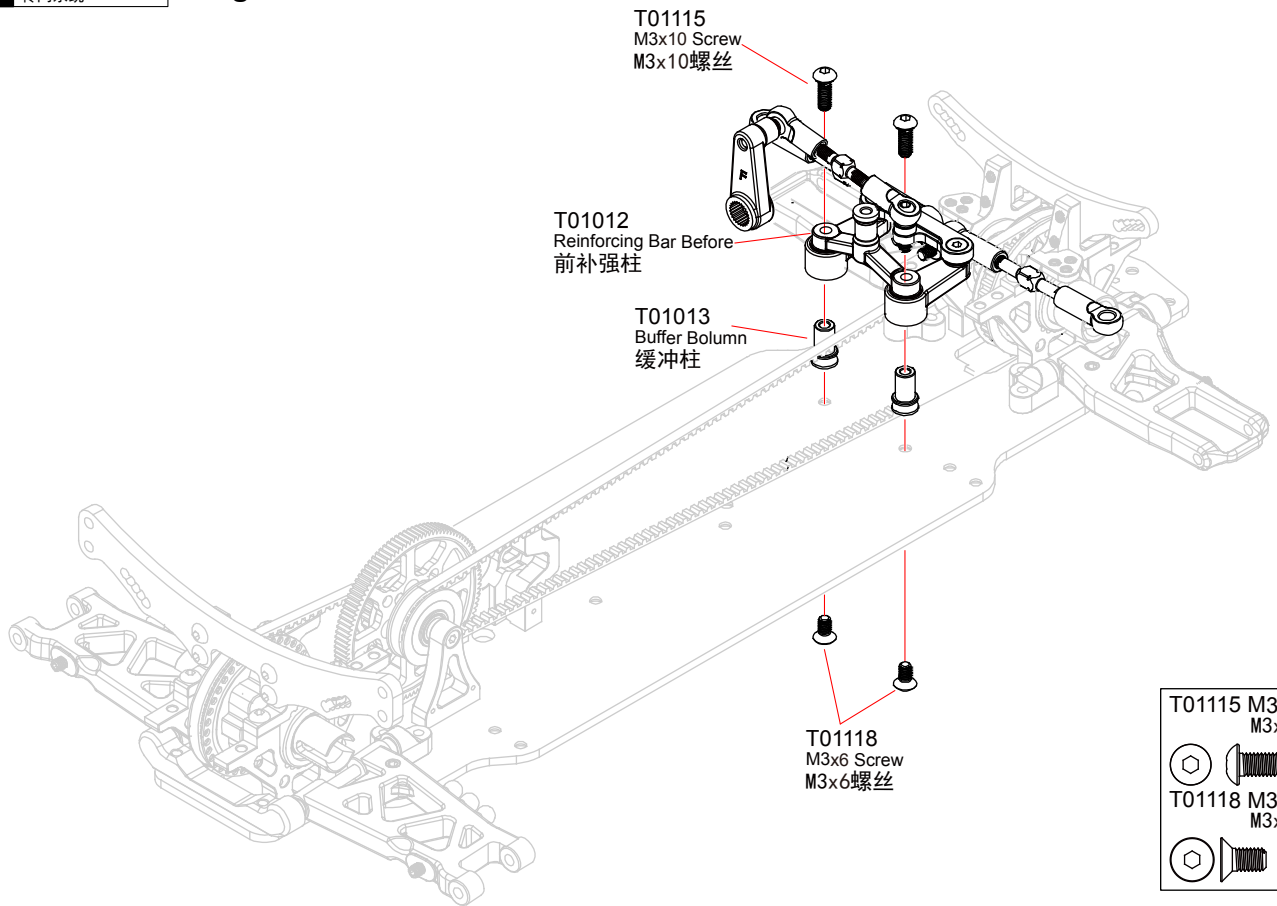


T01115 M3x10 Screw
M3x10螺丝 .....2
T01118 M3x6 Screw
M3x6螺丝 .....2


## 23 Top Deck 二楼板 Bag-D

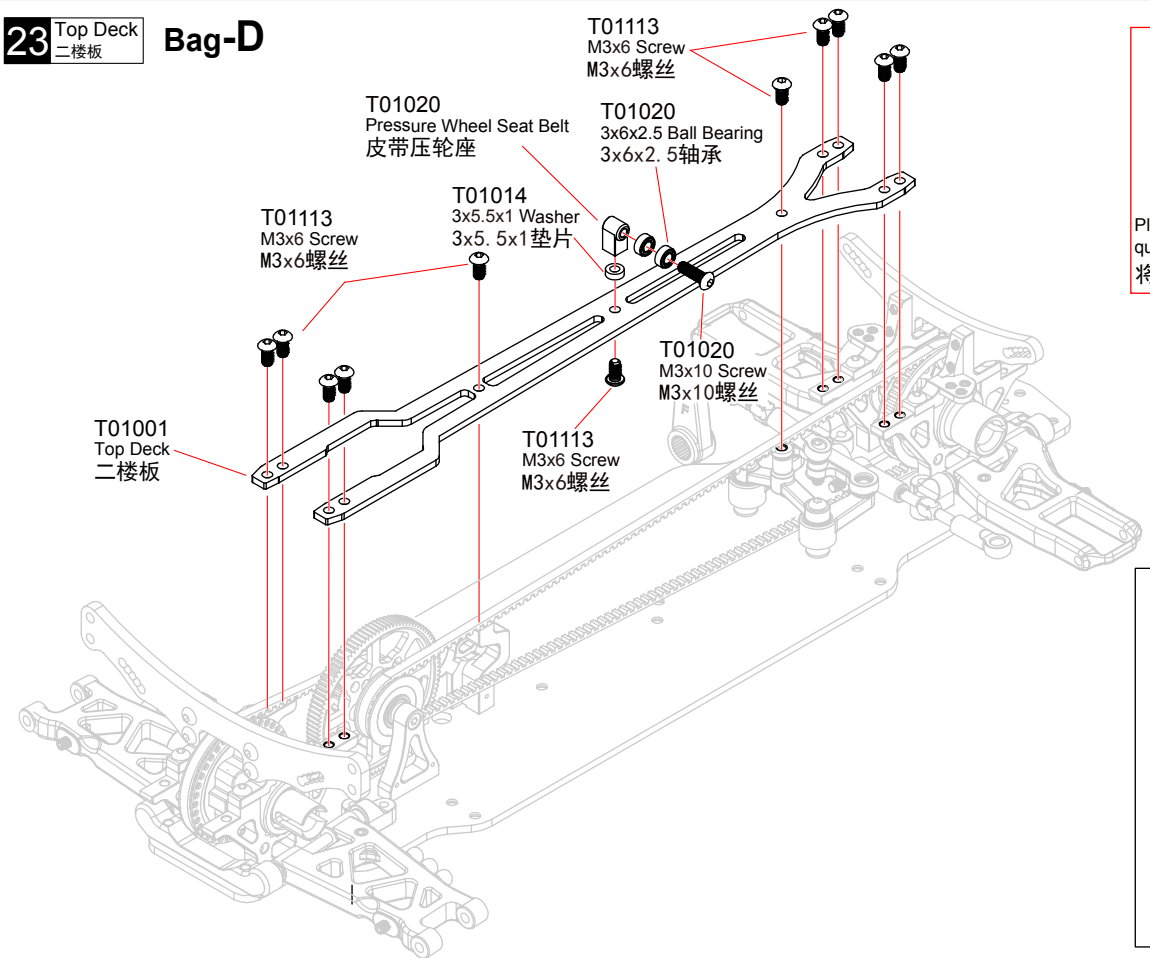

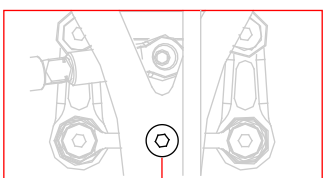

T01014 3x5.5x1 Washer
3x5. 5x1垫片 .....1
T01020 3x6x2.5 Ball Bearing
3x6x2. 5轴承 .....2
T01020 M3x10 Screw
M3x10螺丝 .....1
T01113 M3x6 Screw
M3x6螺丝 .....11

## 24 CVD Group CVD组 Bag-E

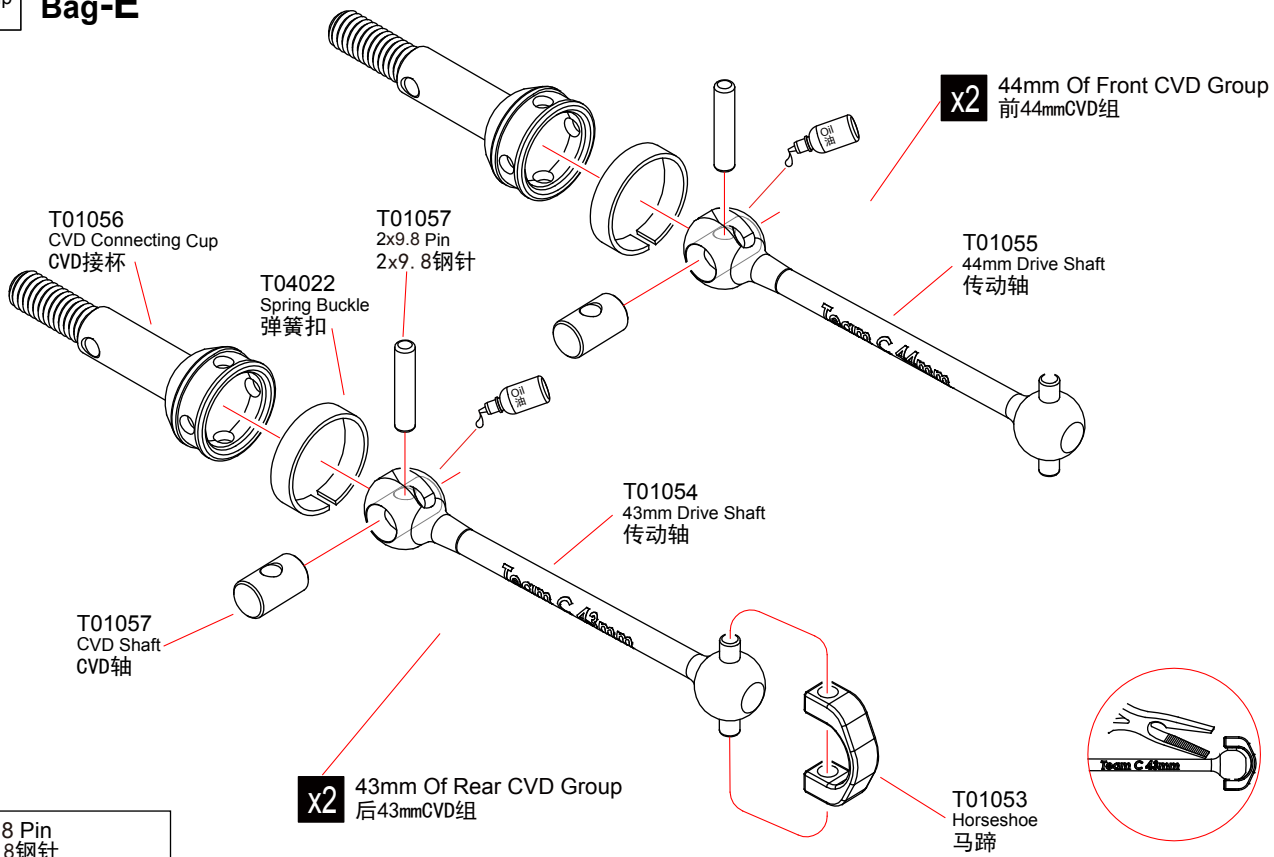


T01057 2x9.8 Pin
2x9. 8钢针 .....4

## 25 Rear Hub Carriers 后轮座 Bag-E x2

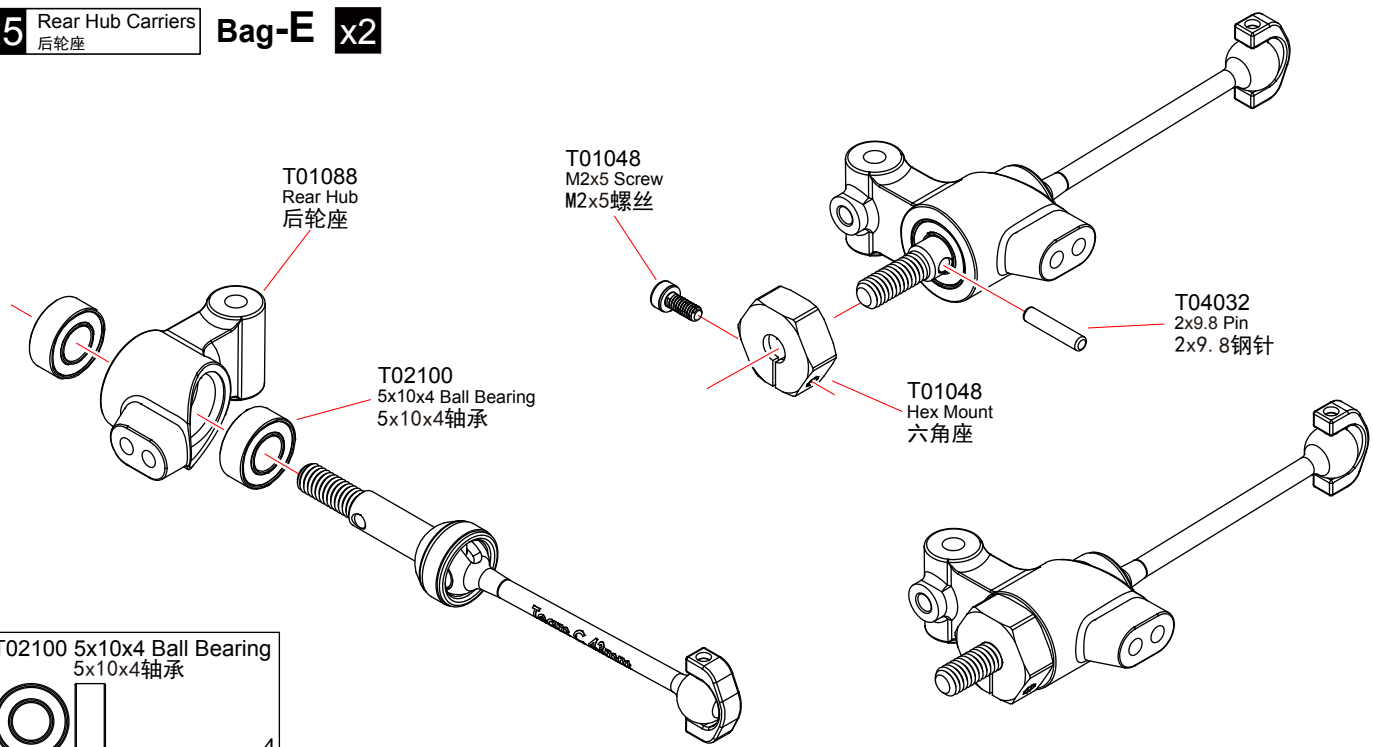



T02100 5x10x4 Ball Bearing
5x10x4轴承 .....4
T01048 M2x5 Screw
M2x5螺丝 .....2
T04032 2x9.8 Pin
2x9. 8钢针 .....2

L/R Assemble both Left and Right
組裝左和右

x2 Assemble as many times as specified
需組裝數量

## 26 Front Hub Carriers 前轮座 Bag-E x2

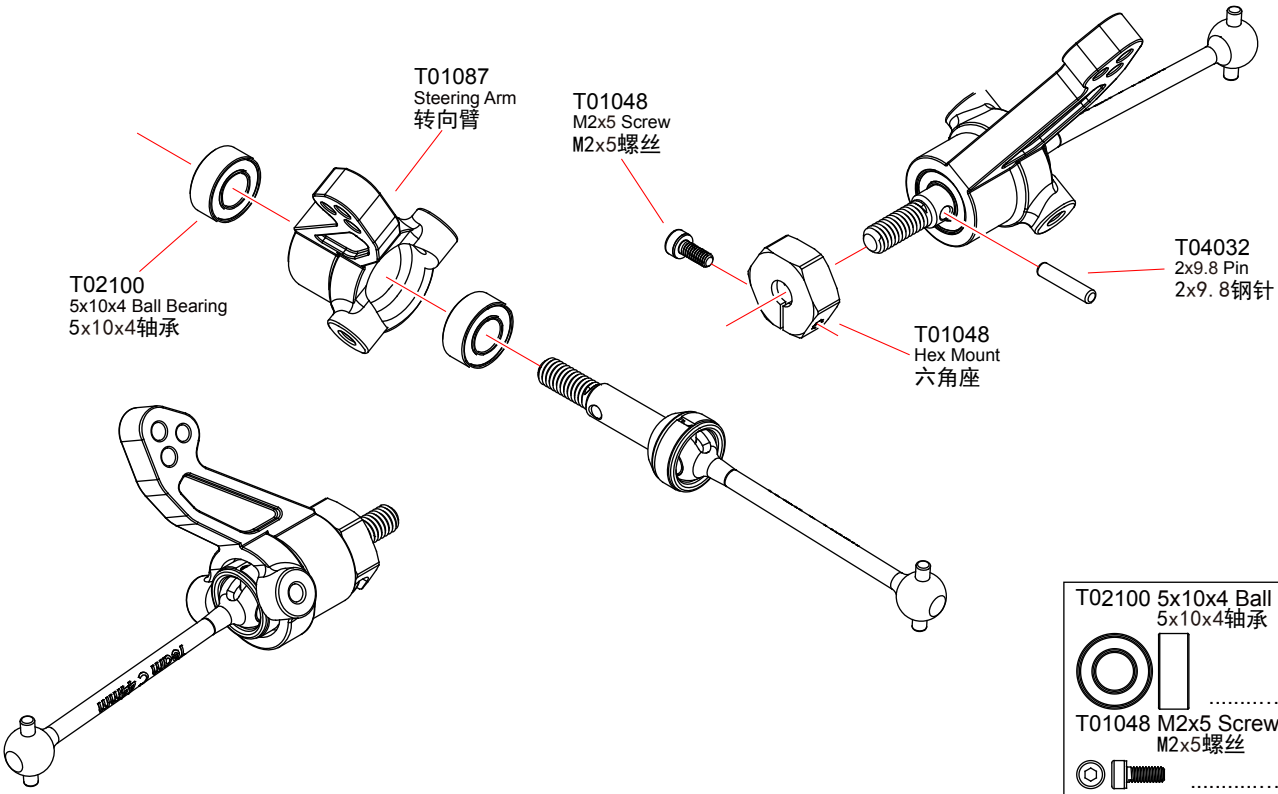



T02100 5x10x4 Ball Bearing
5x10x4轴承 .....4

T01048 M2x5 Screw
M2x5螺丝 .....2

T04032 2x9.8 Pin
2x9. 8钢针 .....2


## 27 Front Hub Carriers 前轮座 Bag-E

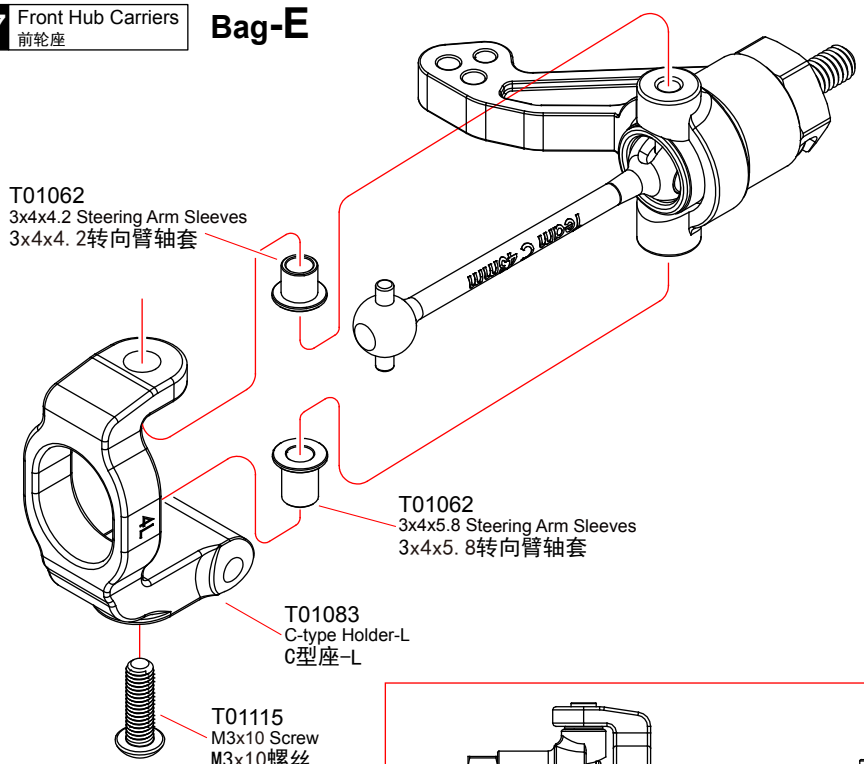


T01062 3x4x4.2 Steering Arm Sleeves
3x4x4. 2转向臂轴套 .....2

T01062 3x4x5.8 Steering Arm Sleeves
3x4x5. 8转向臂轴套 .....2


T01115 M3x10 Screw
M3x10螺丝 .....2

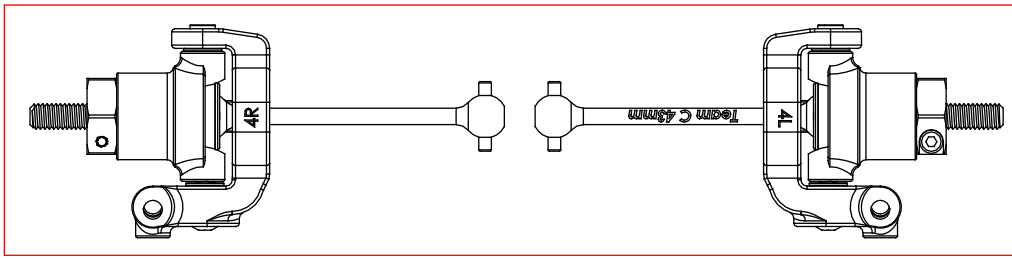



L/R Assemble both Left and Right
組裝左和右

x2 Assemble as many times as specified
需組裝數量

## 28 Turnbuckle 拉杆 Bag-E

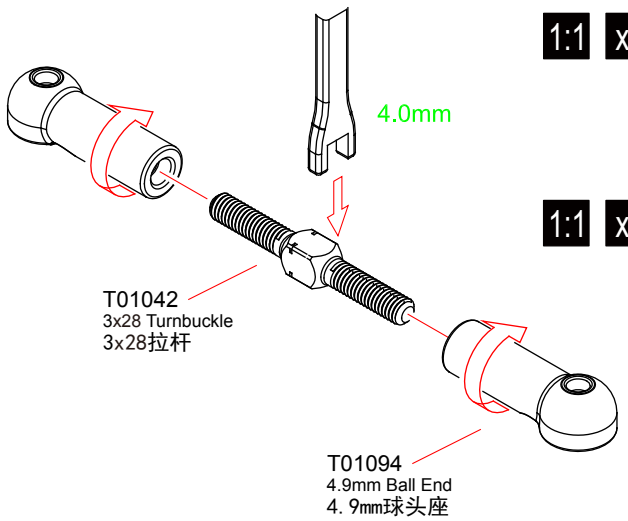



1:1 x2 Front Upper Rod 前上拉杆




▲Projection.Note direction
注意方向


1:1 x2 Rear Upper Rod 后上拉杆




▲Projection.Note direction
注意方向

T01042 3x28 Turnbuckle 3x28拉杆 .....4
T01094 4.9mm Ball End 4. 9mm球头座 .....8


## 29 Rear Suspension Arm 后摆臂 Bag-E

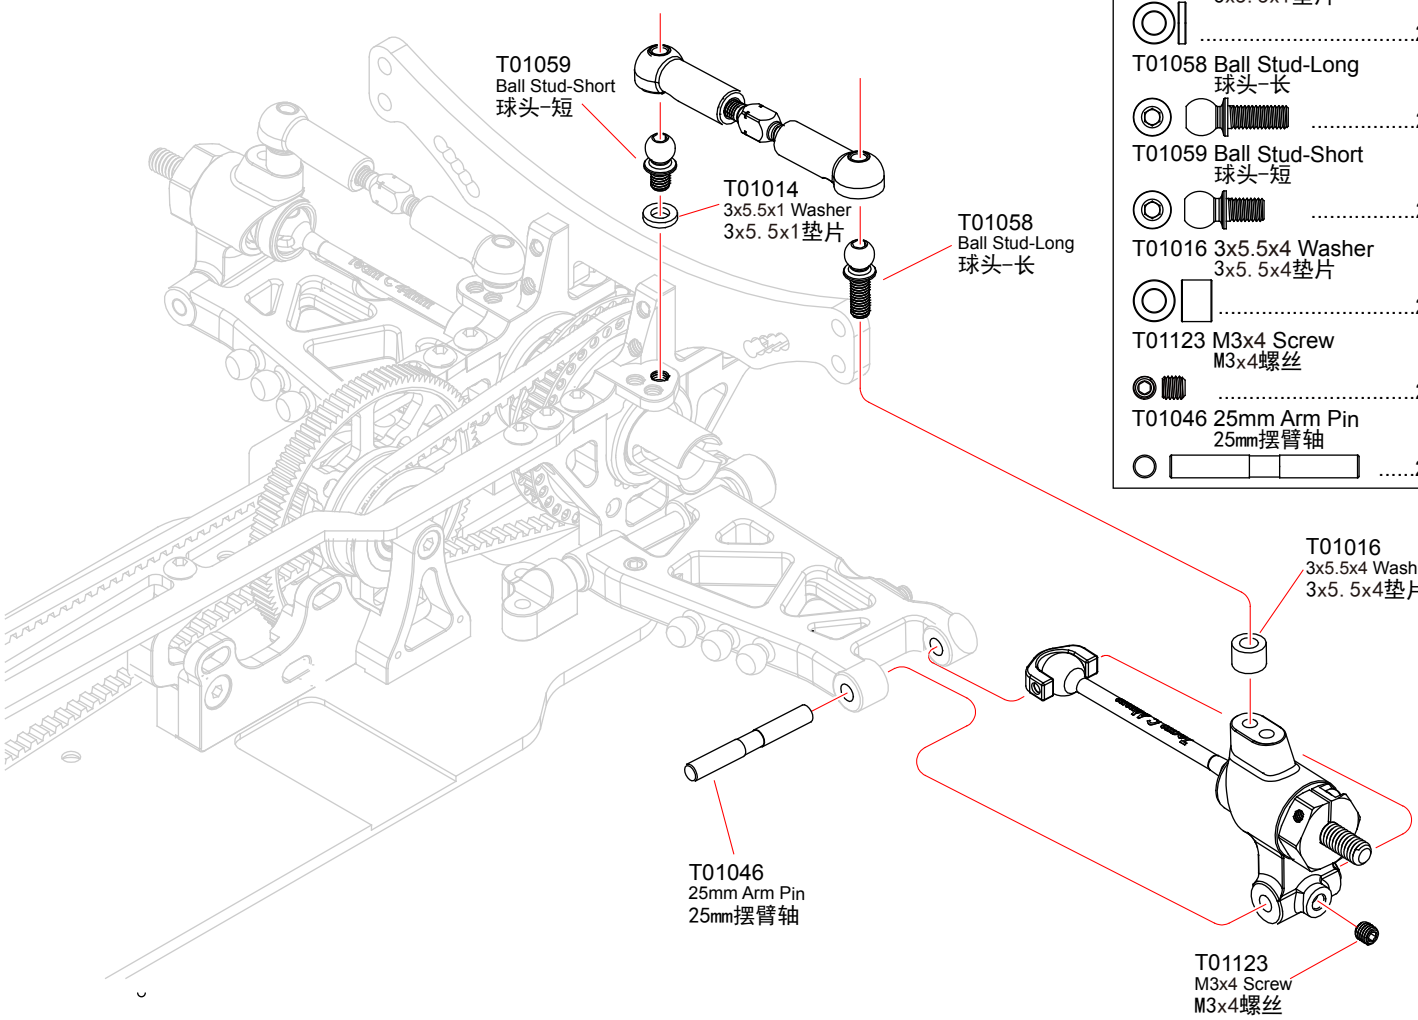


T01014 3x5.5x1 Washer 3x5. 5x1垫片 .....2
T01058 Ball Stud-Long 球头-长 .....2
T01059 Ball Stud-Short 球头-短 .....2
T01016 3x5.5x4 Washer 3x5. 5x4垫片 .....2
T01123 M3x4 Screw M3x4螺丝 .....2
T01046 25mm Arm Pin 25mm摆臂轴 .....2


L/R Assemble both Left and Right 組裝左和右
1:1 Ture-to -scale diagram 圖形比例
x2 Assemble as many times as specified 需組裝數量

## 30 Front Suspension Arm 前摆臂 Bag-E

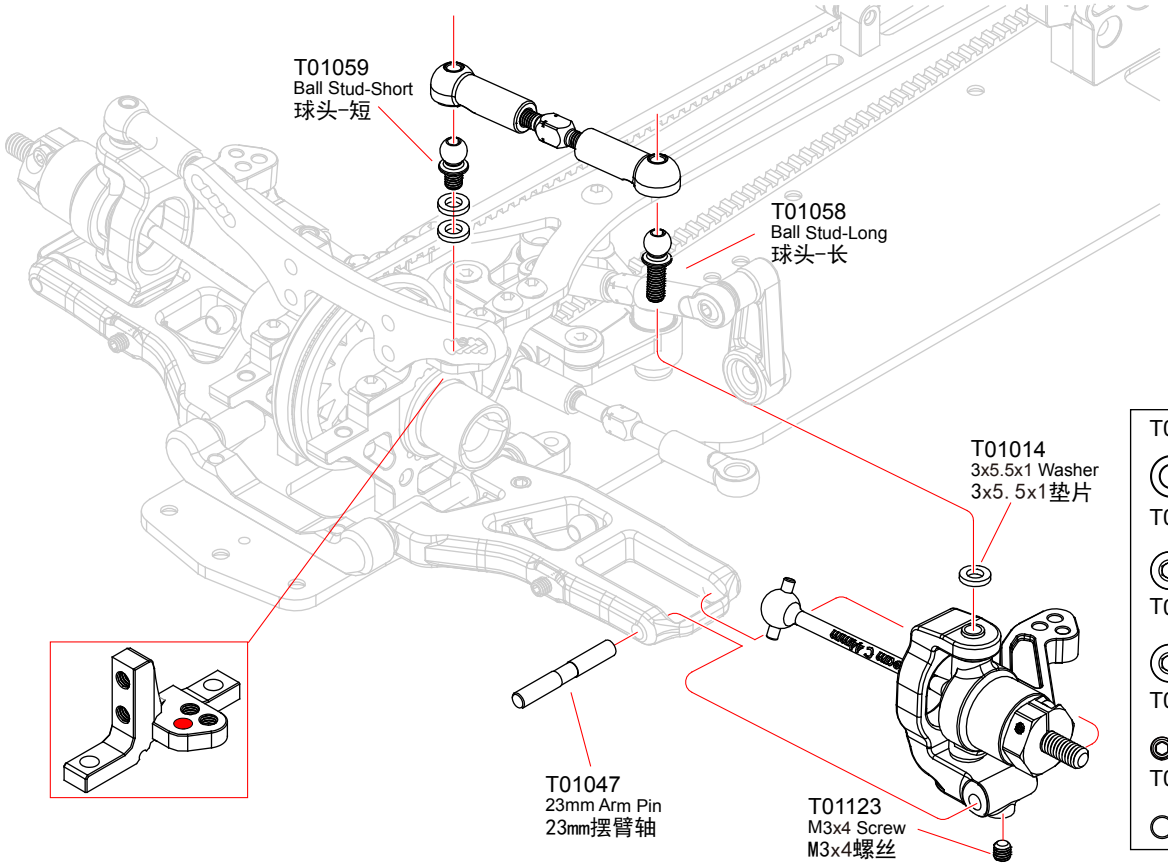


T01014 3x5.5x1 Washer 3x5. 5x1垫片 .....6
T01058 Ball Stud-Long 球头-长 .....2
T01059 Ball Stud-Short 球头-短 .....2
T01123 M3x4 Screw M3x4螺丝 .....2
T01046 25mm Arm Pin 25mm摆臂轴 .....2


## 31 Servo Arm 伺服臂 Bag-E

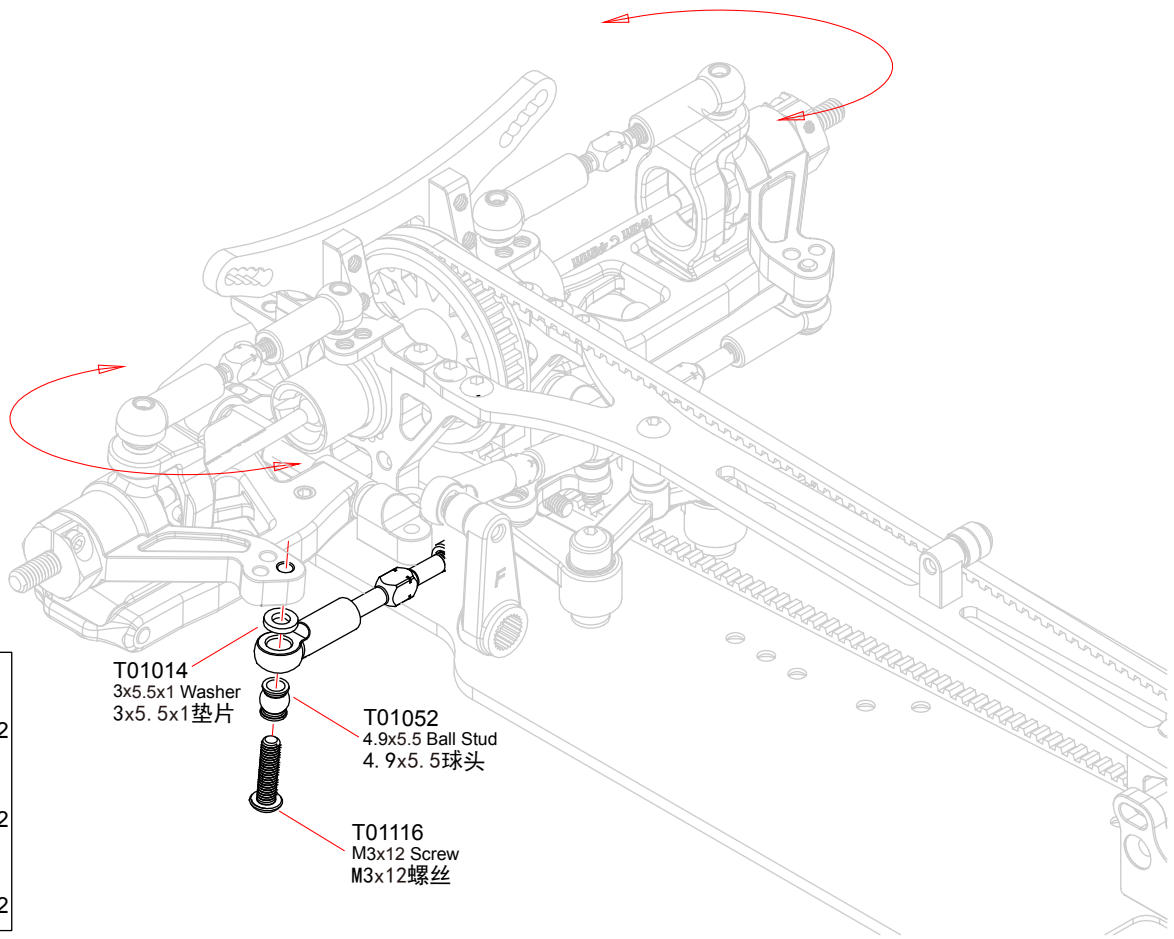



T01052 4.9x5.5 Ball Stud 4. 9x5. 5球头 .....2
T01014 3x5.5x1 Washer 3x5. 5x1垫片 .....2
T01116 M3x12 Screw M3x12螺丝 .....2


L/R Assemble both Left and Right
組装左和右

## 32 Turnbuckle 拉杆 Bag-F

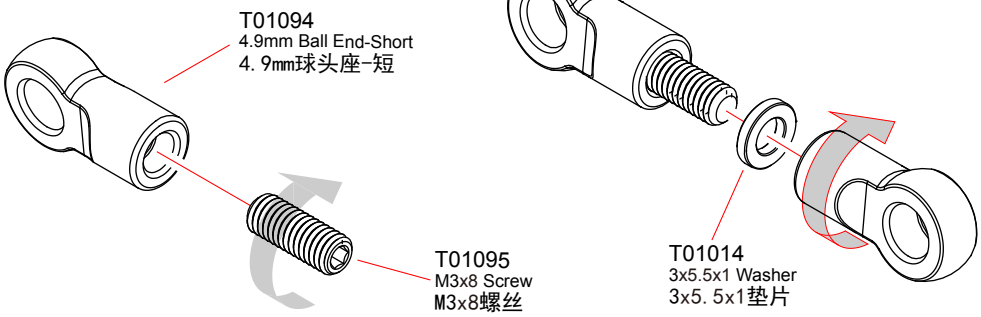



T01014 3x5.5x1 Washer
3x5. 5x1垫片 .....4
T01094 4.9mm Ball End-Short
4. 9mm球头座-短 .....8
T01095 M3x8 Screw
M3x8螺丝 .....4

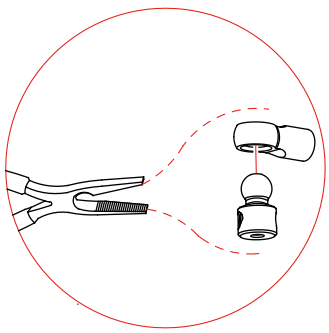


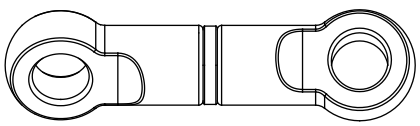


## 33 Front Swaybar 前防倾杆 Bag-F

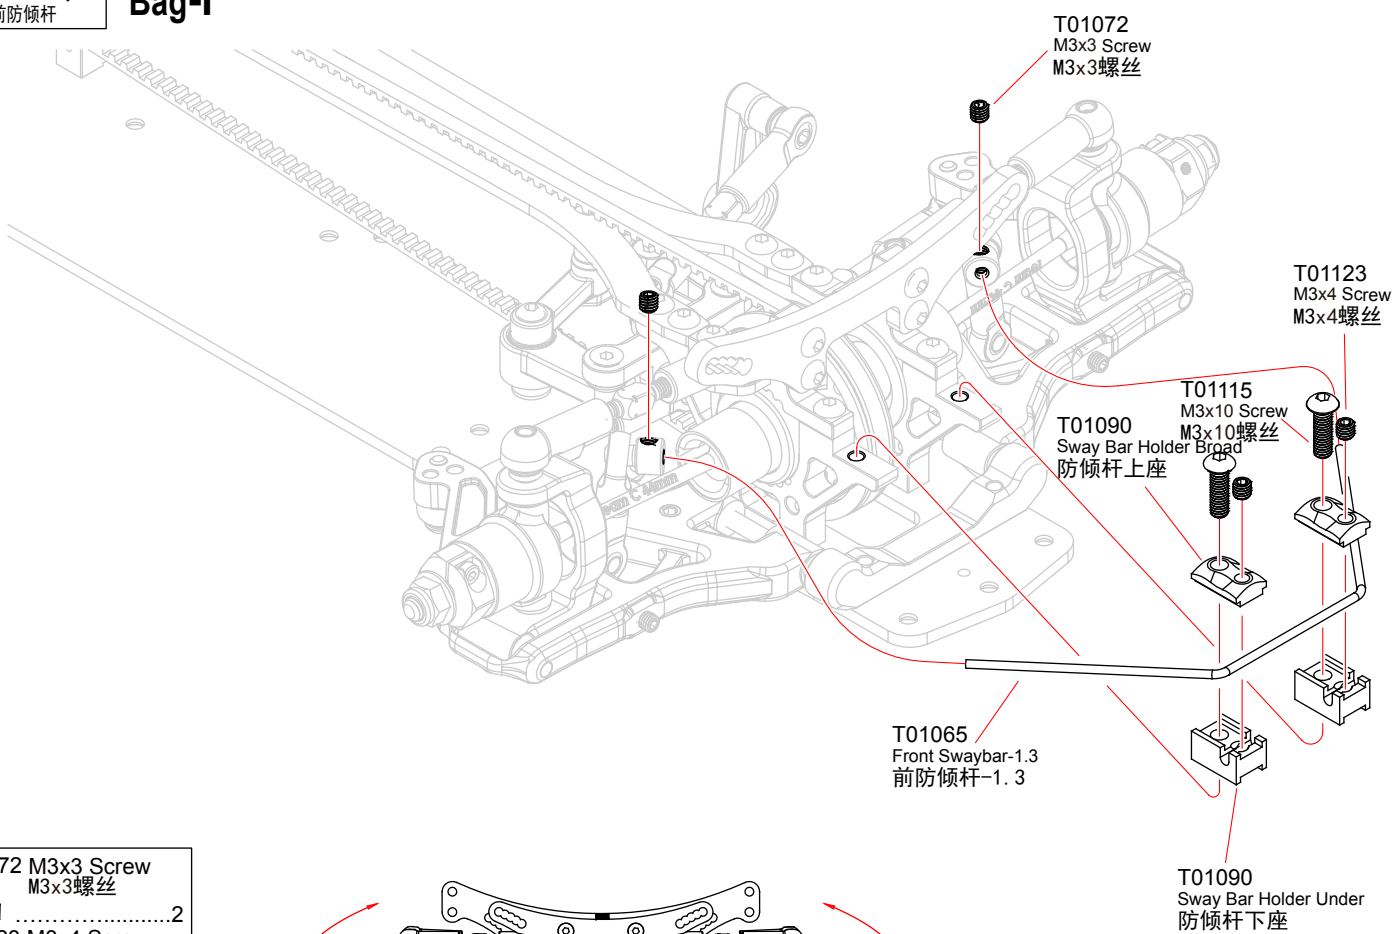



T01072 M3x3 Screw
M3x3螺丝 .....2
T01123 M3x4 Screw
M3x4螺丝 .....2
T01115 M3x10 Screw
M3x10螺丝 .....2

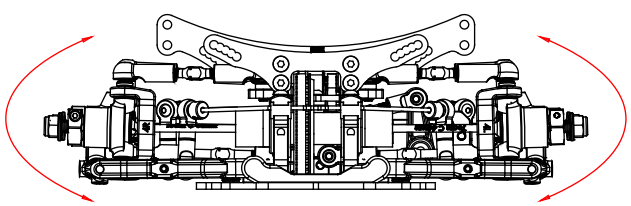


## 34 Rear Swaybar 后防倾杆 Bag-F

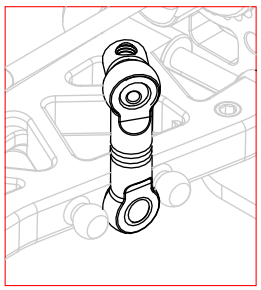



T01072 M3x3 Screw M3x3螺丝 ..... 2
T01123 M3x4 Screw M3x4螺丝 ..... 2
T01115 M3x10 Screw M3x10螺丝 ..... 2

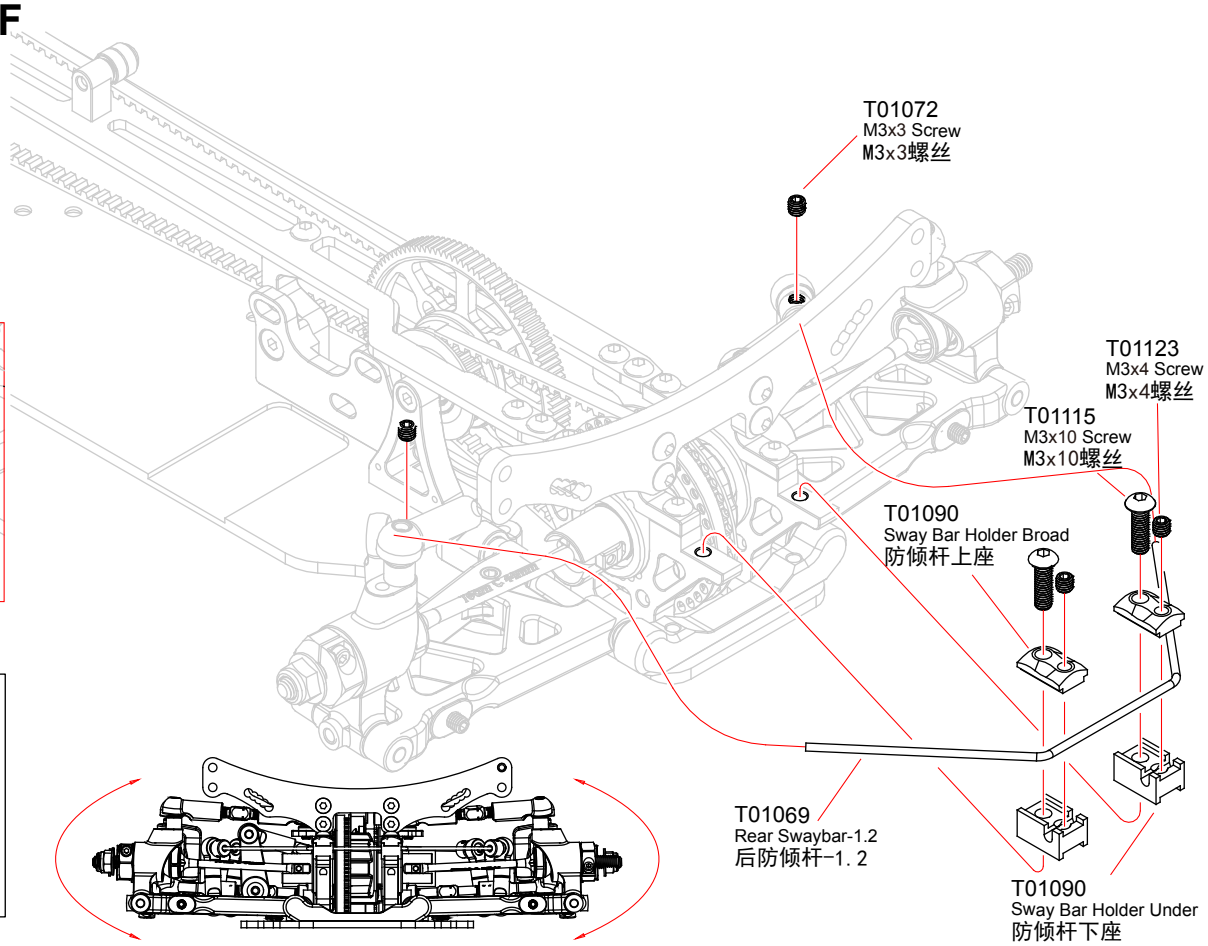


## 35 Shock Absorber 避震器 Bag-G x4

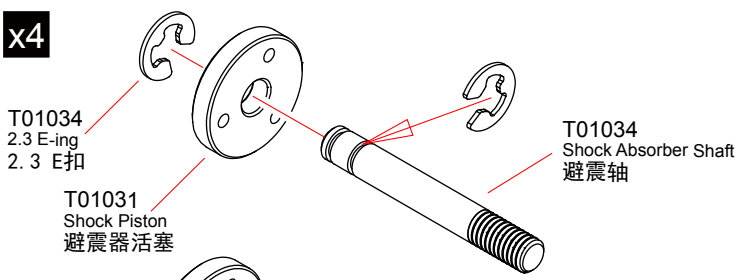

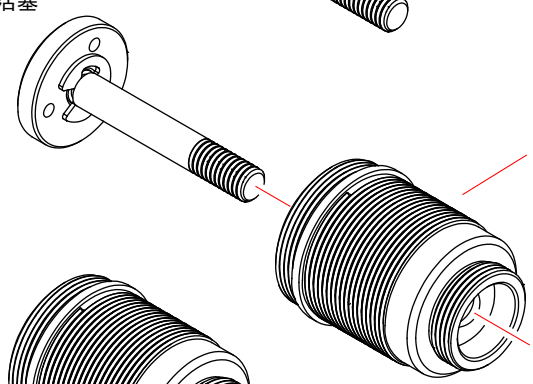


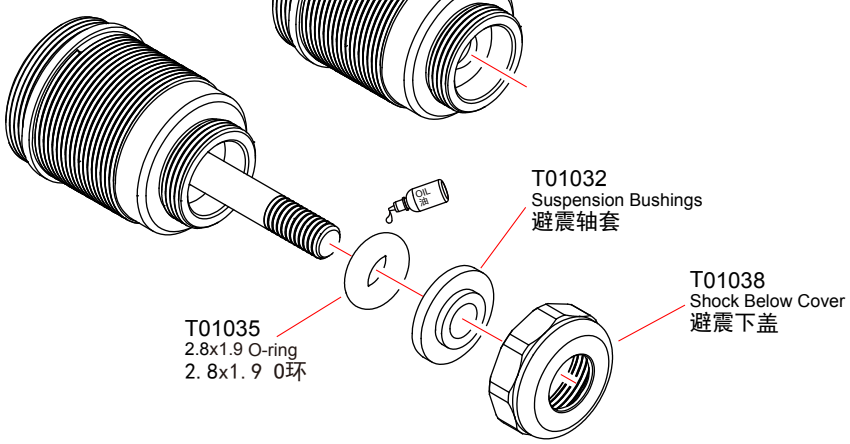
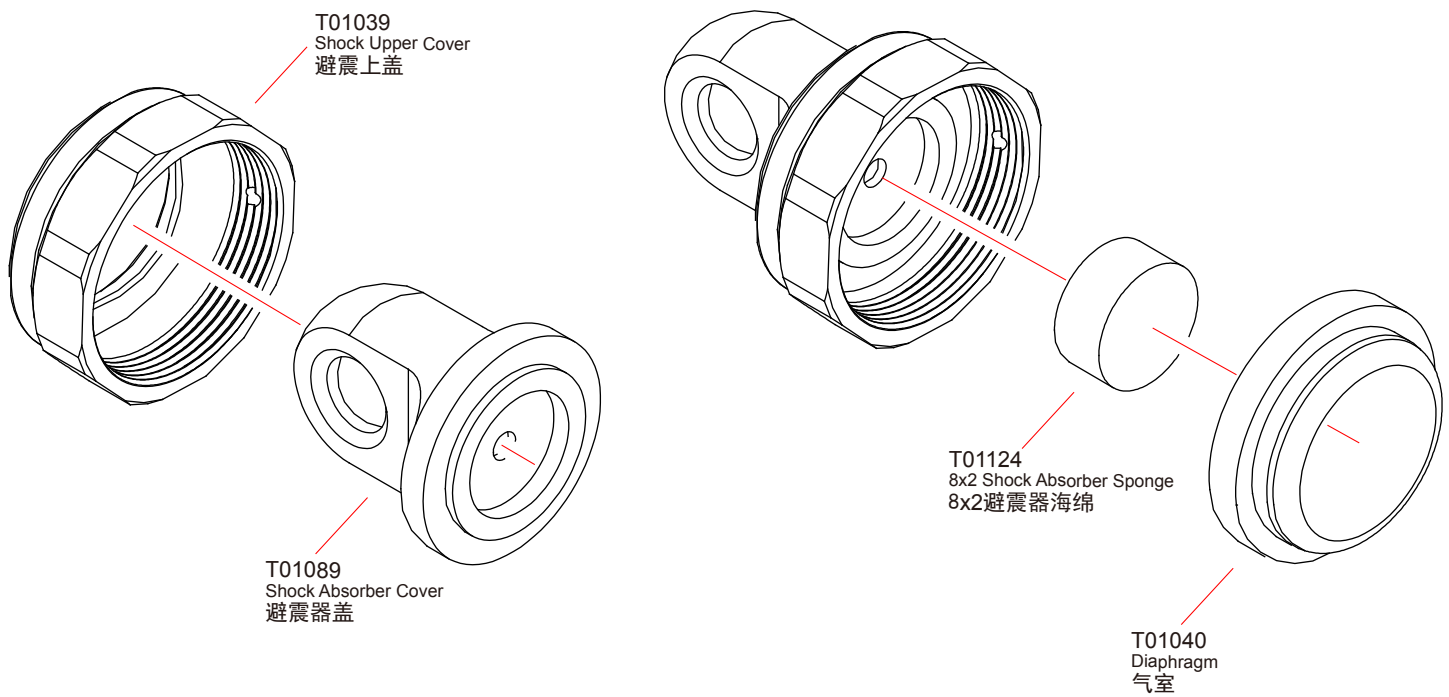

T01031 Shock Piston 避震器活塞 ..... 4
T01034 2.3 E-ing 2. 3 E扣 ..... 8
T01035 2.8x1.9 O-Ring 2. 8x1. 9 0环 ..... 4

x4 Assemble as many times as specified 需組裝數量

## 36 Shock Absorber 避震器 Bag-G x4

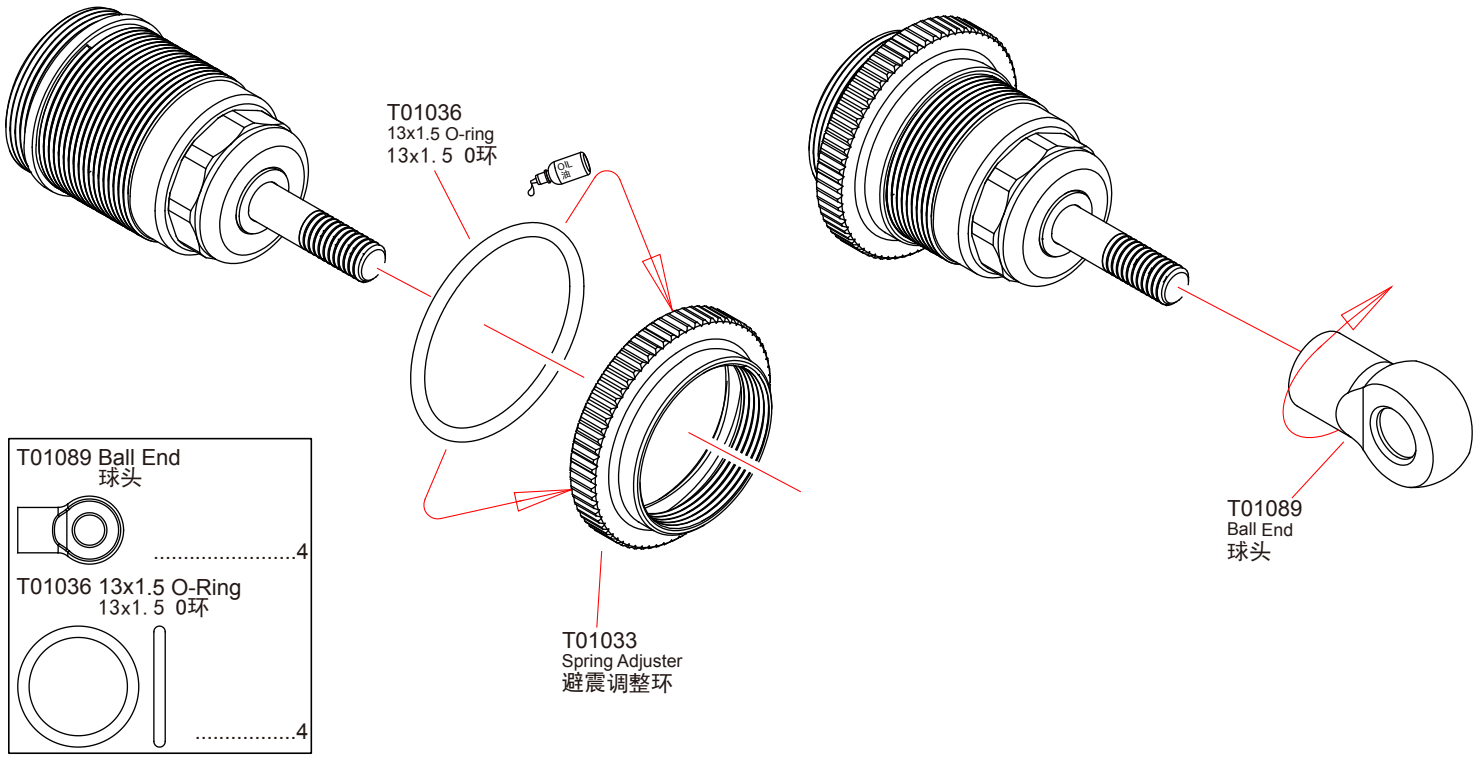




## 37 Shock Absorber 避震器 Bag-G x4




x4 Assemble as many times as specified
需組裝數量

## 38 Shock Absorber 避震器 Bag-G x4

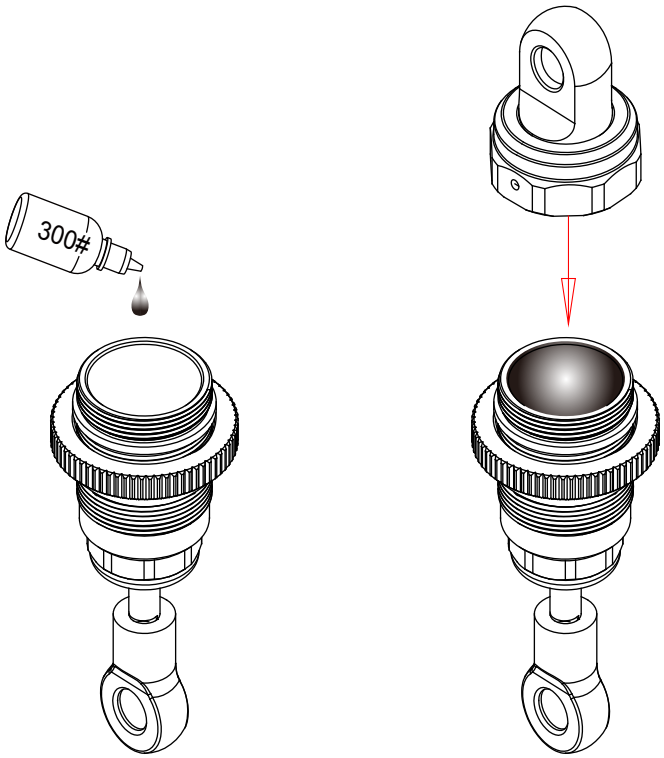

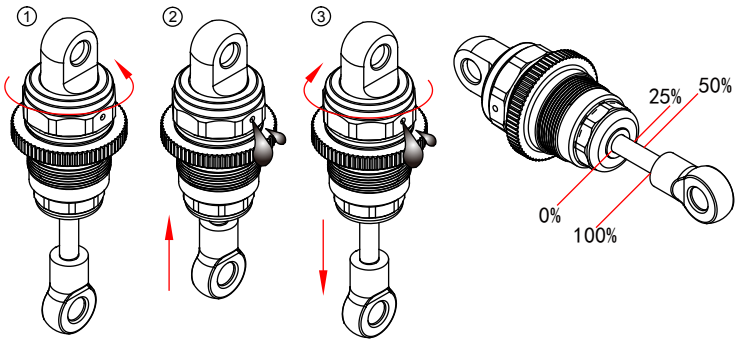

After the shock is assembled you have to set the shock rebound.
组装后的避震你必须设置避震复苏。


①Release the shock cap by 2-3 turns.
释放避震盖2 － 3转。

②Push the shock shaft fully up .For the first time the extra oil will release through the hole in the alu cap-nut.
推动避震轴完全了。第一次额外的石油将释放通过这个避震盖孔。

③Tighten the shock cup .When tightening the shock cup,extra oil will again release through the hole in the alu cap-nut.When tightening,the shock shaft will push out from the shock body.
紧缩避震盖。当紧缩避震盖，额外的石油将再次释放通过这个避震盖孔。
当紧缩，避震轴将排出身体的冲击。

## 39 Shock Absorber 避震器 Bag-G x4

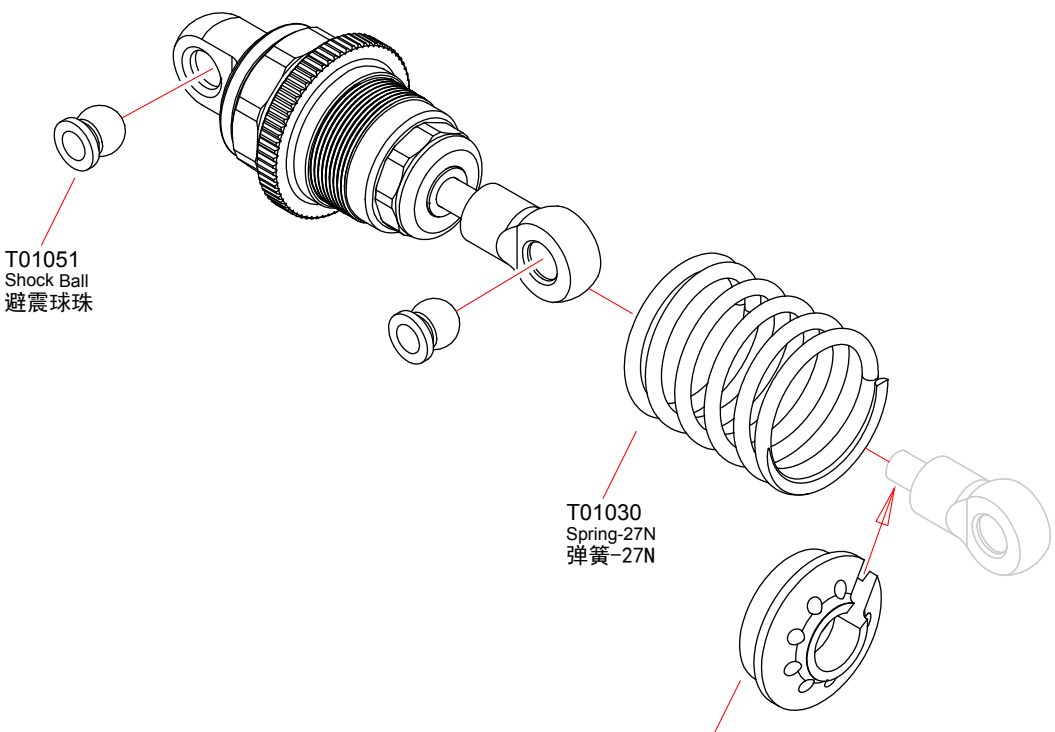


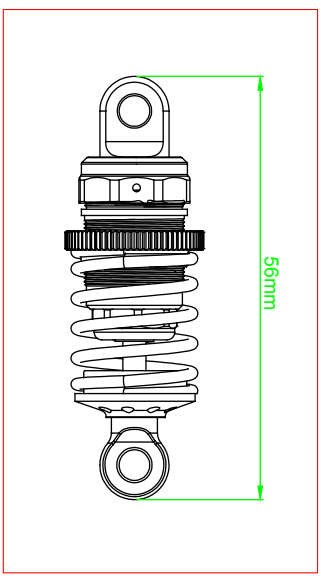
T01051 Shock Ball
避震球珠
.....8

x4 Assemble as many times as specified
需組裝數量

## 40 Front Bumper Set 前防撞组 Bag-H

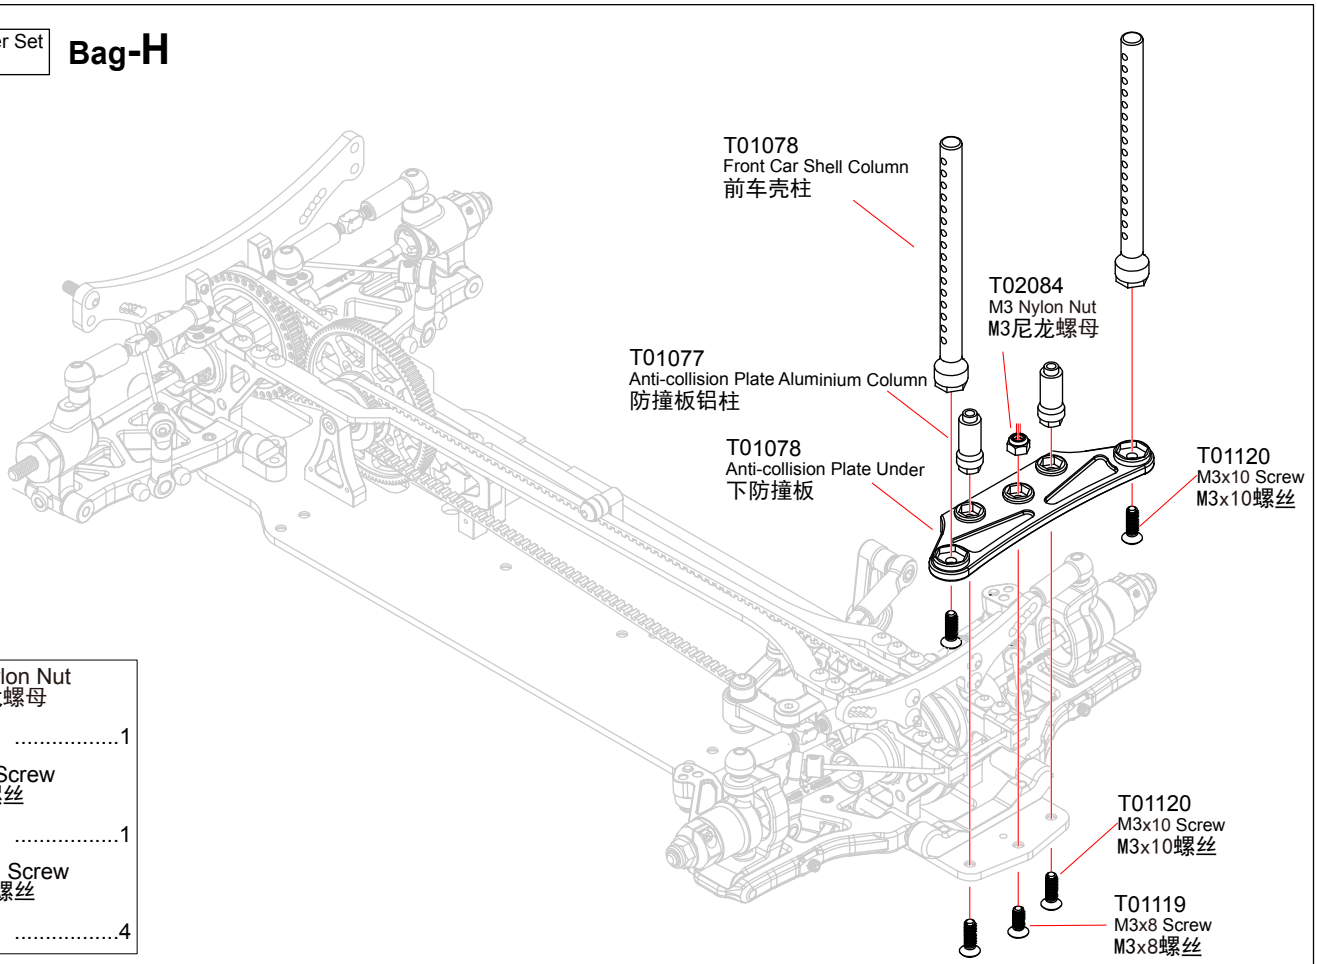



T02084 M3 Nylon Nut
M3尼龙螺母 .....1

T01119 M3x8 Screw
M3x8螺丝 .....1

T01120 M3x10 Screw
M3x10螺丝 .....4


## 41 Front Bumper Set 前防撞组 Bag-H

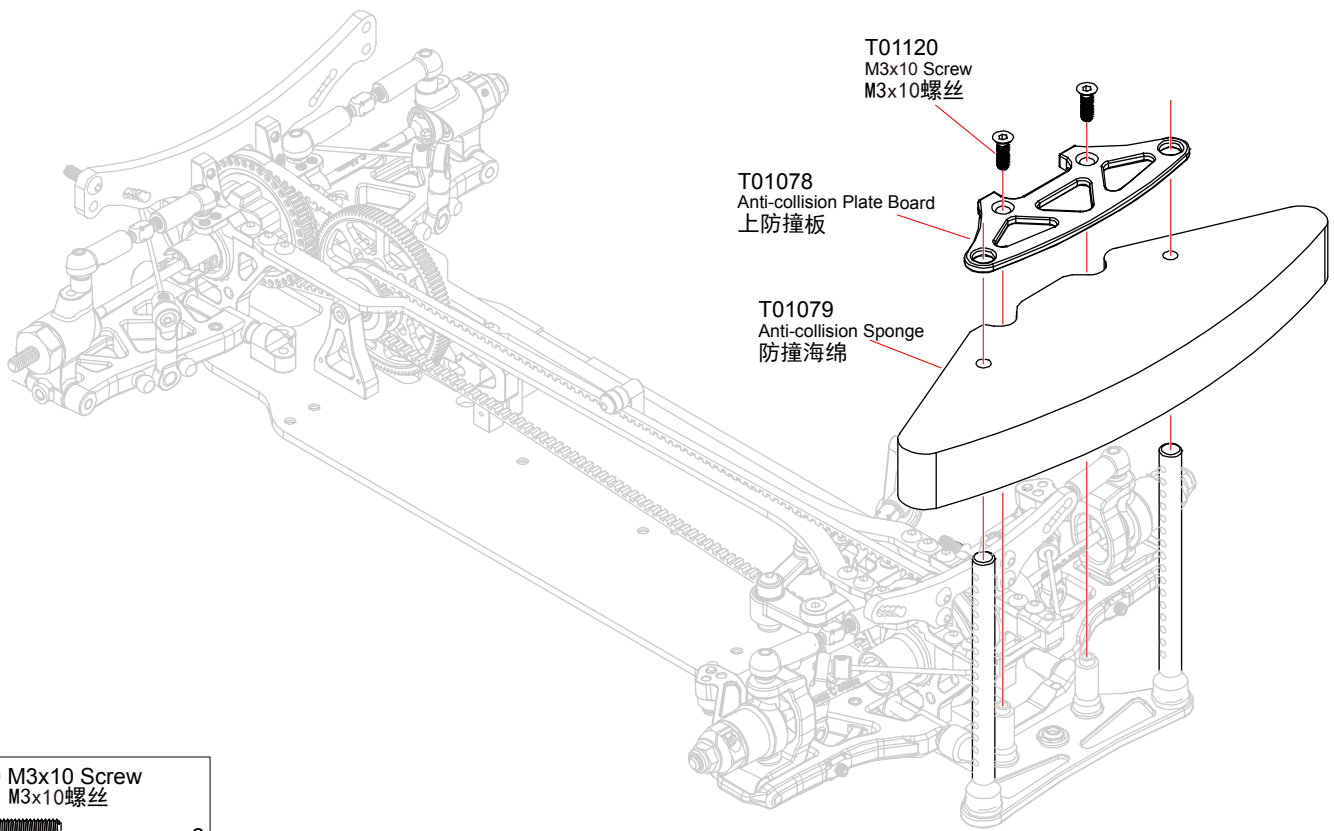



T01120 M3x10 Screw
M3x10螺丝 .....2

## 42 Front Body Mount 前车壳柱

## Bag-H

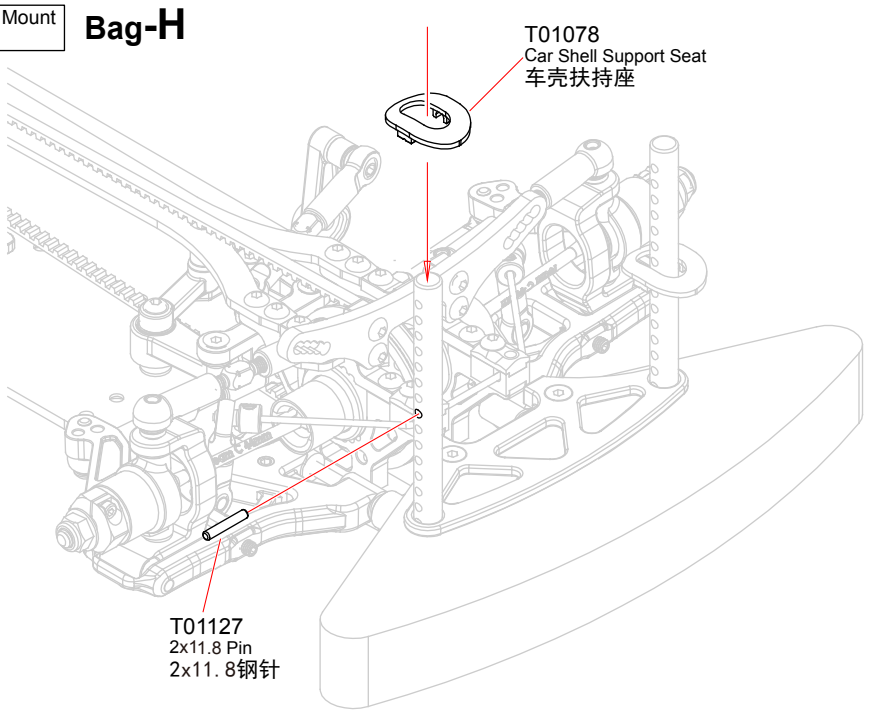


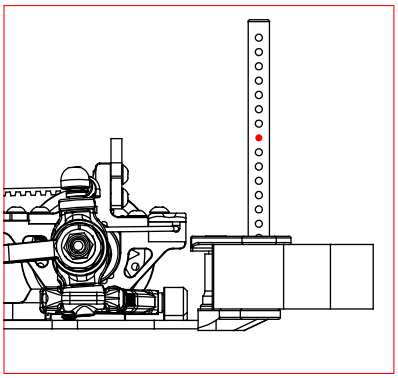



T01127 2x11.8 Pin
2x11. 8钢针
.....2

## 43 Front Shock Absorber 前避震器

## Bag-H

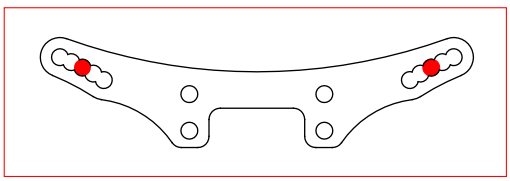


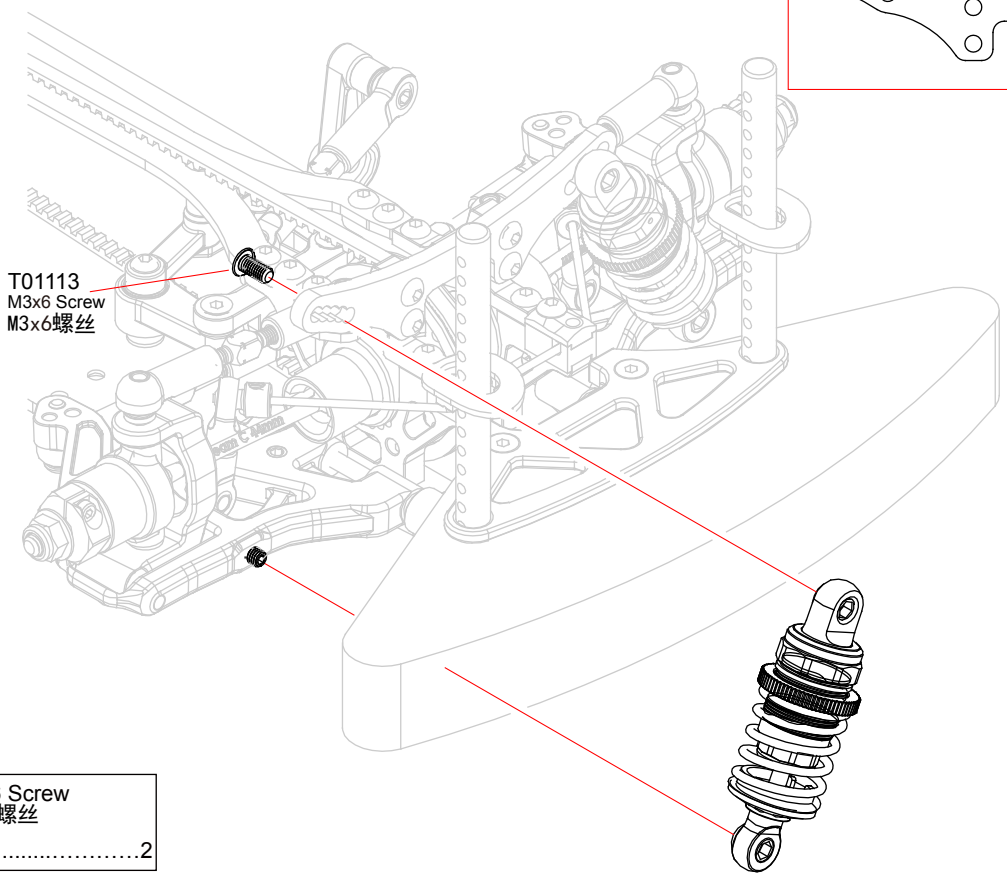



T01113 M3x6 Screw
M3x6螺丝
.....2

L/R Assemble both Left and Right
組裝左和右

## 44 Rear Body Mount 后车壳柱 Bag-H

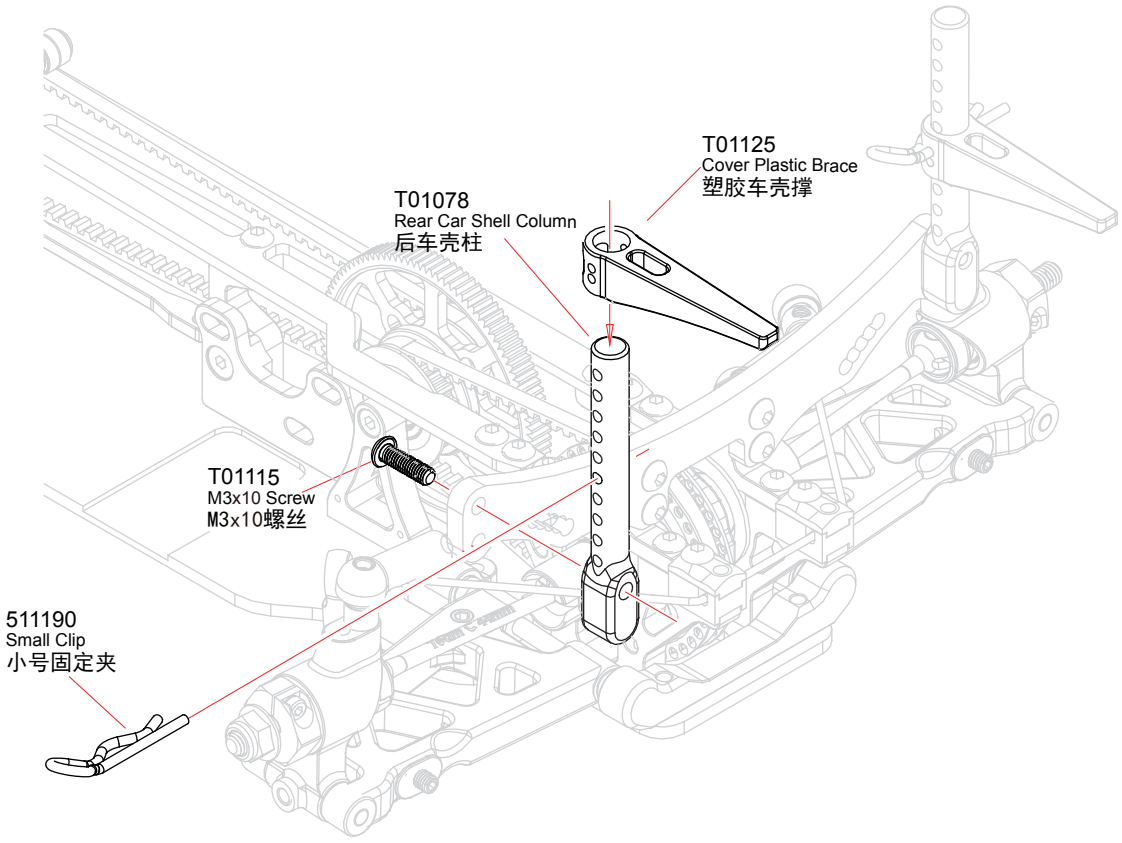


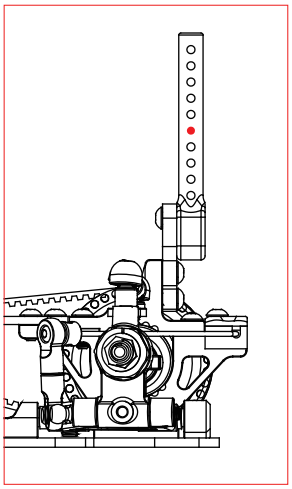



T01115 M3x10 Screw
M3x10螺丝 .....2

511190 Small Clip
小号固定夹 .....2

## 45 Rear Shock Absorber 后避震器 Bag-H

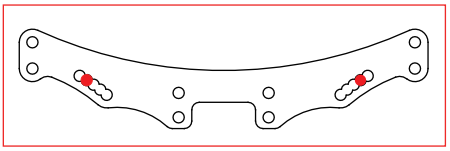


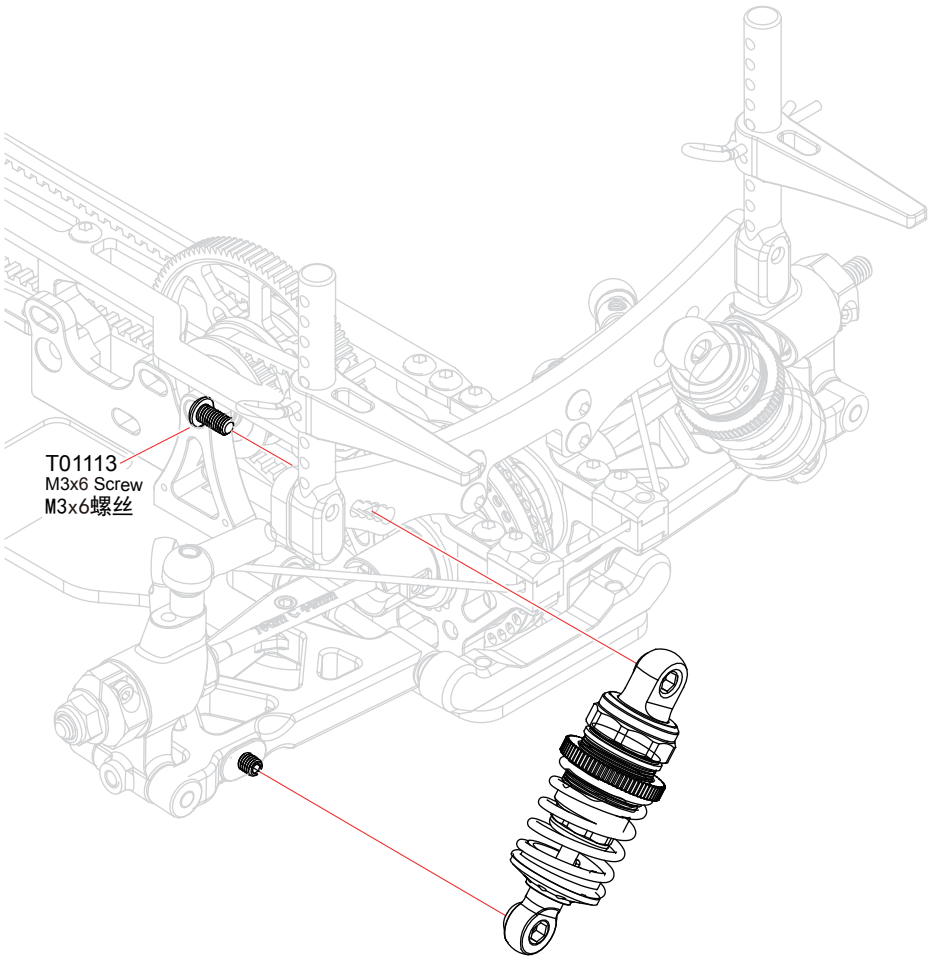


T01113 M3x6 Screw
M3x6螺丝 .....2

L/R Assemble Both Left And Right
组装左和右


## 46 Steering Servo 转向伺服系统 Bag-I

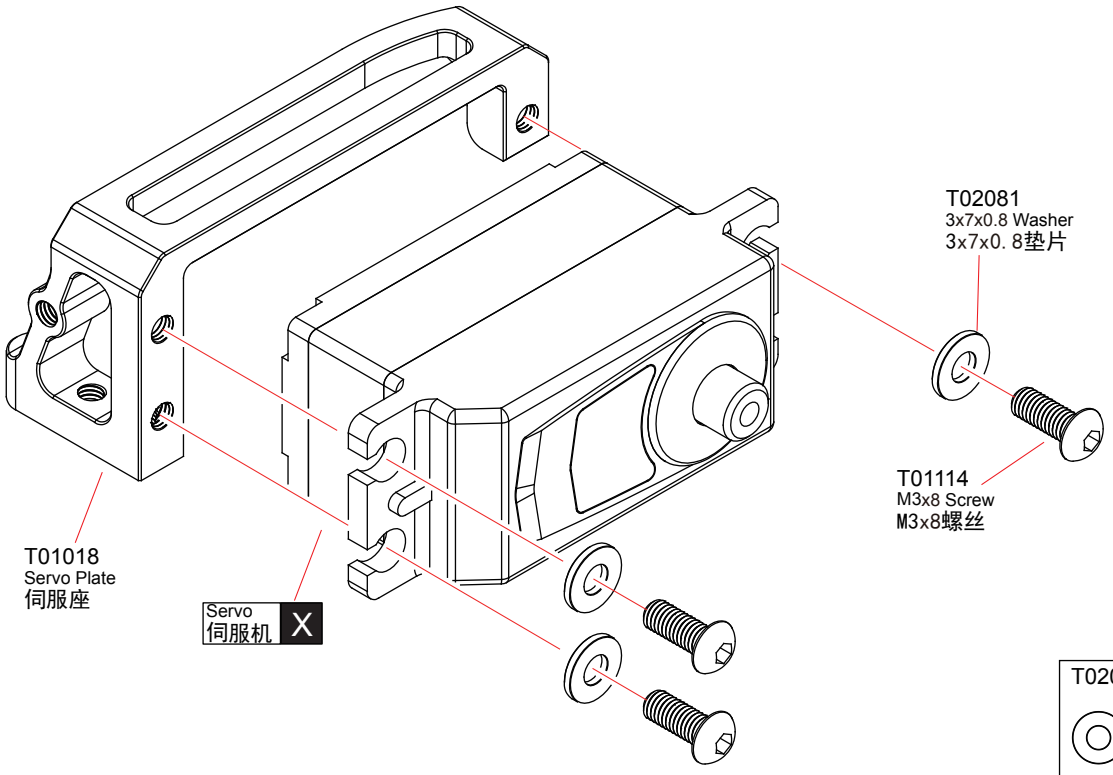


T02081 3x7x0.8 Washer 3x7x0. 8垫片 .....3

T01114 M3x8 Screw M3x8螺丝 .....3

## 47 Steering Servo 转向伺服系统 Bag-I

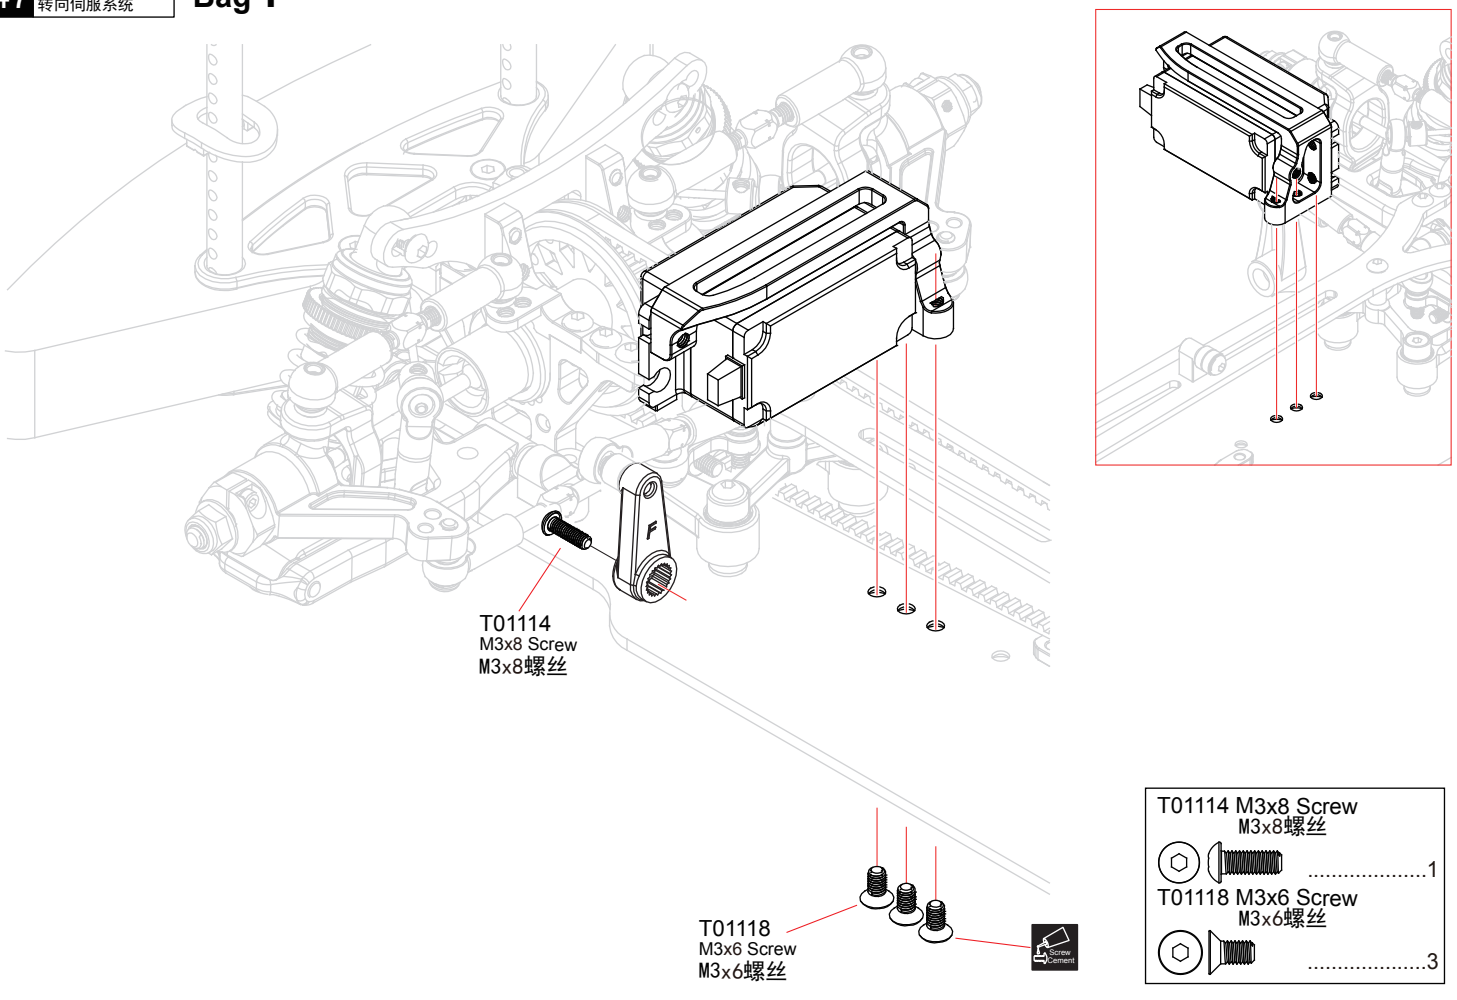




T01114 M3x8 Screw M3x8螺丝 .....1

T01118 M3x6 Screw M3x6螺丝 .....3

X Must be purchased separately 需另購物品


## 48 Motor 马达 Bag-I

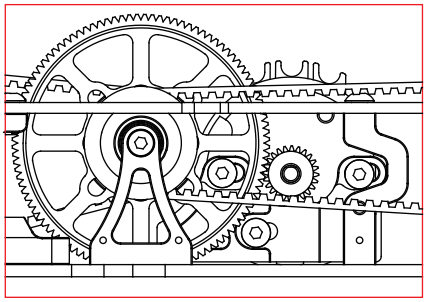

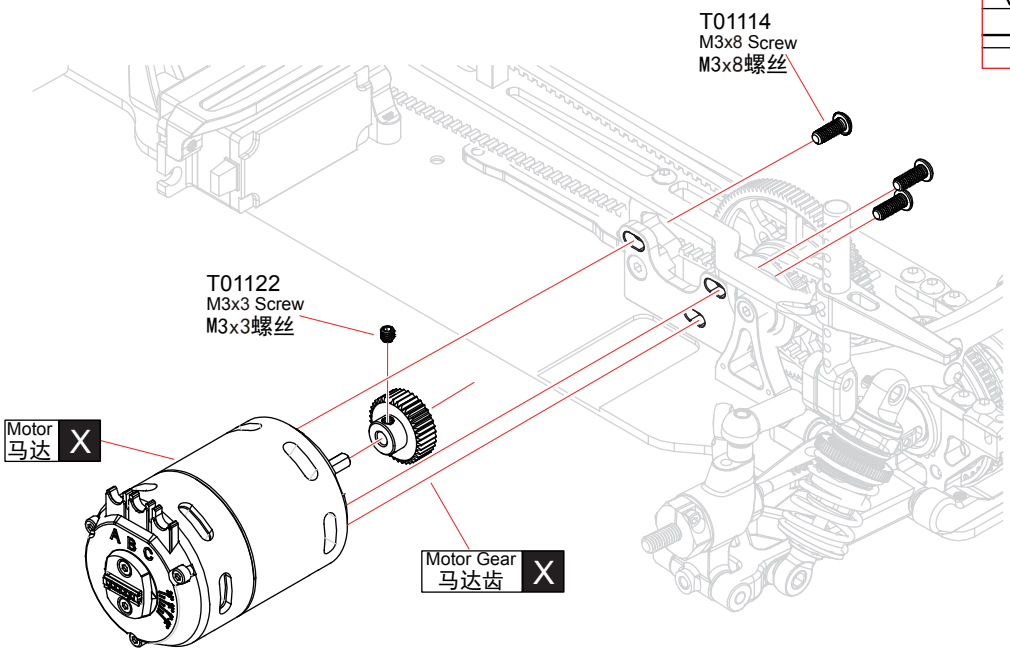


T01122 M3x3 Screw M3x3螺丝 .....1
T01114 M3x8 Screw M3x8螺丝 .....3


## 49 ESC/Receiver 电子变速器/接收机 Bag-I

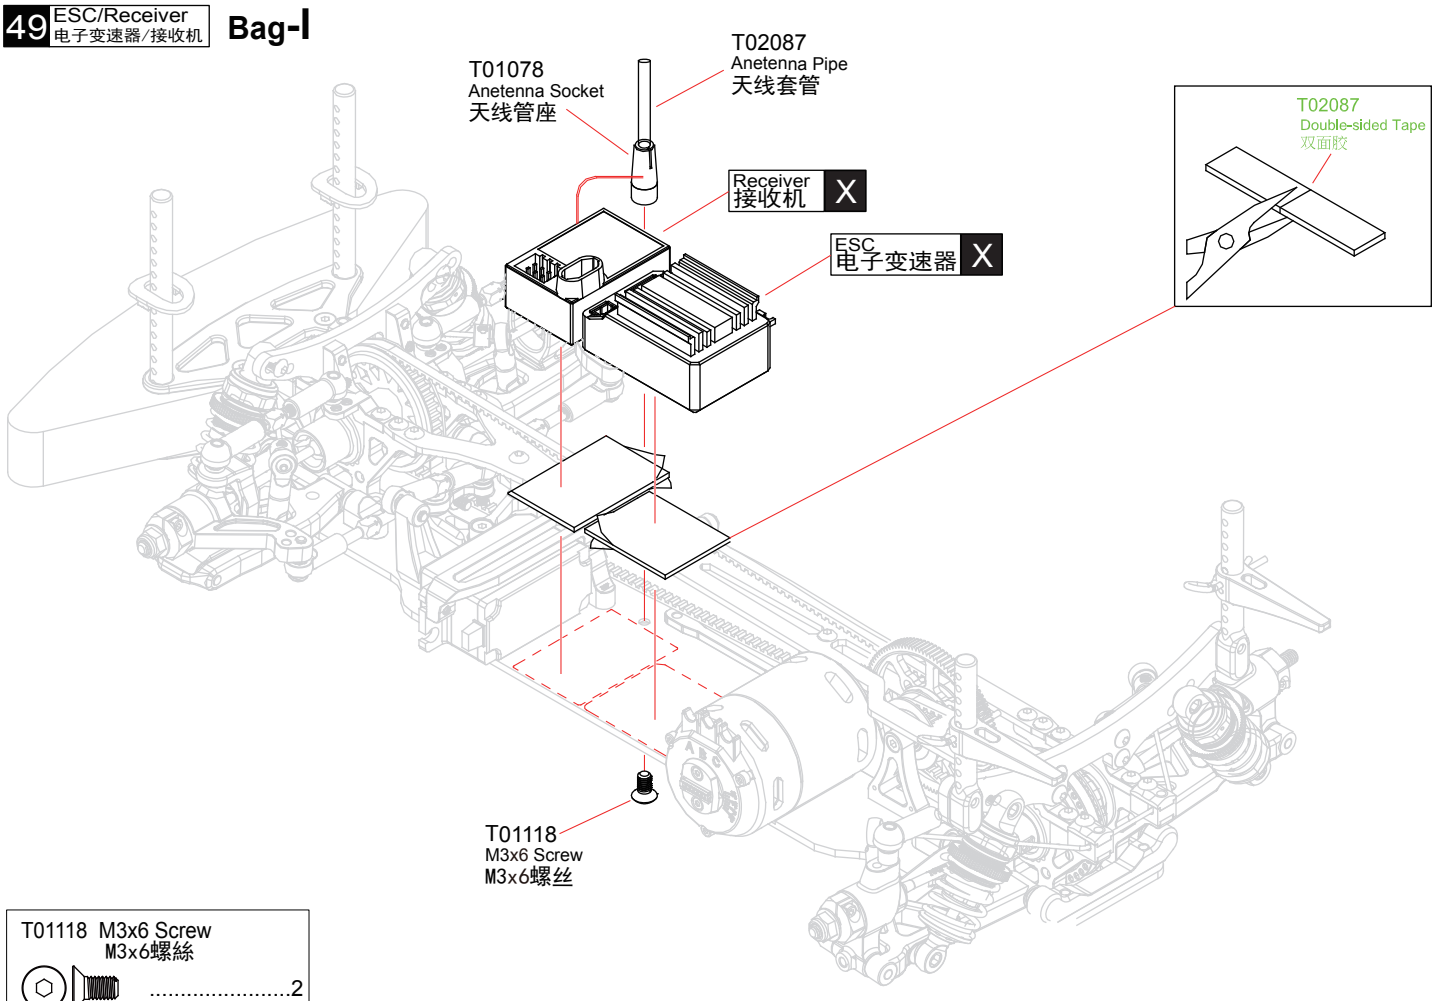


T01118 M3x6 Screw M3x6螺絲 .....2

X Must be purchased separately
需另購物品

## 50 Frame 电池架 Bag-I

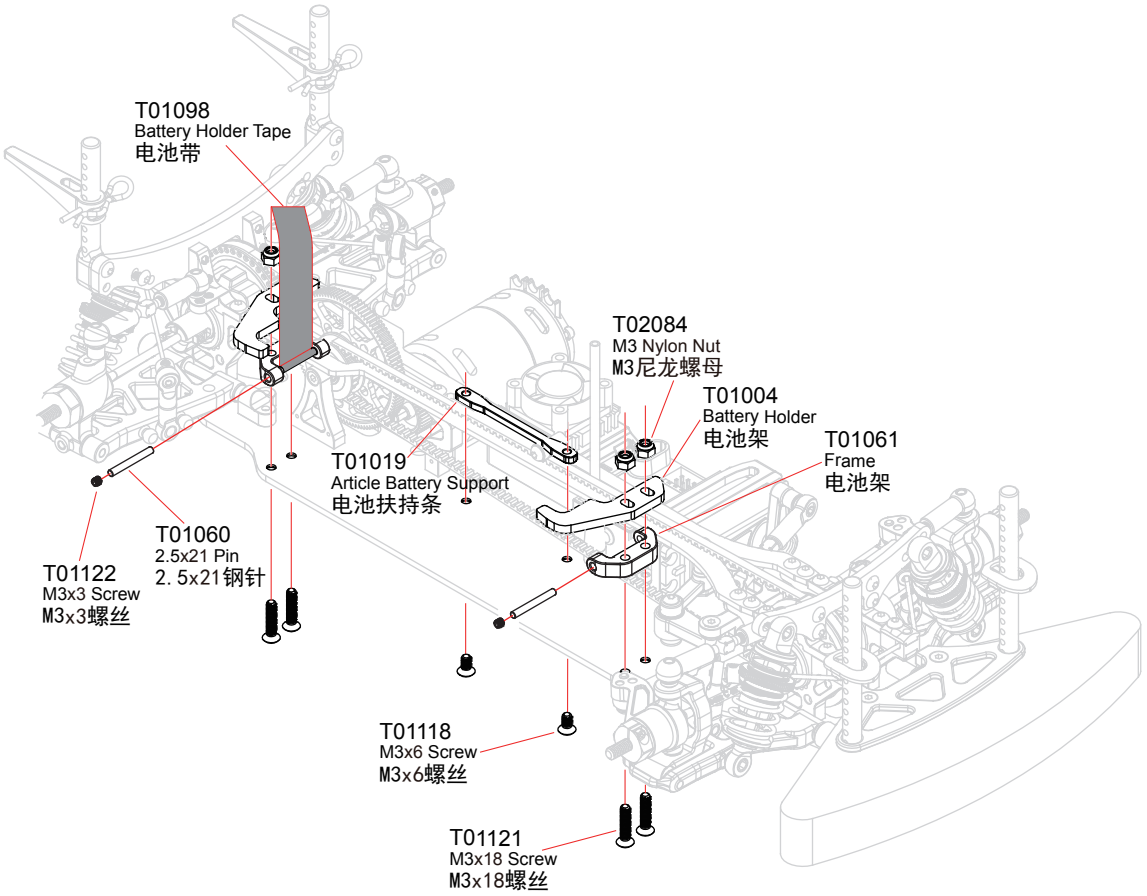


T01122 M3x3 Screw
M3x3螺丝 .....2


T01060 2.5x21 Pin
2. 5x21钢针 .....2

T02084 M3 Nylon Nut
M3尼龙螺母 .....4

T01118 M3x6 Screw
M3x6螺丝 .....2

T01121 M3x18 Screw
M3x18螺丝 .....4

## 51 Battery/Tyre 电池/轮胎 Bag-I

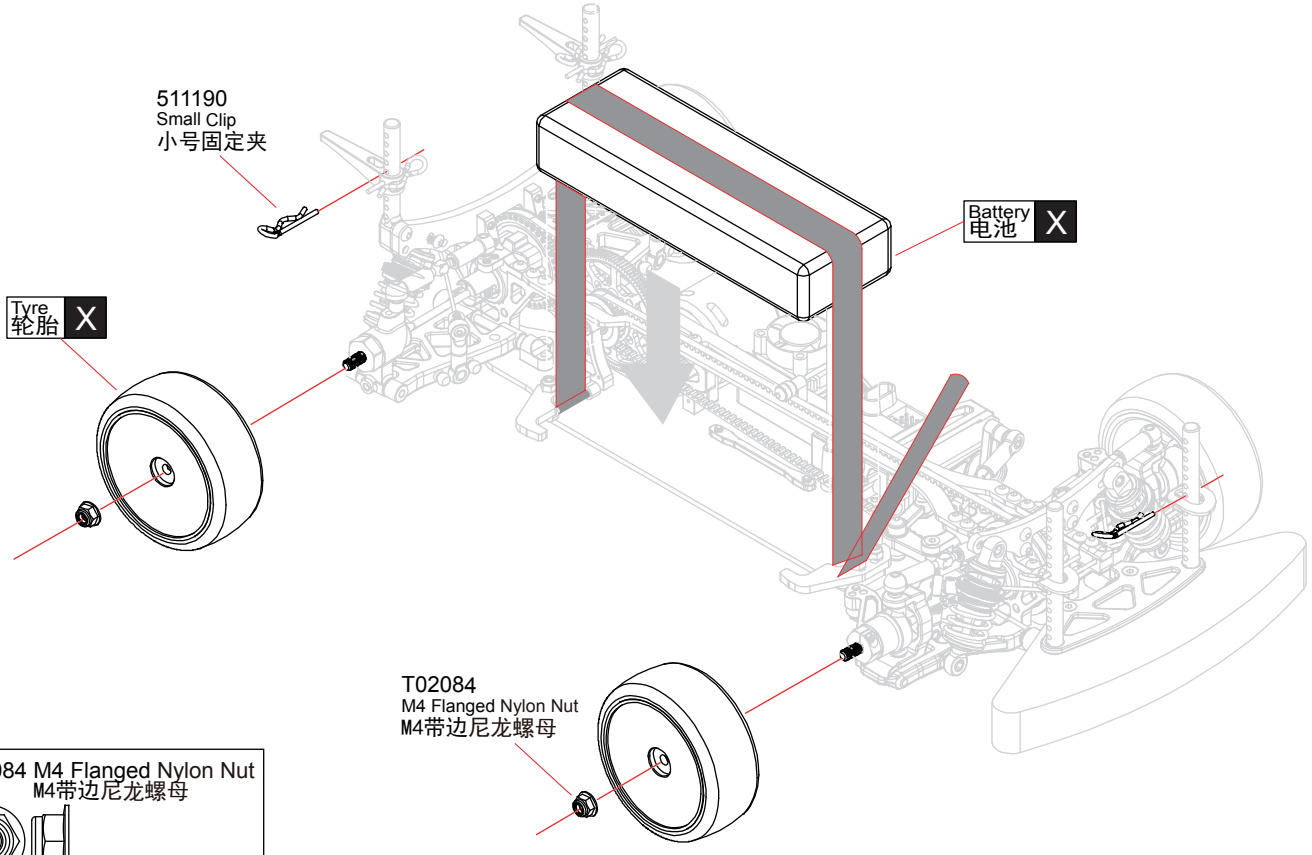



T02084 M4 Flanged Nylon Nut
M4带边尼龙螺母 .....4

511190 Small Clip
小号固定夹 .....4

L/R Assemble Both Left And Right
组装左和右


X Must be purchased separately
需另購物品

# Exploded View
# 爆炸圖

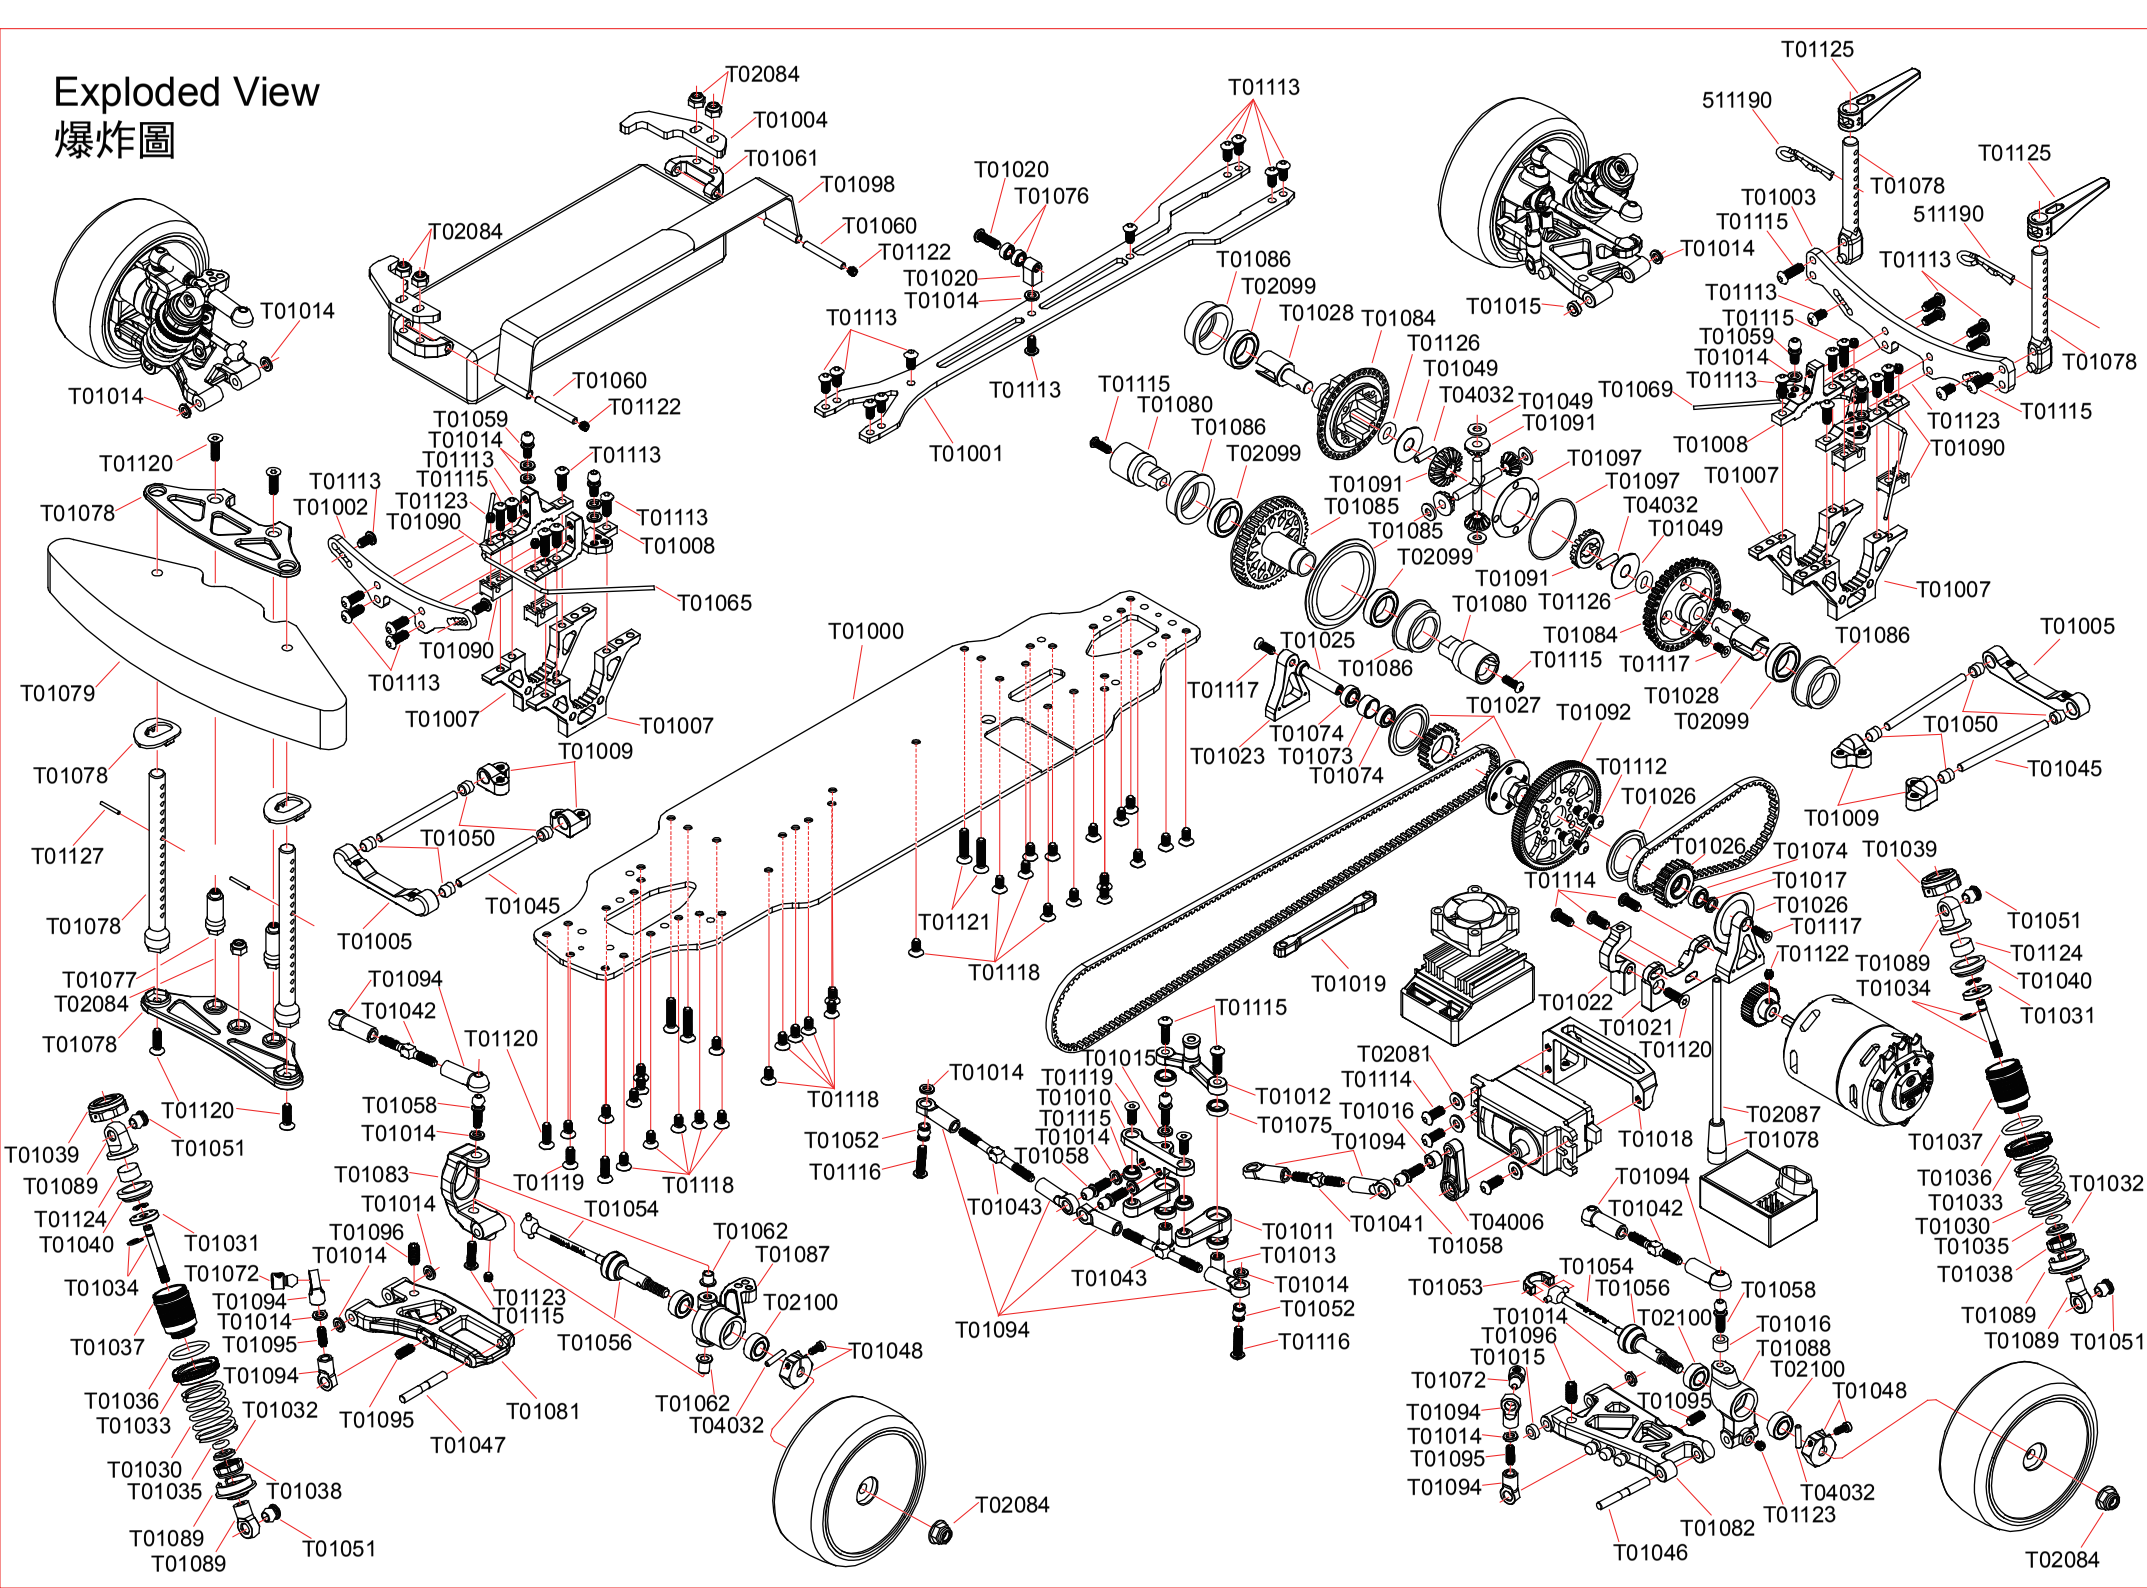


# Parts list for TC10 1/10 Touring Car - 1　TC10配件包-1

## T01000




Main Chassis
主底盘 1pcs

## T01001




Top Deck
二楼板 1pcs

## T01002




Front Shock Tower
前避震器架 1pcs

## T01003




Rear Shock Tower
后避震器架 1pcs

## T01004

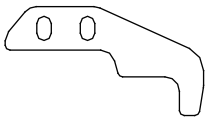


Battery Holder
电池架 2pcs

## T01005




Arm Mount-F0
摆臂固定座-F0 1pcs

## T01006




Arm Mount-R3.0
摆臂固定座-R3.0 1pcs

## T01007

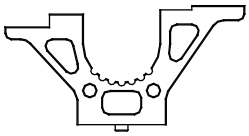


Side Panel
侧板 2pcs

## T01008

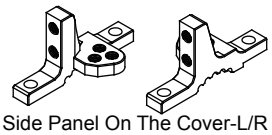


Side Panel On The Cover-L/R
侧板上盖-L/R 2pcs

## T01009




Projection Seat-L
投影座 1pcs




Projection Seat-R
投影座 1pcs

## T01010

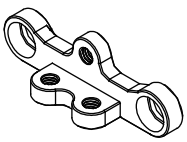


Steering Board
转向板 1pcs

## T01011




Servo Saver
缓冲臂 2pcs

## T01012

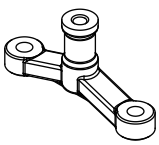

Reinforcing Bar Before
前补强柱 1pcs

## T01013



Buffer Bolumn
缓冲柱 2pcs

## T01014



3x5.5x1 Washer
垫片 6pcs

## T01015



3x5.5x2 Washer
垫片 6pcs

## T01016




3x5.5x4 Washer
垫片 6pcs

## T01017




4x6x1.5 Washer
垫片 2pcs

## T01018

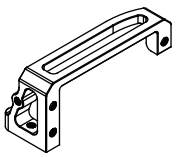

Servo Plate
伺服座 1pcs

## T01019

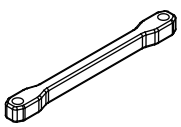


Article Battery Support
电池扶持条 1pcs

## T01020



3x6x2.5 Ball Bearing
轴承 2pcs




M3x10 Screw
M3x10螺丝 1pcs




Pressure Wheel Seat Belt
皮带压轮座 1pcs

## T01021

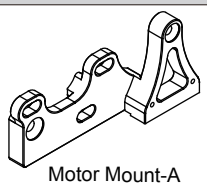


Motor Mount-A
马达座-A 1pcs

## T01022




Motor Mount-B
马达座-B 1pcs

## T01023




Center Diff Mount
中差座 1pcs

## T01025

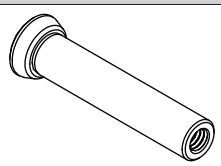


Axis
中轴 1pcs

## T01026

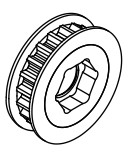


Pulley-20T
皮带轮-20T 1pcs

## T01027

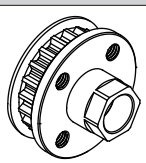

Belt Wheel-20T
皮带轮轴-20T 1pcs

## T01028




Aluminum Diff Connecting Cup
铝差速接杯 2pcs

## T01029




Shock
避震器 2pcs

## T01030

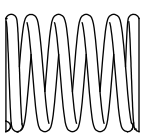


Spring-27N
弹簧-27N 2pcs

## T01031

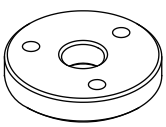

Shock Piston
避震器活塞 2pcs

## T01032



Suspension Bushings
避震轴套 2pcs

## T01033




Spring Adjuster
避震调整环 2pcs

## T01034



2.5 E-ring
2.5 E扣 4pcs



Shock Absorber Shaft
避震轴 2pcs


## T01035



2.8x1.9 O-ring
2.8x1.9 O环 8pcs

# Parts list for TC10 1/10 Touring Car - 2　TC10配件包-2

## T01036




13x1.5 O-ring
13x1. 5 0环 4pcs

## T01037




Shock Absorber Body
避震器筒身 2pcs

## T01038

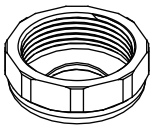


Shock Below Cover
避震下盖 2pcs

## T01039

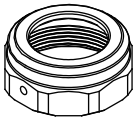


Shock Upper Cover
避震上盖 2pcs

## T01040

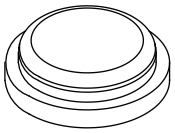


Diaphragm
氧室 4pcs

## T01041




3x25 Turnbuckle
3x25拉杆 2pcs

## T01042




3x28 Turnbuckle
3x28拉杆 2pcs

## T01043




3x40 Turnbuckle
3x40拉杆 2pcs

## T01044




Rear Arm Pin-44mm
后摆臂轴-44mm 2pcs

## T01045




Front Arm Pin-41mm
前摆臂轴-41mm 2pcs

## T01046




25mm Arm PIN
25mm摆臂轴 2pcs

## T01047



23mm Arm PIN
23mm摆臂轴 2pcs

## T01048



2x5 Screw
螺丝 4pcs



Hex Mount
六角座 4pcs

## T01049




5x15x0.3 Washer
垫片 2pcs




3.5x10x0.3 Washer
垫片 4pcs

## T01050



Arm Mount-Ball
摆臂球珠 4pcs

## T01051

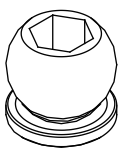


Shock Ball
避震球珠 4pcs

## T01052




4.9x5.5 Ball Stud
球头 4pcs

## T04022



Spring Buckle
弹簧扣 6pcs

## T01053

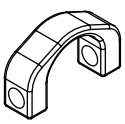

Horseshoe
马蹄 4pcs

## T01054





43mm Drive Shaft
传动轴 2pcs

## T01055




44mm Drive Shaft
传动轴 2pcs

## T01056



CVD Connecting Cup
CVD接杯 2pcs

## T01057




2x9.8 pin
钢针 4pcs




CVD Shaft
CVD轴 4pcs

## T01058




Ball Stud-Long
球头-长 6pcs

## T01059




Ball Stud-Short
球头-短 4pcs

## T01060




2.5x21 Pin
钢针 2pcs

## T01061




Frame
电池架 2pcs

## T01062




3x4x4.2 Steering Arm Sleeves
3x4x4. 2 转向臂轴套 2pcs

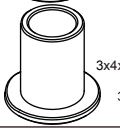


3x4x5.8 Steering Arm Sleeves
3x4x5. 8 转向臂轴套 2pcs

## T01064

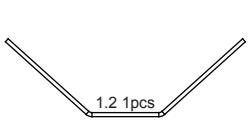



Front Swaybar
前防倾杆 1pcs

## T01065

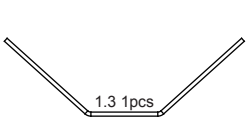



Front Swaybar
前防倾杆 1pcs

## T01066





Front Swaybar
前防倾杆 1pcs

## T01067





Front Swaybar
前防倾杆 1pcs

## T01068





Rear Swaybar
后防倾杆 1pcs

## T01069




Rear Swaybar
后防倾杆 1pcs


## T01070




Rear Swaybar
后防倾杆 1pcs

# Parts list for TC10 1/10 Touring Car - 3　TC10配件包-3

## T01071




Rear Swaybar
后防倾杆 1pcs

## T01072




Swaybar Ball Stud
防倾杆球头 2pcs

## T01073



3.5mm Casing
3.5mm 套管 1pcs

## T02084







## T04032



2x9.8 Pin
钢针 6pcs

## T01074



4x8x3 Ball Bearing
轴承 6pcs

## T02080




3x6x2.5 Ball Bearing
轴承 6pcs

## T01075



5x8x2.5 Ball Bearing
轴承 6pcs

## T02100



5x10x4 Ball Bearing
轴承 6pcs

## T02099




10x15x4 Ball Bearing
轴承 6pcs

## T01076



3x6x2.5 Ball Bearing
轴承 6pcs


## T01077




Anti-collision Plate Aluminium Column
防撞板铝柱 2pcs

## T01078




Anti-collision Plate Board
上防撞板 1pcs



Anti-collision Plate Under
下防撞板 1pcs








## T01079




Anti-collision Sponge
防撞海绵 1pcs

## T01080




Diff Connecting Cup
差速接杯 2pcs

## T01081

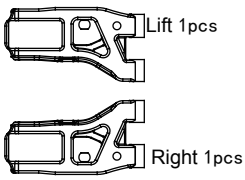



Front Lower Arm
前下摆臂

## T01082

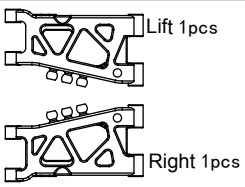


Rear Lower Arm
后下摆臂

## T01083

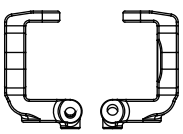

C-type Holder-L C-type Holder-R
C型座-L 1pcs　C型座-R 1pcs

## T01084




Differential Belt Tooth-38T
差速皮带齿-38T 1pcs




Differential Shell
差速壳 1pcs

## T01085

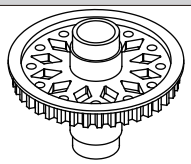


Plastic Straight Shaft
塑胶直轴 1pcs




Straight Shaft Gear Ring
直轴齿轮环 1pcs

## T01086




Belt Adjustment Ring
皮带调整环 4pcs

## T01087





Steering Arm
转向臂 2pcs

## T01088

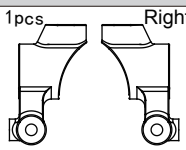


Rear Hub
后轮座 2pcs

## T01089



Shock Absorber Cover
避震器盖 2pcs




Blow Sping Mount End
弹簧下座 2pcs



Ball End
球头 2pcs

## T01090






## T01091



Diff Gear-10T
差速内齿-10T 4pcs

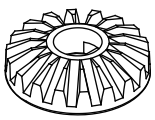


Diff Gear-18T
差速伞齿-18T 2pcs

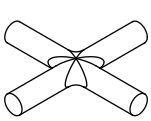


With Poor Spider
差带十字轴 1pcs

## T01092

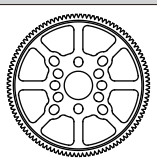

Mid Gear-118T
中齿轮-118T 1pcs

## T02087



Double-sided Tape
双面胶 1pcs






Antenna pipe set
天线套管 1pcs

## T01093




2.3 E-ring
2.3 E扣 10pcs

# Parts list for TC10 1/10 Touring Car - 4　TC10配件包-4


## T01094



4.9mm Ball End-Short
4. 9㎜球头座-短 10pcs



4.9mm Ball End
4. 9㎜球头座 8pcs



4.9mm Ball End-Long
4. 9㎜球头座-长 4pcs

## T01095




M3x8 Screw
螺丝 10pcs

## T01096




M4x8 Screw
螺丝 10pcs

## T01097




24x0.7 O-ring
24x0. 7 0环 4pcs



Diff Leakproof Spacer
差速防漏垫片 1pcs

## T01098

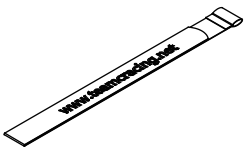



Battery Holder Tape
电池带 1pcs

## T01099



Belt
皮带 1pcs

## T01100



Small Belt
小皮带 1pcs

## 511190




Small Clip
小号固定夹 10pcs

## T01112




M3x4 Screw
螺丝 10pcs

## T01113




M3x6 Screw
螺丝 10pcs

## T01114




M3x8 Screw
螺丝 10pcs

## T01115



M3x10 Screw
螺丝 10pcs

## T01116



M3x12 Screw
螺丝 10pcs

## T01117




M2.5x8 Screw
螺丝 10pcs

## T01118



M3x6 Screw
螺丝 10pcs

## T01119



M3x8 Screw
螺丝 10pcs

## T01120



M3x10 Screw
螺丝 10pcs

## T01121



M3x18 Screw
螺丝 10pcs

## T01122



M3x3 Screw
螺丝 10pcs

## T01123




M3x4 Screw
螺丝 10pcs

## T01124



8x2 Shock Absorber Sponge
8x2避震器海绵 4pcs


## T01125



Cover Plastic Brace
塑胶车壳撑 2pcs

## T04006

1pcs　1pcs　1pcs

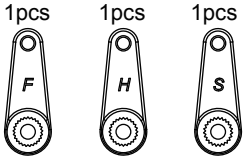


Steering Servo Horn
转向伺服臂 1pcs

## T02081



3x7x 0.8 Washer
垫片 4pcs

## T01126



5x1.9 O-ring
5x1. 9 0环 4pcs

## T01127



2x11.8 Pin
钢针 6pcs

# TC10


| | |
|---|---|
| RACE | |
| TRACK | |


| | |
|---|---|
| NAME | |
| CITY/COUNTRY | |
| CONTACT | |

| DATE | AIR TEMP | TRACK TEMP | HUMIDITY |
|---|---|---|---|
| | | | |

| QUALIFYING POSITION | BEST LAPTIME/sex |
|---|---|
| | |


| FINAL POSITION | RACE LENGTH/minutes |
|---|---|
| | |

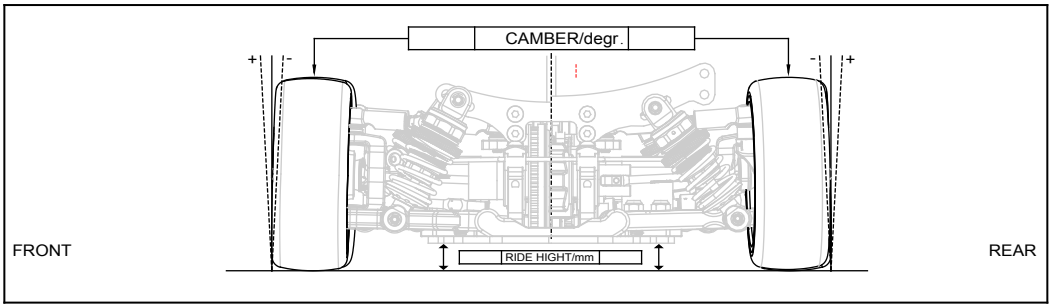

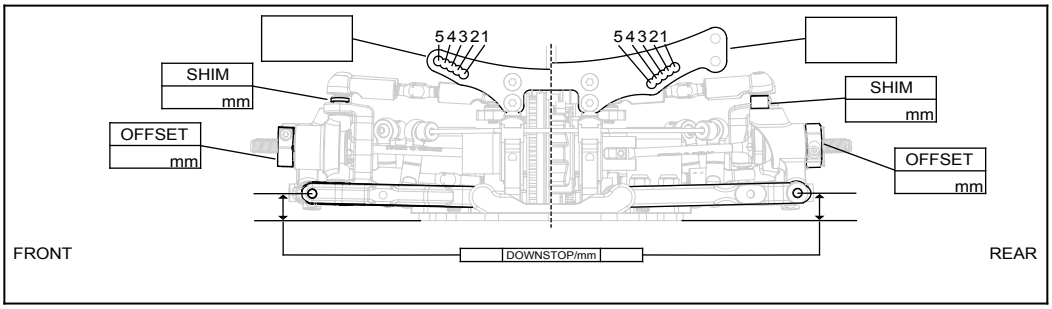
TOTAL WEIGHT

Total Weight With Car Body _____g

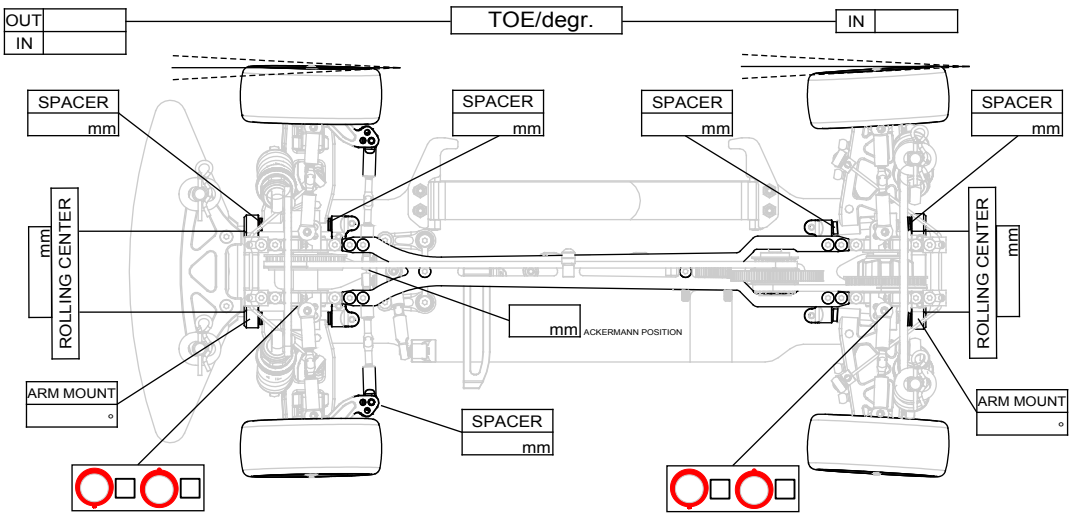


○ SCREW NOT USED
● SCREW USED

## SHOCKS

| FRONT | | REAR |
|---|---|---|
| | SPRING | |
| | OIL/W | |
| | LENGTH/mm | |
| | REBOUND/% | |
| ☐YES ☐NO | FOAM INSERTS | ☐YES ☐NO |
| | HOLES IN PISTON | |

## COMMENTS

| | | |
|---|---|---|
| TRACK CONDITION | ☐CONCRETE ☐CARPET ☐ASPHALT<br>☐TECHNICAL ☐MIXED ☐FAST | |
| TRACTION | ☐LOW | ☐MEDIUM ☐HIGH |

| | |
|---|---|
| ESC | BATTERIES |
| BODY | WING |


| ARMATURE | | TIMING | |
|---|---|---|---|
| | + SPRING - | | |
| MOTOR | + BRUSH FACE - | | |
| | + BRUSH COMP. - | | |

| PINION/T | SPUR GEAR/T |
|---|---|
| T | T |

### TRANSMISSION

| FRONT | REAR |
|---|---|
| ☐ | GEAR DIFFERENTIAL ☐ |
| W | DIFFERENTIAL W |

| | | | |
|---|---|---|---|
| ONE WAY DIFFERENTIAL | ☐ | MIDDLE ONE WAY PULLEY | |
| SOLID AXLE | ☐ | | |

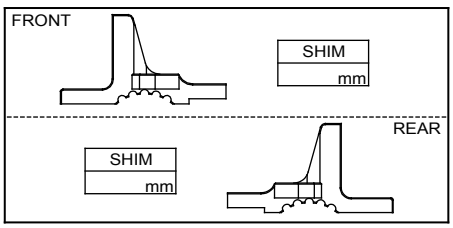



| | | |
|---|---|---|
| | TIRES | |
| | DIAMETER | |
| | INSERTS | |
| | ADDITIVE | |

### ANTI-ROLL BAR

| FRONT | REAR |
|---|---|
| ☐ 1.2 | ☐ 1.1 |
| ☐ 1.3 | ☐ 1.2 |
| ☐ 1.4 | ☐ 1.3 |
| ☐ 1.5 | ☐ 1.4 |

| TREATED AREA | |
|---|---|

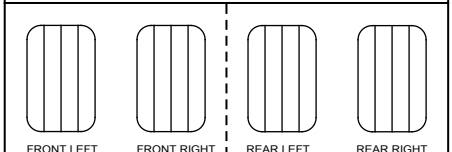




www.teamcracing.net