FWD Mounting Guide for BittyDesign A3-F



BittyDesign A3-F front wheel drive bodyshell part number = BD-FWD-190A3F

“Lightweight 0.7mm” can be used at ETS Season 19 rounds




We recommend for the IRIS FWD that this bodyshell is mounted slight forward on the car: 2-3mm *(see following page for body hole measurements).*

Wheel arches would then be cut slightly further back to the moulded cut lines.





Front body hole measurements

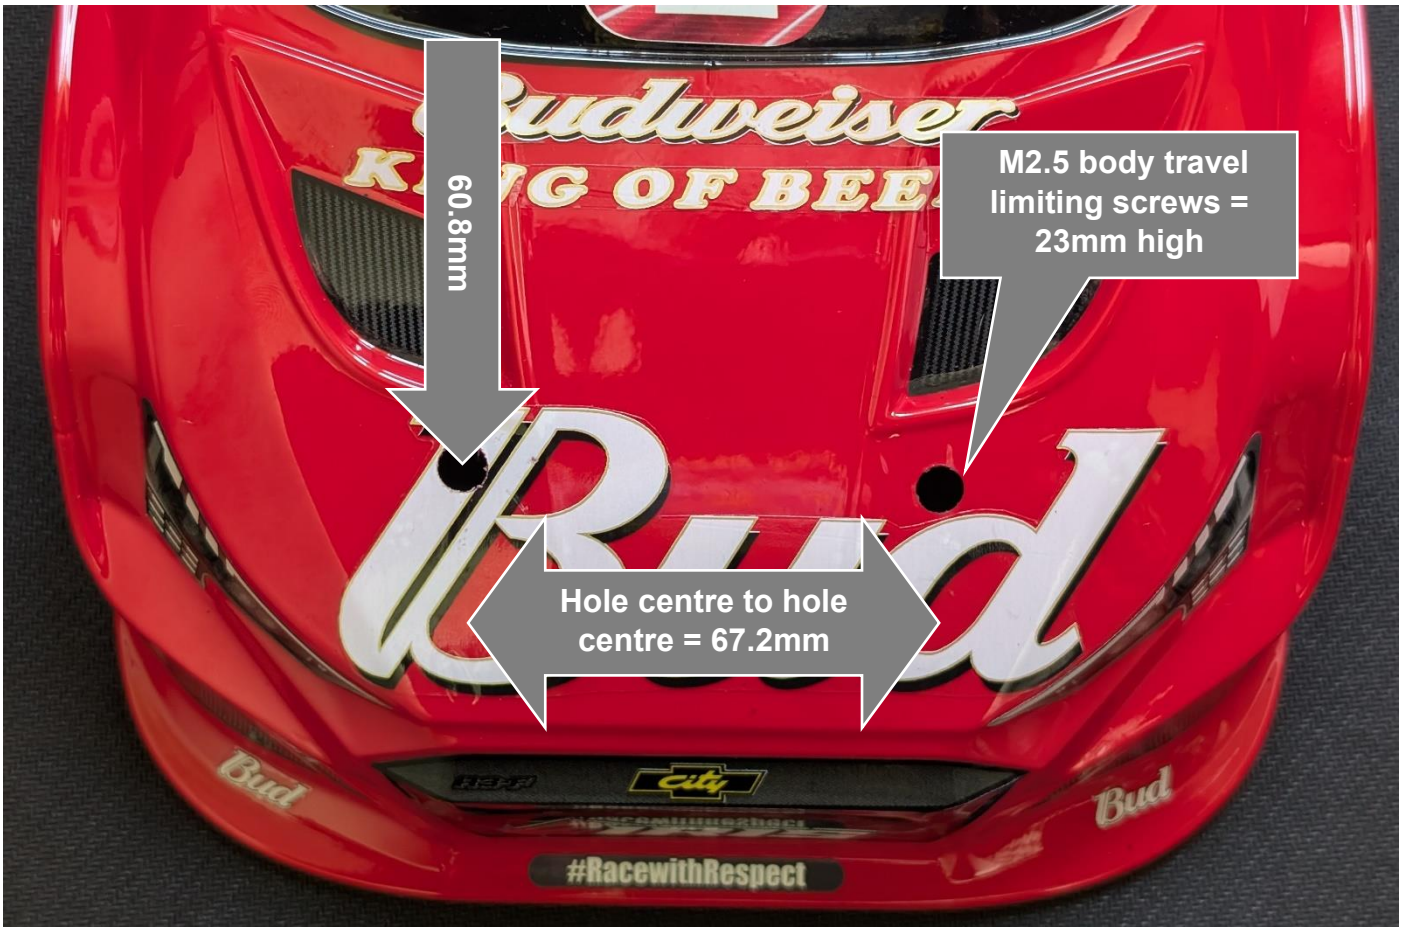

Rear body hole measurements






Cut initially to upper mould line and trim down from there to tune.

Use included wing mounts with holes cut to moulded dots in rear wing and wing support on the body.

Cut front of wing in between the two mould lines.



Added 1.0mm diameter carbon rod with UV glue to prevent rear body tucks.

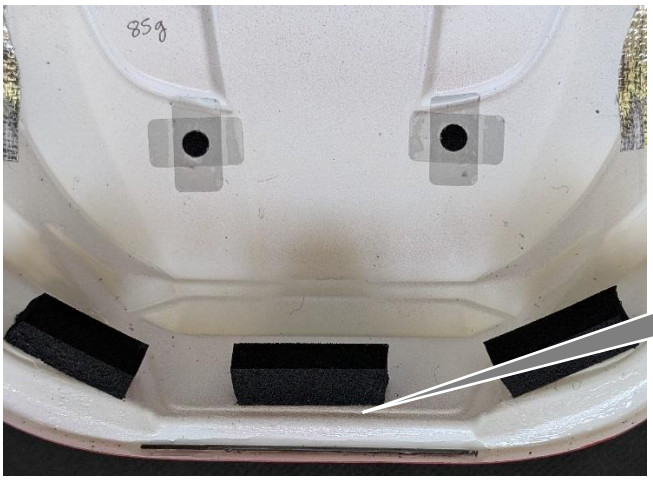

Added 1.0mm diameter carbon rod with UV glue to stiffen splitter and body foam to space out to front bumper.

Mark Burgess, IRIS UK Team Manager

Version 1.2 published April 2026